

We have pleasure in presenting the Spare Parts Catalogue for 'Discover DTS-i 135cc' Motorcycle. This catalogue has been specially designed to assist you in selecting the correct parts for procurement to maintain 100% availability.

The Bajaj spares are subjected to the stringent quality control standards to ensure longer life of the vehicle. It is therefore necessary that only the Genuine Bajaj Spares are used.

In a continual effort to improve Performance and Efficiency of the vehicles, Specifications, Diagrams, Illustrations and Part Numbers can change without notice. Consequently, the description in this Spare Parts Catalogue cannot therefore be final and binding on us.

The modifications / alterations which are carried out after the issue of this catalogue, will be conveyed to you through our Service Circulars. You are requested to make necessary corrections in the Parts Catalogue as per the circulars so as to keep your catalogue up-to-date. This will ensure the appropriate and speedy delivery of the Spare Parts as the order placed will bear the latest part numbers.

In case, if you need any technical assistance contact the concerned Regional Office or write to us on the following address :

Bajaj Auto Limited
Service Department
Akurdi, Pune 411 035 India
Phone : 020-27406557
Fax : 020-27407385
E-mail : service@bajajauto.co.in

All information contained in this manual is based on the latest product information at the time of publication. Bajaj Auto Limited accepts no liability for any inaccuracies or omissions in this publication, although every possible care has been taken to make it as complete and accurate as possible. All procedures and specifications subject to change without prior notice. The right is reserved to make such changes at any time without prior notice and without incurring an obligation to make such changes to product manufactured previously. Contact your authorized Bajaj Dealer for the latest information on product improvements incorporated after this manual was issued.

DOC. NO.: 71110430

REV. 00, DEC. 07

Instructions for using the Catalogue



1. How to Read the Catalogue : Open the catalogue and from the pictorial index locate the group in which the part you want to find is present. Turn over to the concerned page number (as given by pictorial index). Now find out the figure of the part you wish to order. Write down the part number against that particular figure number from the text.

In case, if you have the part number and you need the other details, the part index can be used. The part index (at the end of the catalogue) will give you the figure and page number of the part you wish to order.

2. How to Order Spare Parts : The part number and the description of the part required should be invariably mentioned in the order as per the catalogue text.

The latest part number as conveyed through our service circulars should only appear on the order. In case of ordering painted components, colour shade of the components should be mentioned.

The quantity shown against the part number is the quantity per vehicle for that group so that particular quantity should be multiplied by the number of sets required.

3. Part Number System: We have used 8 digit system for part numbers. The model or hardware item is indicated by first two digits or alphanumeric, the next two or four digits indicate main group and the last four or two digits indicate serial number in main group or serial number or subgroup of fastener respectively. Thus the part numbers will be indicated by 2-2-4 or 2-4-2 digit system. Understanding this system will enable you to identify the spare parts easily.

4. Abbreviations : The following abbreviations are used in this catalogue.

assly.	Assembly	V	Volts
N.I.	Not illustrated	W	Watts
C'case	Crankcase	accl.	Accelerator
Cyl	Cylinder	Comp.	Complete
o/s.	Over size	Fr	Front
Std.	Standard	L	Length
A/t.	Alternate	Rr	Rear
R.H.	Right hand	Hex.	Hexagonal
L.H.	Left hand	AR	As required

INDEX



No.	Description	Page No.
1	Cover Cylinder Head	1
2	Cylinder Head	2
3	Valve	3
4	Camshaft / Tensioner	4
5	Cylinder & Piston	5
6	Crankshaft	6
7	Transmission	7 & 8
8	Change Drum/ Shift Fork	9
9	Gear Change Mechanism	10
10	Engine Assly & Crankcase RH	11
11	Crankcase LH	12
12	Cover RH	13&14
13	Cover Magneto	15
14	Clutch	16&17
15	Kick Starter Mechanism	18
16	Carburettor	19
17	Air Cleaner Comp.	20
18	Silencer Assly	21
19	Seat Assly / Seat Lock	22
20	Oil Pump	23
21	Magneto/C.D.I./H.T.Coil	24&25
22	Starter Assly (For Electric Start)	26&27
23	Engine Mountings	28
24	Frame & Frame fitting	29
25	Swing Arm / Rear Shock Absorber	30-32
26	Rider Foot rest	33
27	Pillion Foot rest / Holder	34
28	Mudguard Front & Rear	35
29	Stand Assembly	36
30	Tyre/ Tube /Rim	37
31	Front Hub	38-40
32	Front Master Cylinder	41
33	Front disc brake	42
34	Rear Hub	43&44

No.	Description	Page No.
35	Rear Brake Pedal	45
36	Handle Bar	46&47
37	Front Fork	48&49
38	Painted Parts & Decals	50&51
39	Petrol Cock, Cap Tank & Gauge Fuel	52
40	Fittings - Petrol Tank, Side Cover & Cover seat	53
41	Meter Assly.	54&55
42	Control Cables	56
43	Chain Case	57&58
44	Head Lamp & fairing	59&60
45	Indicator Light Assly.	61
46	Tail Lamp Assly./Front No. Plate	62
47	Electrical Equipments	63&64
48	Tool Kit	65
49	Accessories / Grab Handle Kits List For Discover	66
	Amendmend Sheet (Parts Added)	67
	Amendmend Sheet (Parts Deleted)	68
	Part index	69
		70

Pictorial Index

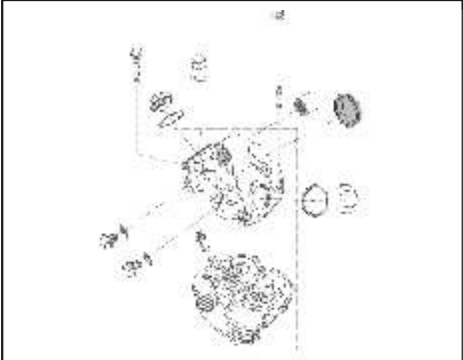
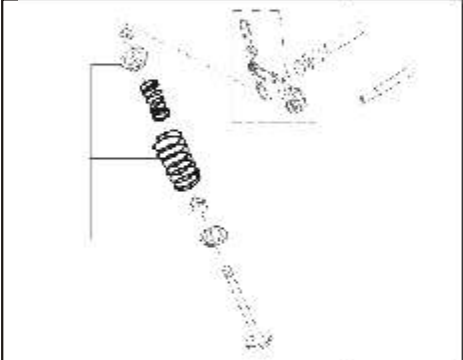
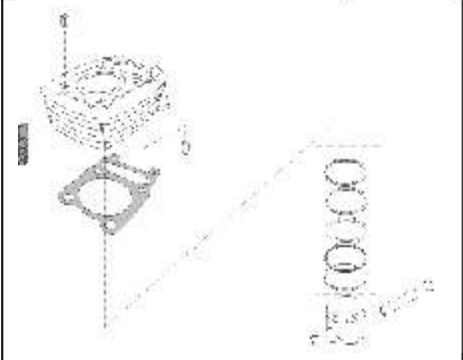
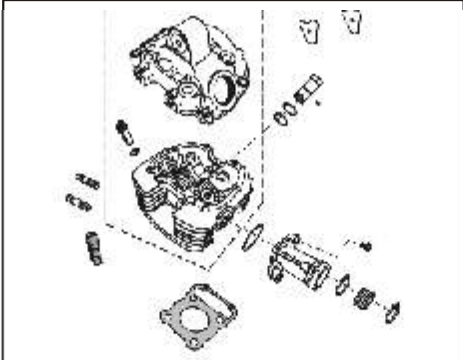
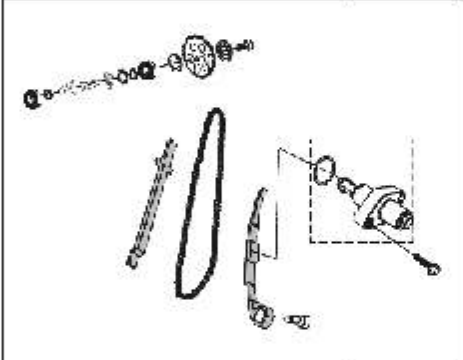
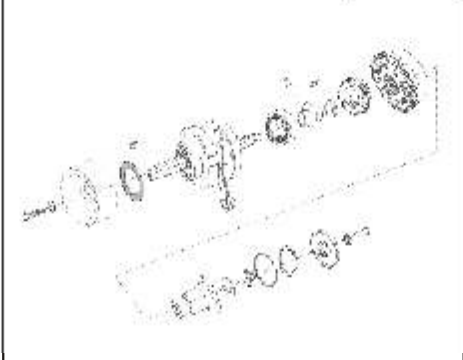
PLATE NO. : 1 COVER CYLINDER HEAD	PAGE NO.: 1
	
PLATE NO. : 3 VALVE	PAGE NO.: 3
	
PLATE NO. : 6 CYLINDER & PISTON	PAGE NO.: 6
	

PLATE NO. : 2 CYLINDER HEAD	PAGE NO.: 2
	
PLATE NO. : 4 CAM SHAFT / TENSIONER	PAGE NO.: 4
	
PLATE NO. : 6 CRANKSHAFT	PAGE NO.: 6
	

Pictorial Index

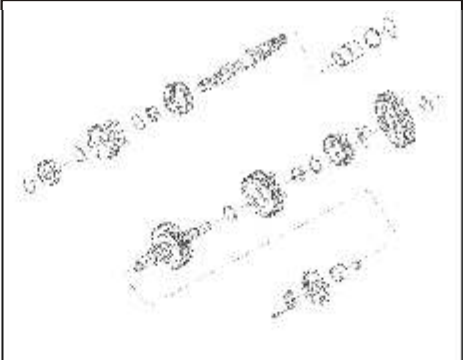
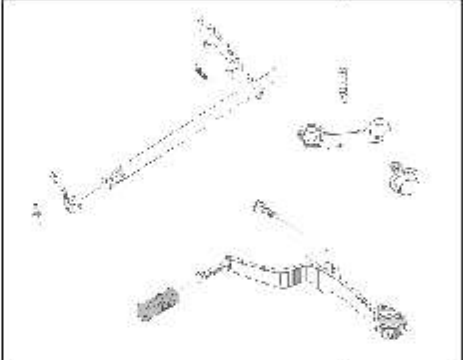
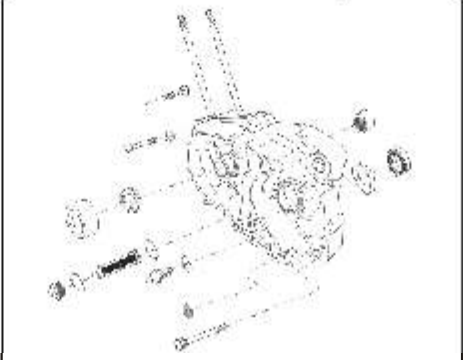
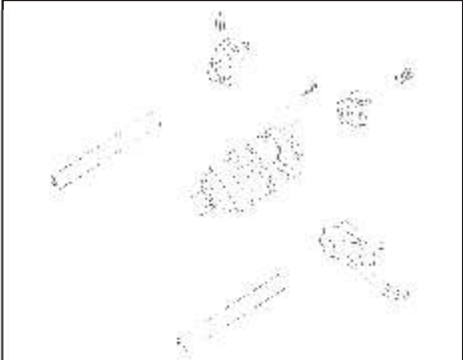
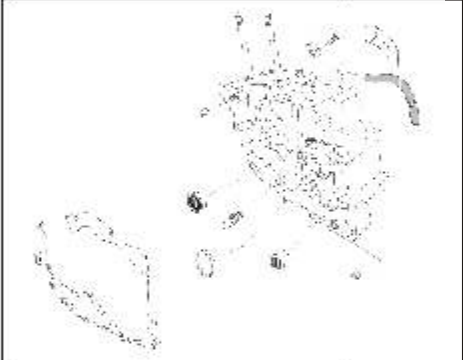
PLATE NO. : 7 TRANSMISSION	PAGE NO.: 7 & 8
	
PLATE NO. : 9 GEAR CHANGE MECHANISM	PAGE NO.: 10
	
PLATE NO. : 11 CRANKCASE LH	PAGE NO.: 12
	

PLATE NO. : 8 CHANGE DRUM / SHIFT FORK	PAGE NO.: 9
	
PLATE NO. : 10 ENGINE ASSLY. & CRANKCASE RH	PAGE NO.: 11
	
PLATE NO. : 12 COVER RH	PAGE NO.: 13 & 14
	

Pictorial Index

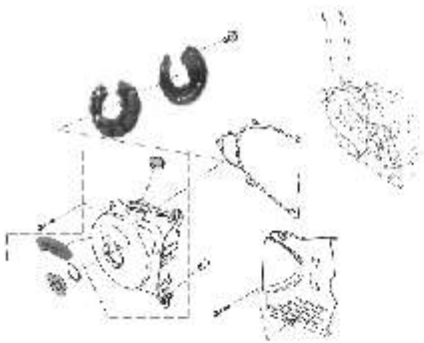
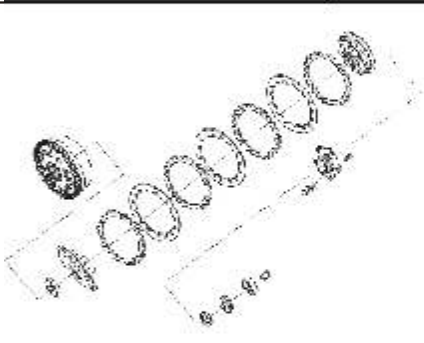
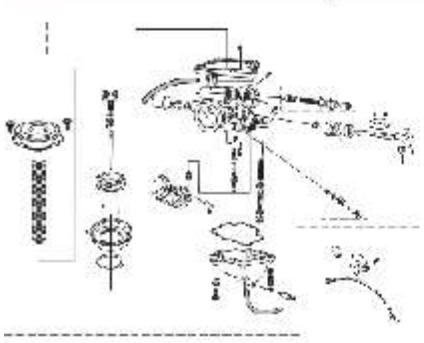
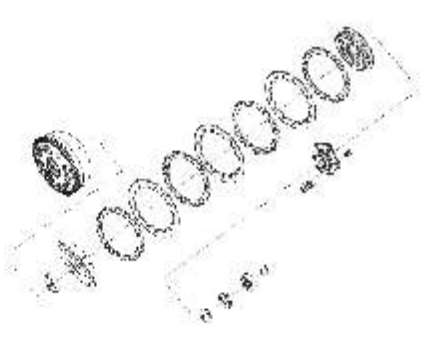
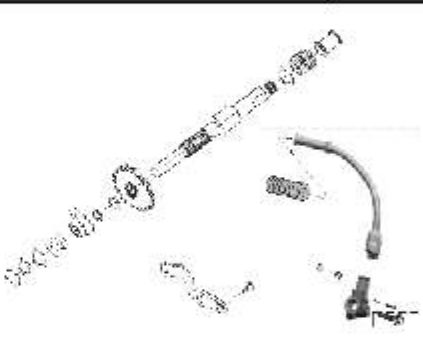
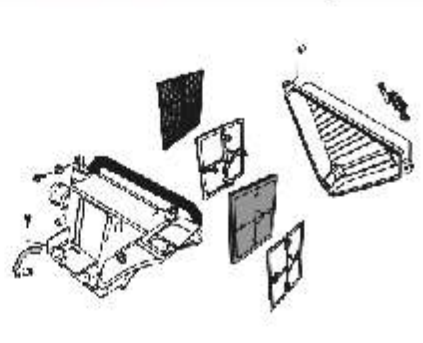
PLATE NO. : 13 COVER MAGNETO	PAGE NO.: 15
	
PLATE NO. : 14A CLUTCH	PAGE NO.: 17
	
PLATE NO. : 16 CARBURETTOR	PAGE NO.: 19
	

PLATE NO. : 14 CLUTCH	PAGE NO.: 16
	
PLATE NO. : 16 KICK STARTER MECHANISM	PAGE NO.: 18
	
PLATE NO. : 17 AIR CLEANER COMP.	PAGE NO.: 20
	

Pictorial Index

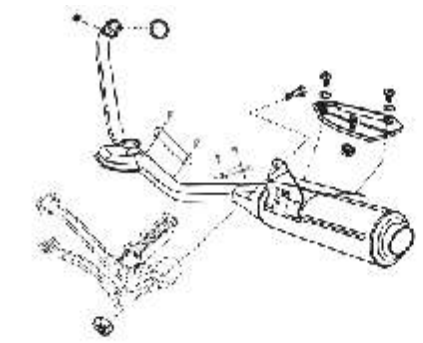
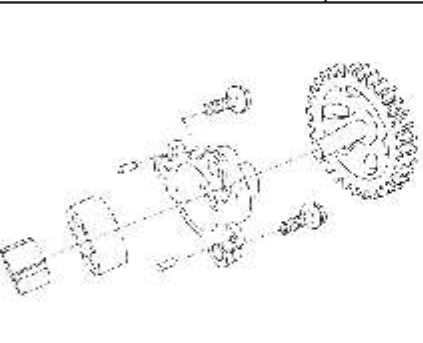
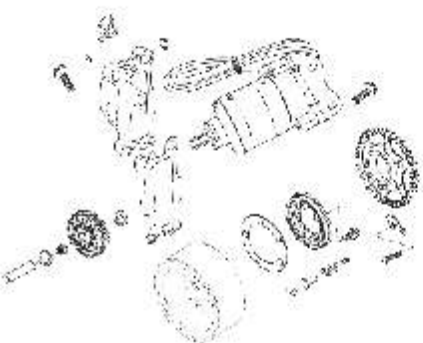
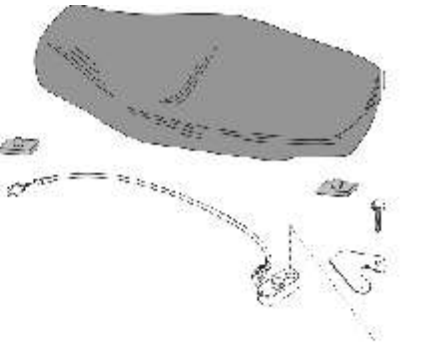
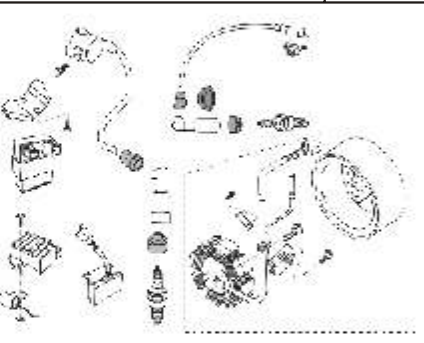
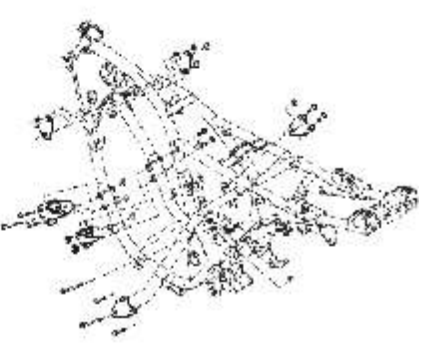
PLATE NO. : 18 SILENCER ASSEMBLY	PAGE NO.: 21
	
PLATE NO. : 20 OIL PUMP	PAGE NO.: 23
	
PLATE NO. : 22 STARTER ASSLY.	PAGE NO.: 26 & 27
	

PLATE NO. : 19 SEAT ASSEMBLY / SEAT LOCK	PAGE NO.: 22
	
PLATE NO. : 21 MAGNETO /C.D.I./H.T. COIL	PAGE NO.: 24 & 25
	
PLATE NO. : 23 ENGINE MOUNTINGS	PAGE NO.: 28
	

Pictorial Index

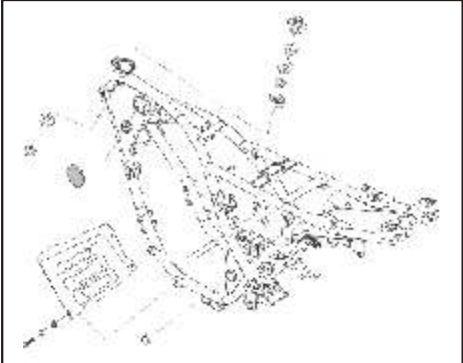
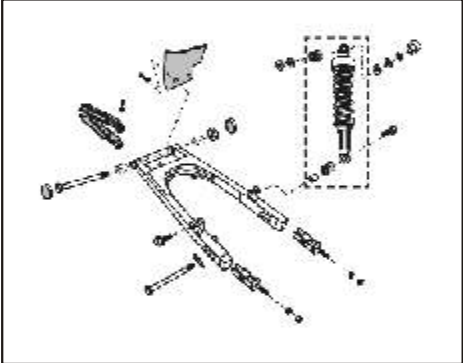
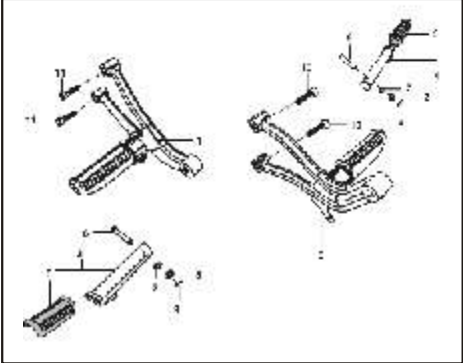
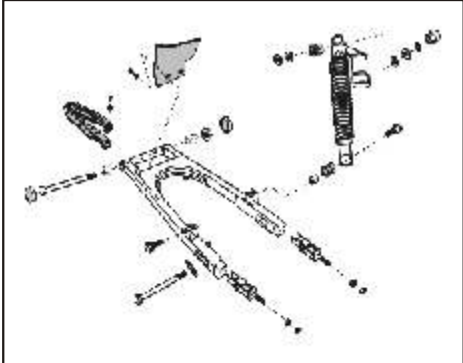
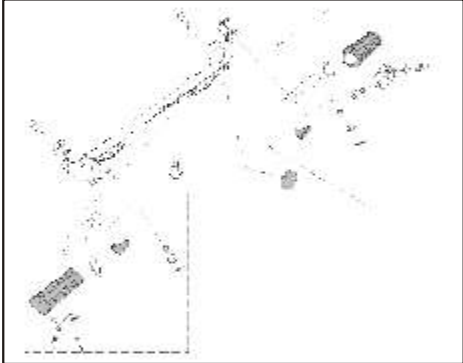
PLATE NO. : 24 FRAME & FRAME FITTING	PAGE NO.: 29
	
PLATE NO. : 25A SWING ARM / REAR SHOCK ABSORBER	PAGE NO.: 31 & 32
	
PLATE NO. : 27 PILLION FOOT REST / HOLDER	PAGE NO.: 34
	

PLATE NO. : 25 SWING ARM / REAR SHOCK ABSORBER	PAGE NO.: 30
	
PLATE NO. : 26 RIDER FOOT REST	PAGE NO.: 33
	
PLATE NO. : 28 MUDGUARD FRONT & REAR	PAGE NO.: 35
	

Pictorial Index

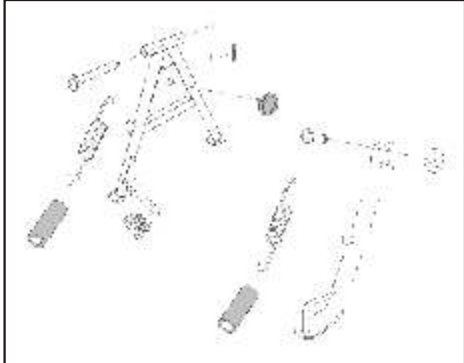
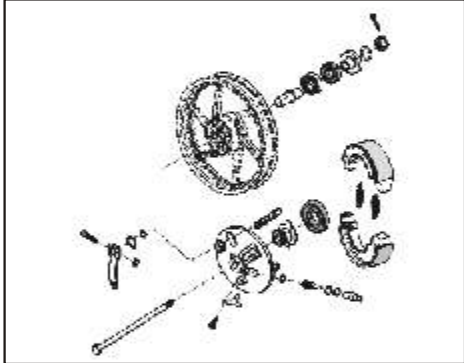
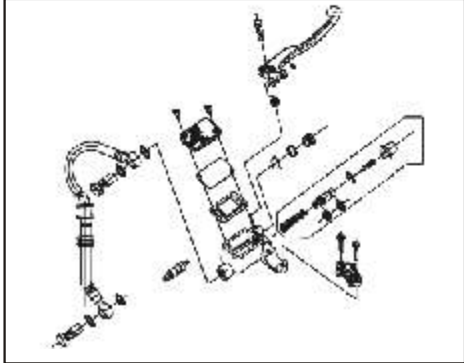
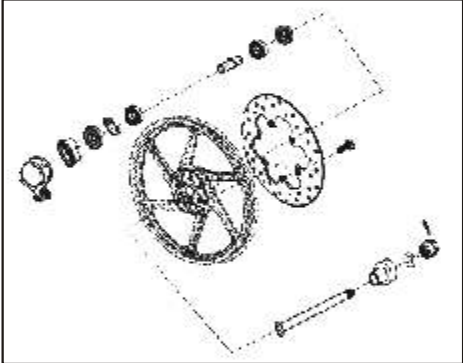
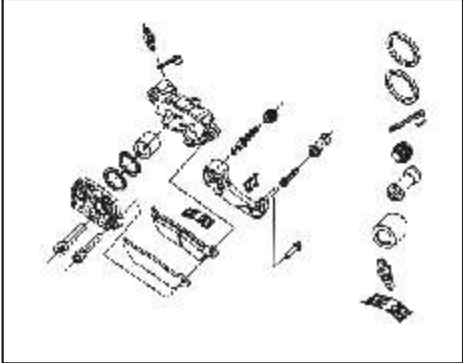
PLATE NO. : 29 STAND ASSEMBLY	PAGE NO.: 36
	
PLATE NO. : 31 FRONT HUB(FOR DRUM BRAKE SYSTEM)	PAGE NO.: 38 & 39
	
PLATE NO. : 32 FRONT MASTER CYLINDER	PAGE NO.: 41
	

PLATE NO. : 30 TYRE / TUBE / RIM	PAGE NO.: 37
	
PLATE NO. : 31A FRONT HUB (FOR DISC BRAKE SYSTEM)	PAGE NO.: 40
	
PLATE NO. : 33 FRONT DISC BRAKE	PAGE NO.: 42
	

Pictorial Index

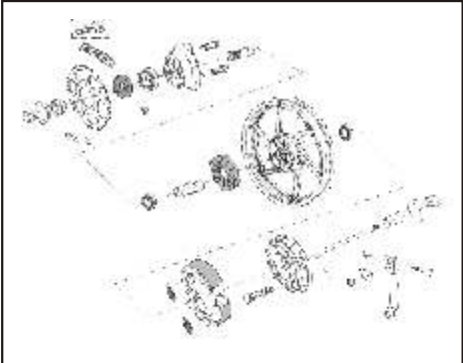
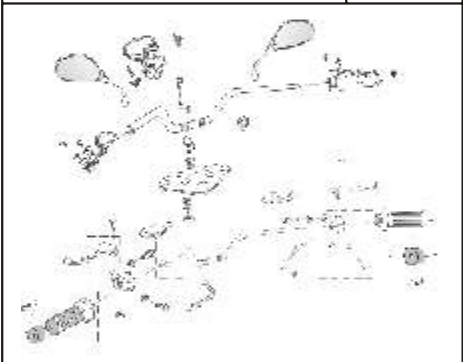
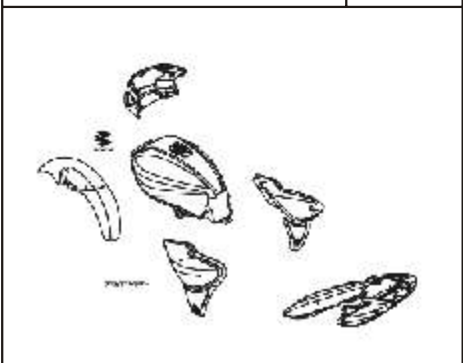
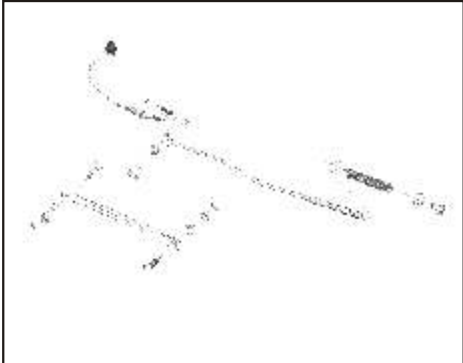
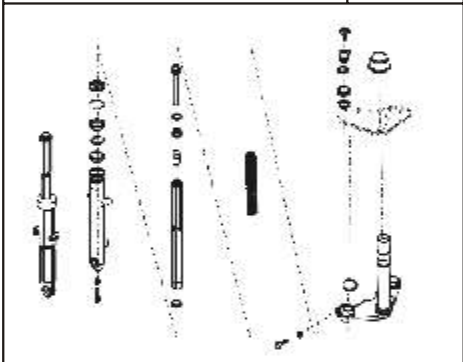
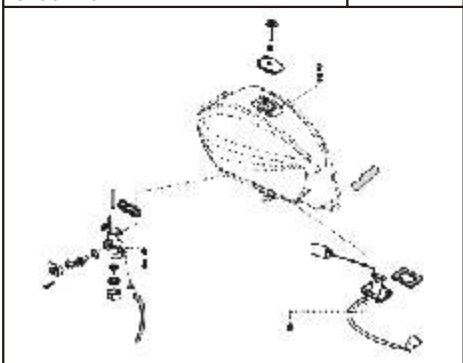
PLATE NO. : 34 REAR HUB	PAGE NO.: 43 & 44
	
PLATE NO. : 36 HANDLE BAR	PAGE NO.: 46 & 47
	
PLATE NO. : 38 PAINTED PARTS AND DECALS	PAGE NO.: 50 & 51
	

PLATE NO. : 35 REAR BRAKE PEDAL	PAGE NO.: 45
	
PLATE NO. : 37 FRONT FORK	PAGE NO.: 48 & 49
	
PLATE NO. : 39 PETROL COCK, CAP TANK & GAUGE FUEL	PAGE NO.: 52
	

Pictorial Index

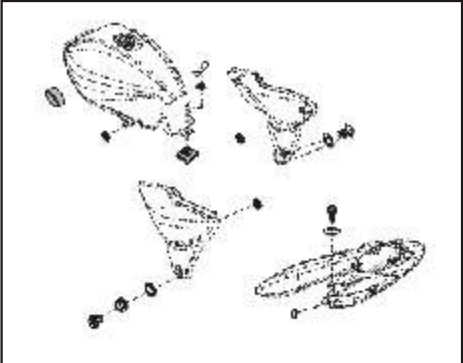
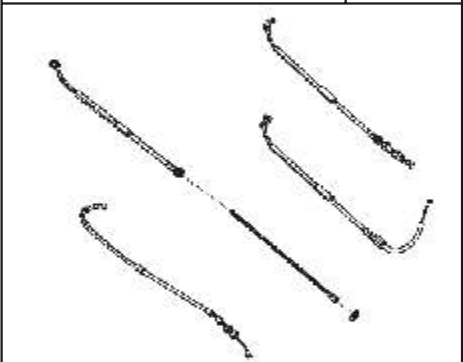
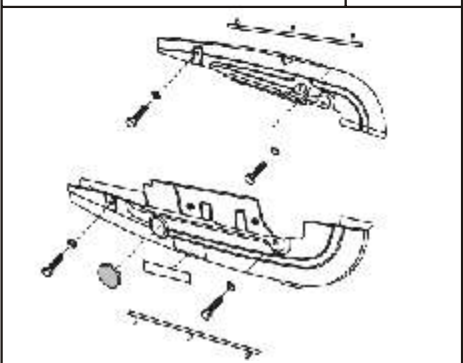
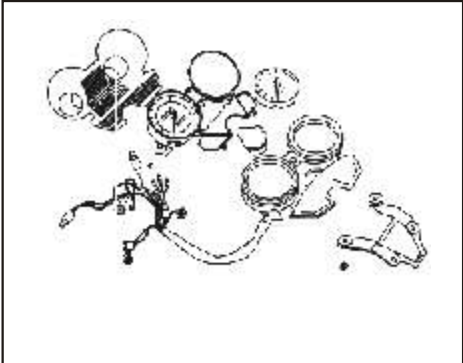
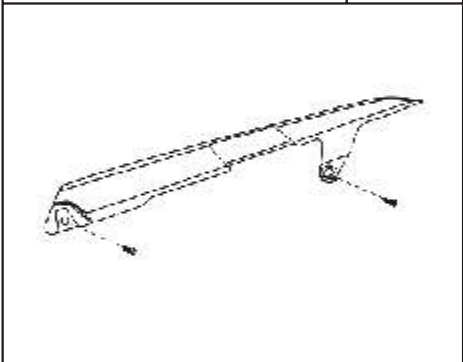
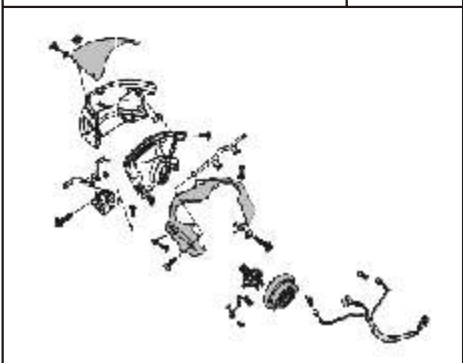
PLATE NO. : 40 FITTINGS-PETROL TANK, SIDE COVER & COVER SEAT	PAGE NO.: 53
	
PLATE NO. : 42 CONTROL CABLES	PAGE NO.: 56
	
PLATE NO. : 43A CHAIN CASE	PAGE NO.: 58
	

PLATE NO. : 41 METER ASSEMBLY	PAGE NO.: 54 & 55
	
PLATE NO. : 43 CHAIN CASE	PAGE NO.: 57
	
PLATE NO. : 44 HEAD LAMP & FAIRING	PAGE NO.: 59 & 60
	

Pictorial Index




PLATE NO. : 45 INDICATOR LIGHT ASSEMBLY	PAGE NO.: 61
	
PLATE NO. : 47 ELECTRICAL EQUIPMENTS	PAGE NO.: 63 & 64
	
PLATE NO. : 49 ACCESSORIES / GRAB HANDLE	PAGE NO.: 66
	





PLATE NO. : 46 TAIL LAMP ASSLY. / FRONT NO.PLATE	PAGE NO.: 62
	
PLATE NO. : 48 TOOL KIT	PAGE NO.: 65
	


Plate No. 1 : COVER CYLINDER HEAD




No.	Part No.	Description	1A	1B	Remarks
			Drum Br.	Disc Br.	
1	JN 5110 06	Head Cylinder with Cover	1	1	Ref. Page No. 67
2	DJ 1012 17	Cover Tappet	2	2	
3	36 DS10 01	'O' Ring Kit for Cover Cyl. Head	1	1	
4	DS 1011 93	Bush Cylinder Head Cover	1	1	
5	DS 1010 96	Camshaft Cap	1	1	
6	39 2647 15	Dommed Cap Nut	4	4	
7	DS 1010 84	Copper Washer	4	4	
8	39 2532 04	Bolt Flange Small	2	2	
9	39 1075 04	Bolt Flange Small	4	4	
10	DH 1012 72	Plug	1	1	
11	DG 1014 98	Gasket	2	2	

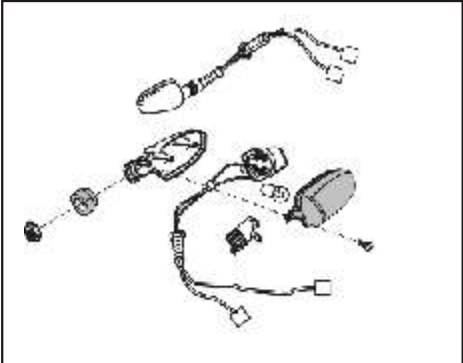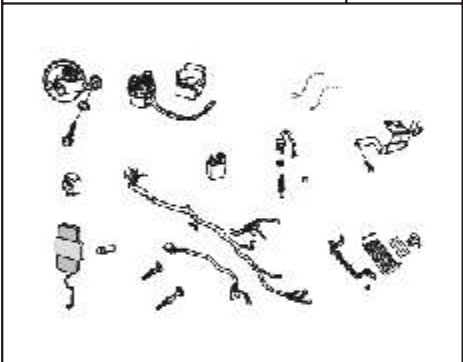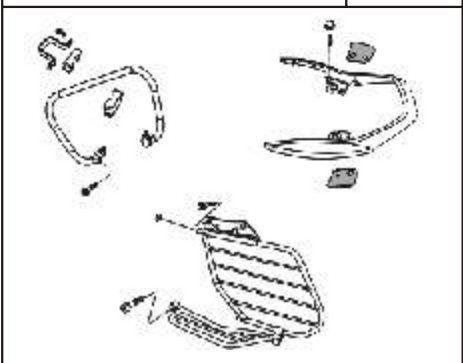

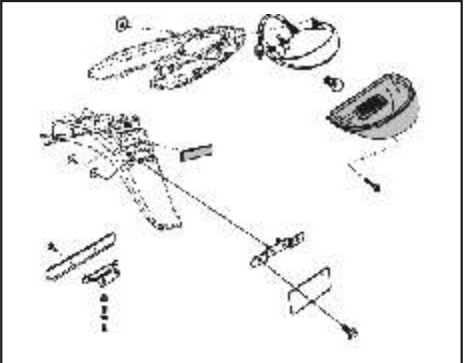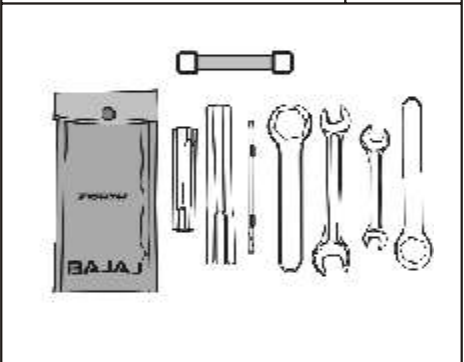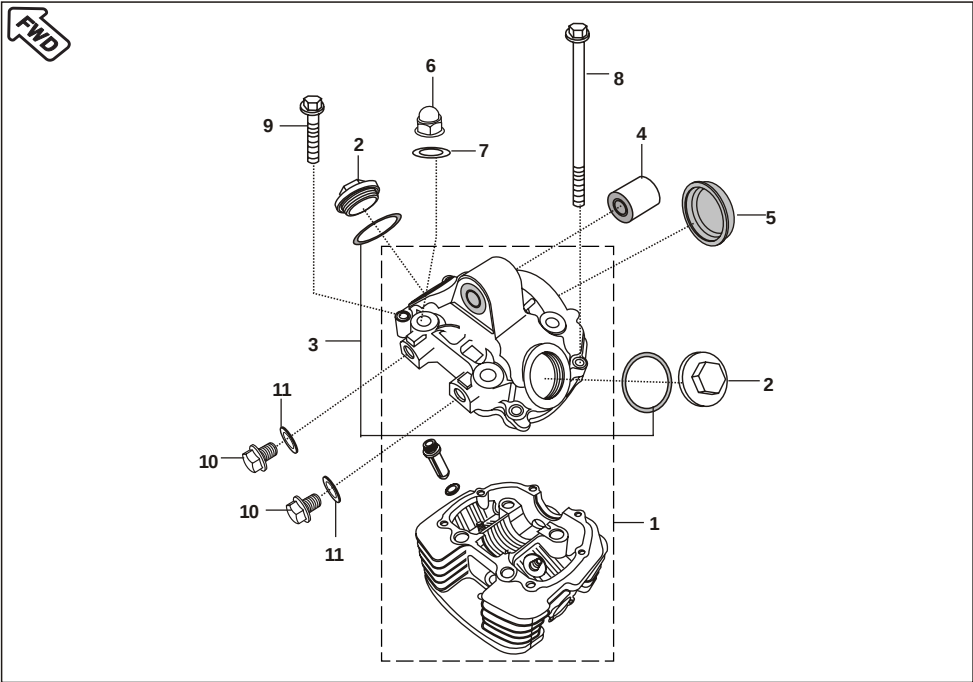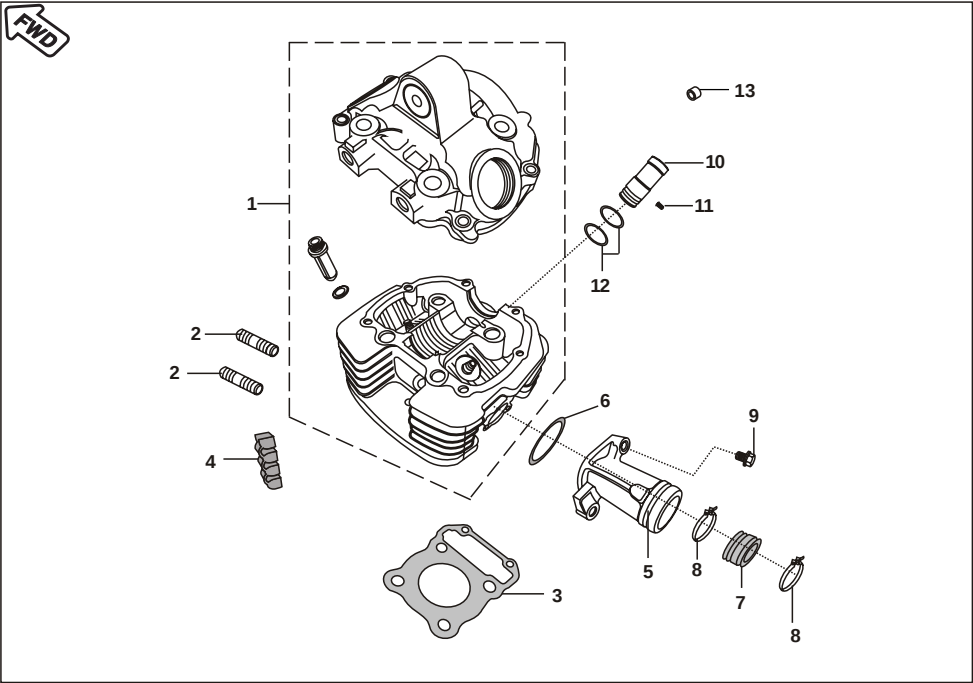
No.	Part No.	Description	2A	2B	Remarks
			Drum Br.	Disc Br.	
1	JN 5110 06	Head Cylinder with Cover	1	1	
2	39 1660 05	Stud (Exhaust)	2	2	
3	DH 1016 80	Gasket Cylinder Head	1	1	
4	DH 1015 08	Damper Cylinder Head	5	5	
5	JN 5814 00	Intake Pipe	1	1	
6	39 1283 21	'O' Ring (Intake Pipe)	1	1	
7	DS 1210 12	Carburetor Insulator	1	1	
8	DH 1210 38	Clamp for Insulator	2	2	
9	39 1674 04	Hex. Bolt / Flange	2	2	
10	DH 1110 12	Sleeve Spark Plug	1	1	
11	39 2608 01	Grub Screw	1	1	
12	36 DS10 01	'O' Ring Kit for Cover Cyl. Head	1	1	Ref. Page No. 67
13	39 2181 06	Hollow Dowel Pin	2	2	

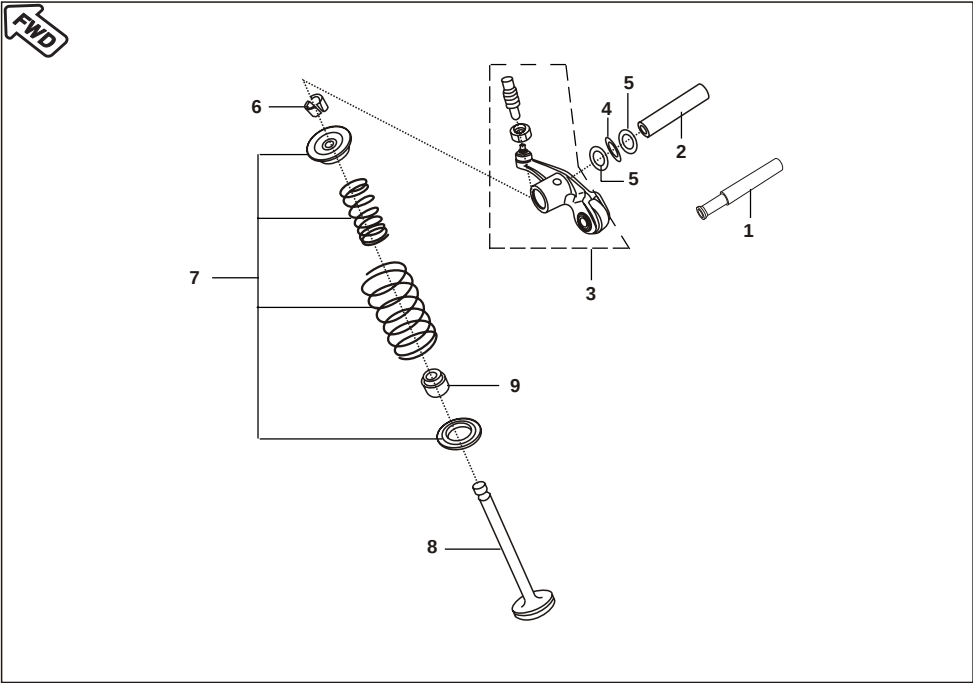


No.	Part No.	Description	3A	3B	Remarks
			Drum Br.	Disc Br.	
1	DS 1013 35	Rocker Arm Shaft - Intake	1	1	
2	DS 1013 36	Rocker Arm Shaft - Exhaust	1	1	
3	DS 1013 33	Rocker Arm with Roller	2	2	
4	DS 1013 66	Wave washer	2	2	
5	59 1100 02	Plain washer	4	4	
6	DG 1010 29	Cotter valve	4	4	
7	36 DS10 03	Valve Repair Kit	1	1	Ref. Page No. 67
8	36 DS10 02	Valve Kit	1	1	Ref. Page No. 67
9	39 2017 19	Seal Oil	2	2	

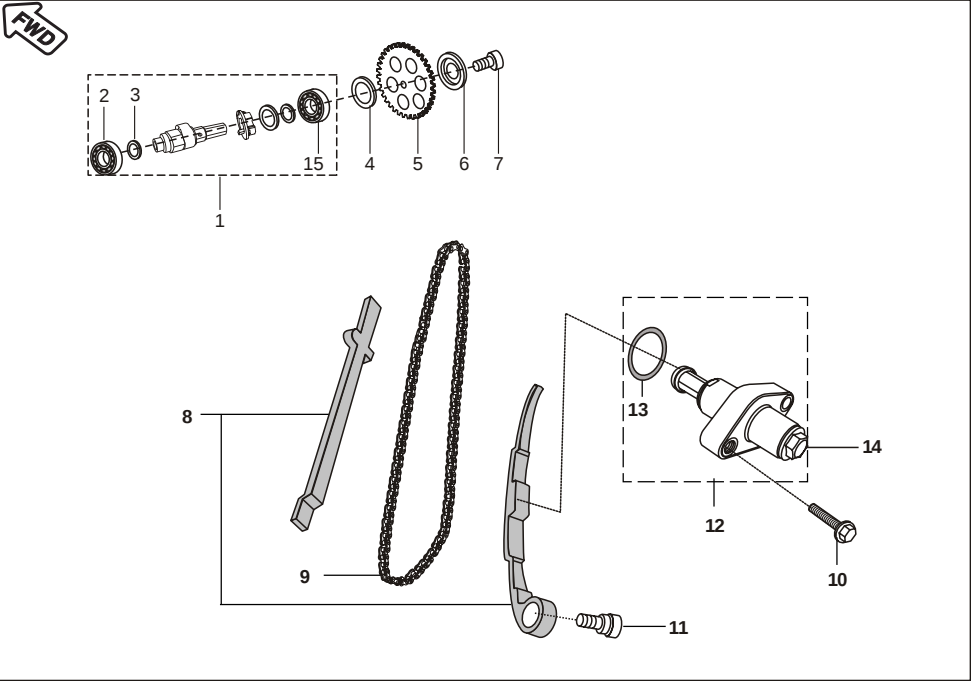


No.	Part No.	Description	4A	4B	Remarks
			Drum Br.	Disc Br.	
1	JN 5112 02	Camshaft Assly	1	1	Ref. Page No. 67
2	39 1880 20	Bearing cam LH side	1	1	
3	DH 1014 20	Washer behind small bearing	1	1	
4	DH 1014 12	Collar cam Sprocket	1	1	
5	DS 1012 76	Sprocket	1	1	
6	DH 1010 48	Special camshaft washer	1	1	
7	DH 1013 87	Hex. Soc. Head cap Bolt	1	1	
8	36 DS10 04	Guide chain Kit	1	1	
9	DS 1010 36	Cam Chain (94 Links)	1	1	
10	39 1674 04	Hex Bolt / Flange	2	2	
11	DH 1010 11	Cam chain Tensioner pivot Bolt	1	1	
12	DJ 1012 16	Tensioner Assly	1	1	
13	39 1014 21	Ring'O'	1	1	
14	DD 1010 62	Bolt	1	1	
15	39 2542 20	Bearing Ball	1	1	

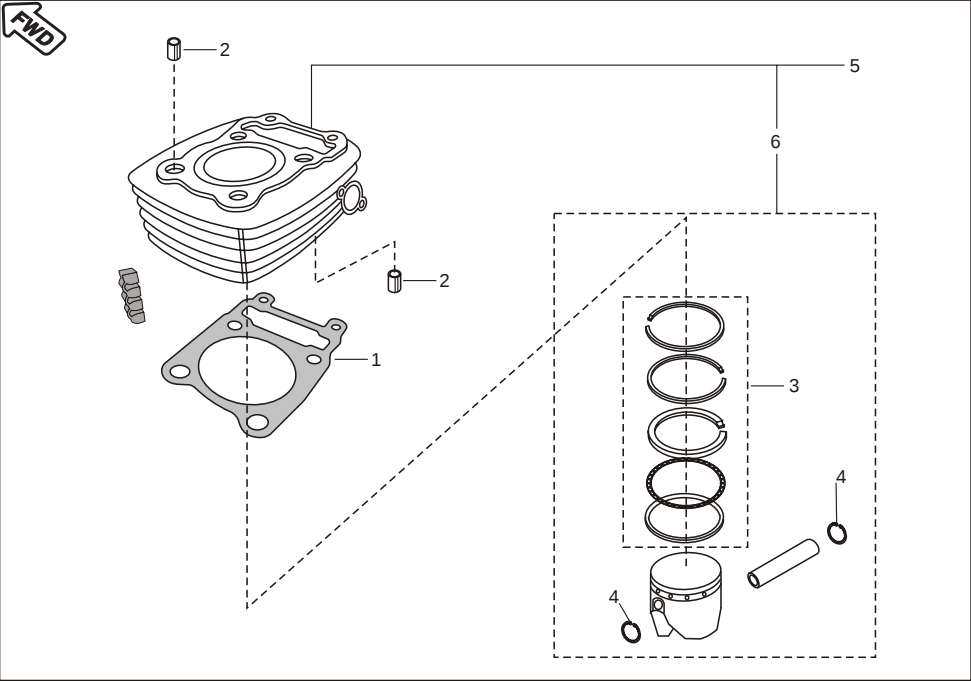


No.	Part No.	Description	5A	5B	Remarks
			Drum Br.	Disc Br.	
1	DH 1010 16	Gasket Cylinder	1	1	Ref. Page No. 67
2	39 2181 06	Pin dowel	4	4	
3	36 DJ40 08	Ring Set Piston	1	1	
4	DH 101671	Ring Snap	2	2	
5	JN 5210 01	Cylinder Block / Piston Assly	1	1	
6	JF 5212 00	Piston Assembly	1	1	

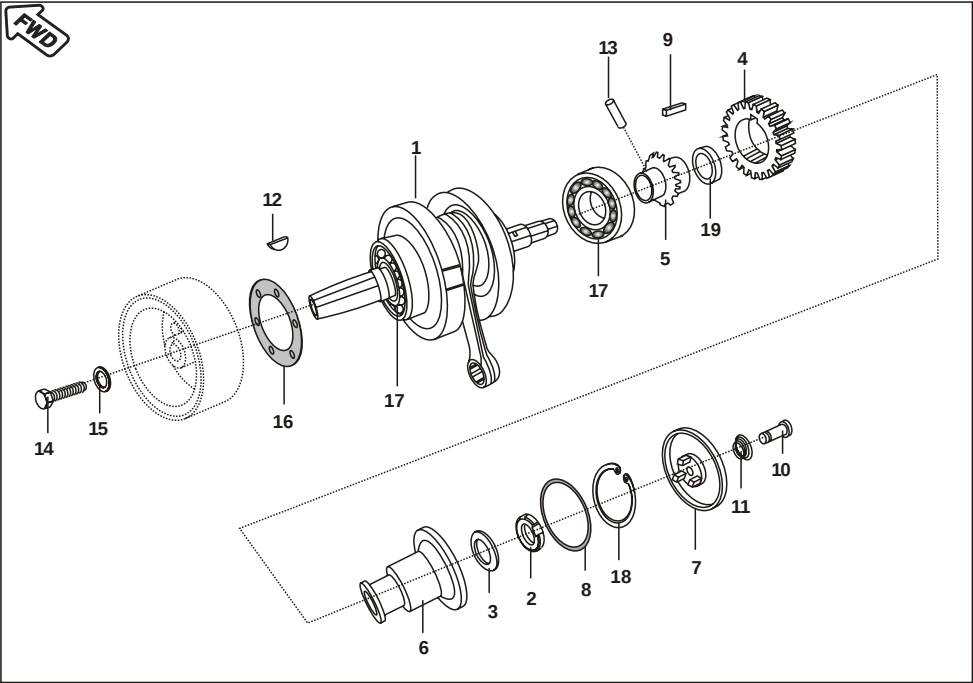


No.	Part No.	Description	6A	6B	Remarks
			Drum Br.	Disc Br.	
1	JN 5310 00	Crankshaft assly. Comp.	1	1	
2	DH 101195	Nut	1	1	
3	39 2200 11	Washer	1	1	
4	DS 1013 63	Gear primary driver	1	1	
5	DS 1012 75	Sprocket cam drive	1	1	
6	DS 1010 77	Body centrifugal oil filter	1	1	
7	DS 1012 60	Cover centrifugal oil filter	1	1	
8	39 2713 21	'O' Ring	1	1	
9	DS 1011 54	Key	1	1	
10	DH 1010 66	Joint Oil Delivery - B	1	1	
11	DS 1011 12	Spring Oil Delivery- B	1	1	
12	31 1011 73	Key woodruff	1	1	
13	39 2203 07	Parallel pin	1	1	
14	DS 1013 55	Bolt	1	1	
15	39 2165 11	Plain washer	1	1	
16	28 1011 10	Damper	1	1	
17	39 2561 20	Ball Bearing	2	2	
18	39 2712 17	Circlip	1	1	
19	DS 1011 52	Spacer	1	1	

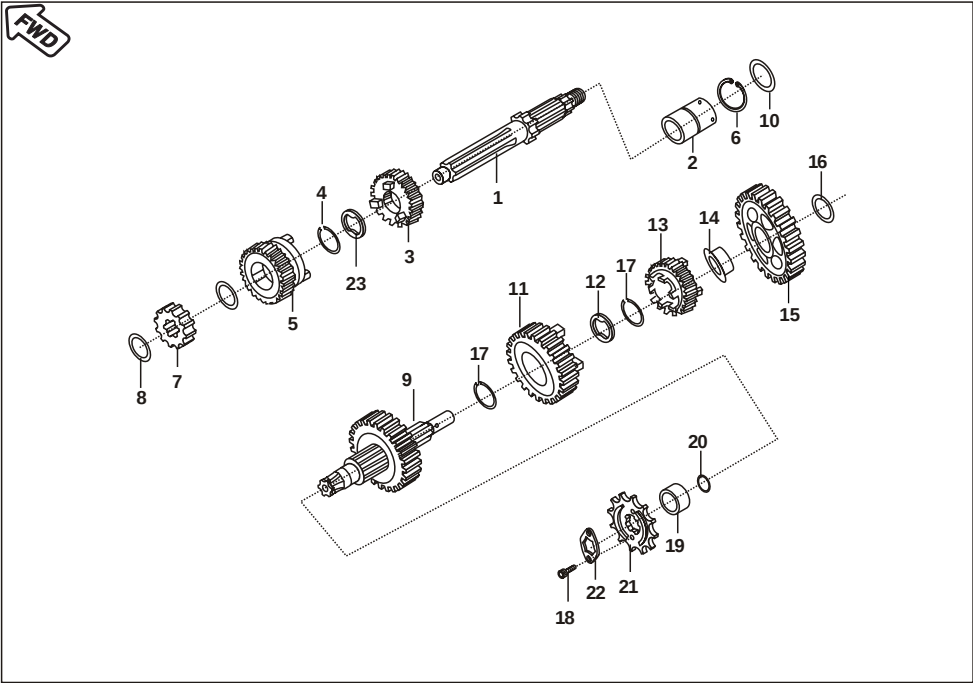


No.	Part No.	Description	7A	7B	Remarks
			Drum Br.	Disc Br.	
1	DS 1012 91	Shaft Input Transmission	1	1	
2	DS 1012 05	Collar	1	1	
3	DS 1010 49	Gear 4th Drive	1	1	
4	39 0987 17	Ring Snap	1	1	
5	DS 1010 48	Gear 3rd Drive	1	1	
6	39 0337 17	External Circlip	1	1	
7	DS 1010 47	Gear 2nd drive	1	1	
8	DS 1011 29	Thrust washer	1	1	
9	DS 1099 07	Shaft output Transmission	1	1	With Plug & Collar
10	DS 1012 04	Washer Plain	1	1	
11	DS 1010 54	Gear 3rd Driven	1	1	
12	DH 1010 79	Washer Spline	1	1	
13	DS 1010 55	Gear 4th Driven	1	1	
14	DH 1011 11	Bush 1st driven	1	1	
15	DS 1010 52	Gear 1st driven	1	1	

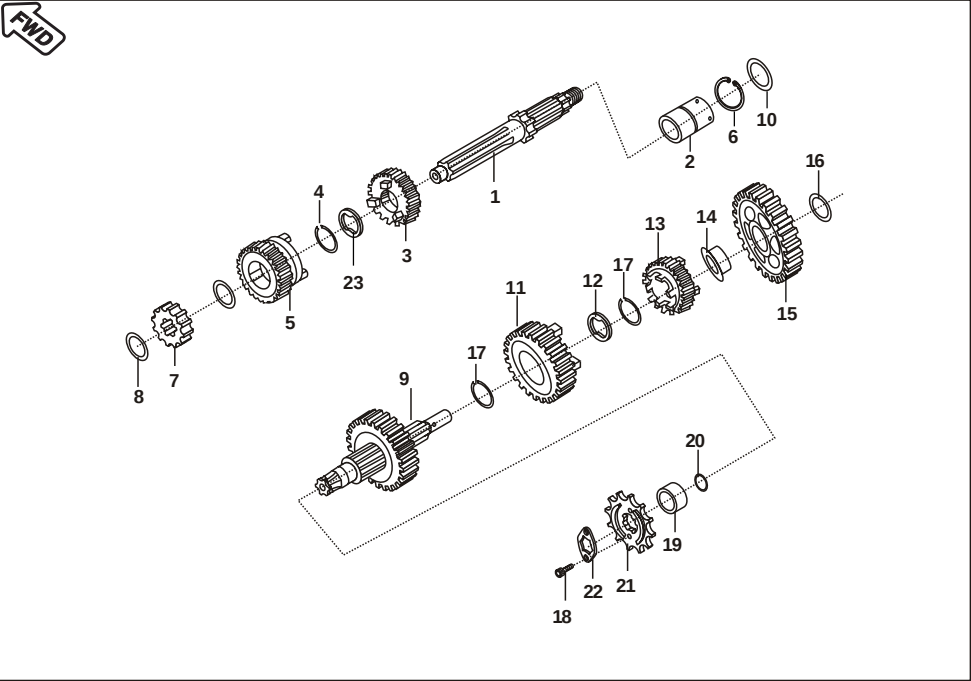


No.	Part No.	Description	7A	7B	Remarks
			Drum Br.	Disc Br.	
16	DS 1012 03	Washer Plain	1	1	For DS 1099 07
17	DH 1012 35	Circlip	2	2	
	DH 1012 35	Circlip	1	1	
18	DS 1013 55	Hex. Socket Bolt	2	2	
19	DH 1013 34	Collar Sprocket	1	1	
20	30 1010 61	'O' Ring Sprocket Collar	1	1	
21	DS 1011 97	Sprocket Drive	1	1	
22	DS 1011 98	Plate Drive Sproket	1	1	
23	DS 1011 07	Spline washer	1	1	

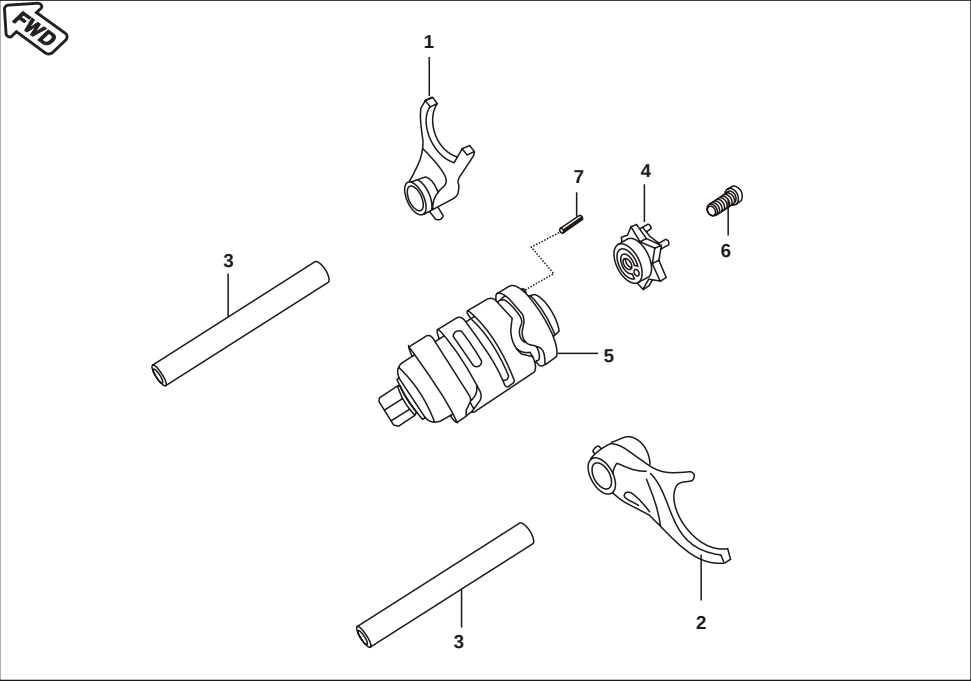


No.	Part No.	Description	8A	8B	Remarks
			Drum Br.	Disc Br.	
1	DS 1010 63	Fork Gear Shift Input	1	1	
2	DS 1010 64	Fork Gear Shift output	1	1	
3	DS 1010 62	Shaft Gear Shift Fork	2	2	
4	DS 1010 79	Guide Gear Shifter	1	1	
5	DS 1011 35	Drum Assly. Gear Shift	1	1	
6	39 2639 04	Bolt Socket	1	1	
7	DS 1011 32	Parallel pin	1	1	

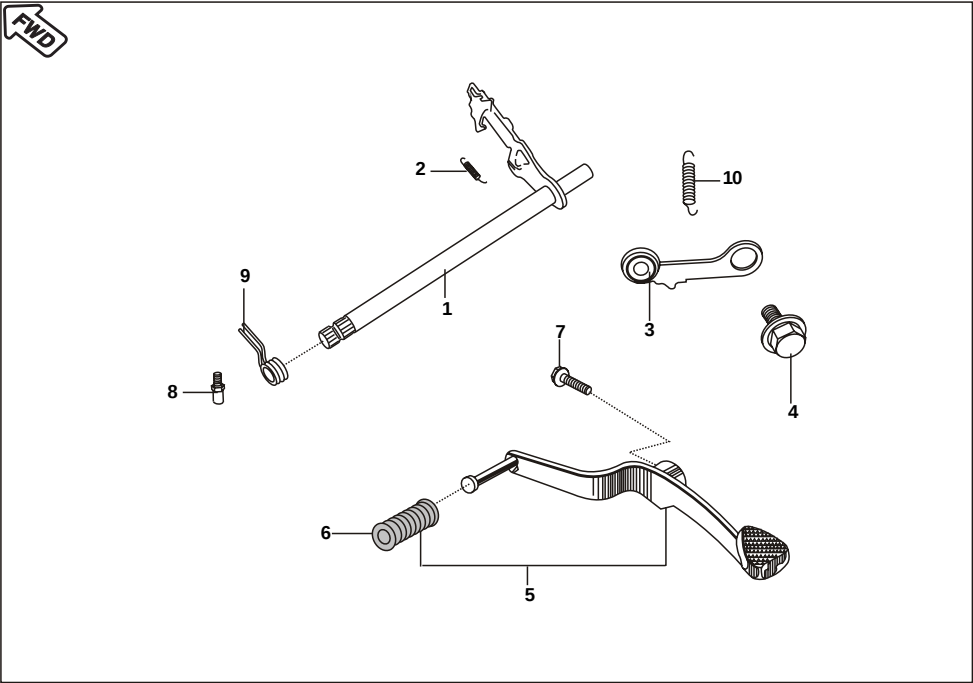


No.	Part No.	Description	9A	9B	Remarks
			Drum Br.	Disc Br.	
1	DS 1011 34	Lever comp. Gear Shifter	1	1	
2	DS 1011 18	Spring slider arm reset	1	1	
3	DS 1011 73	Stopper Comp.gear shifter drum	1	1	
4	DS 1011 04	Bolt shift change	1	1	
5	DS 1012 51	Lever comp. change with Damper	1	1	
6	31 1011 08	Damper	1	1	
7	39 1673 04	Flanged Bolt	1	1	
8	DH 1012 25	Bolt Gear Shift drum Stopper	1	1	
9	DS 1011 19	Spring gear shifter return	1	1	
10	DS 1011 03	Spring gear shifter drum stopper	1	1	

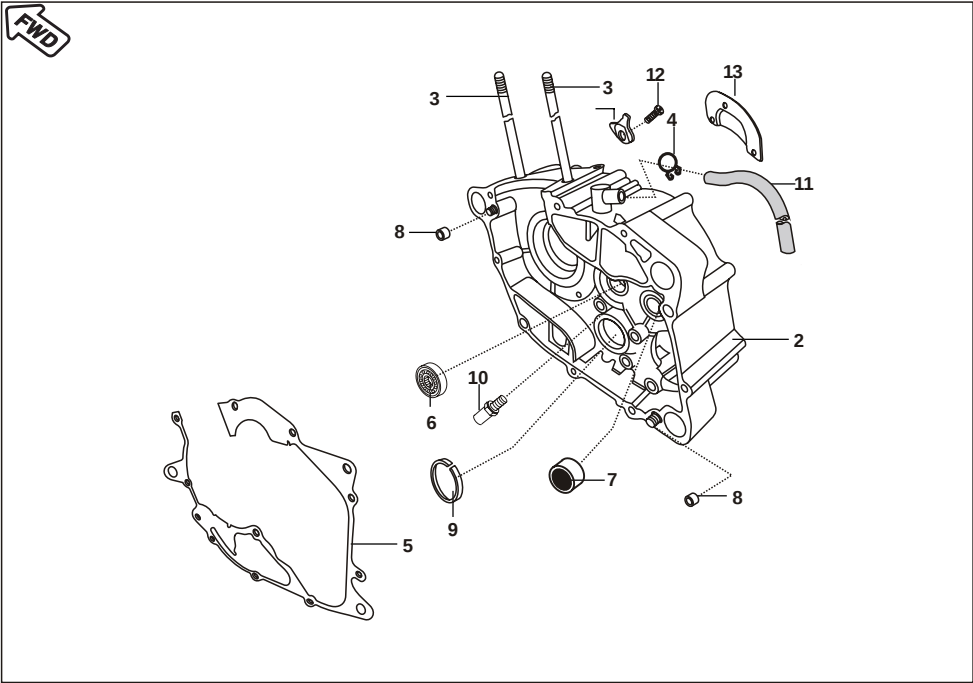


No.	Part No.	Description	10A	10B	Remarks
			Drum Br.	Disc Br.	
1	JN 5010 00	Engine Assly.	1	1	
1	JN 5010 01	Engine Assly.	1	-	For KS Drum Brake
2	JN 5410 02	Crankcase RH	1	1	
3	39 2531 05	Stud	2	2	
4	DG 1210 02	Spring Clip	1	1	
5	DS 1011 67	Gasket Crankcase	1	1	
6	39 2583 20	Bearing Ball (For input shaft)	1	1	
7	39 2662 20	Needle Brg. (For Output shaft)	1	1	
8	39 2181 06	Dowel Pin	2	2	
9	DU 1010 85	Bushing (For Drum Change)	1	1	
10	DH 1012 25	Bolt	1	1	For Holding Spring
11	DS 1012 14	Rubber tube	1	1	
12	39 0746 01	Screw	1	1	
13	DS 1010 08	Breather Plate	1	1	

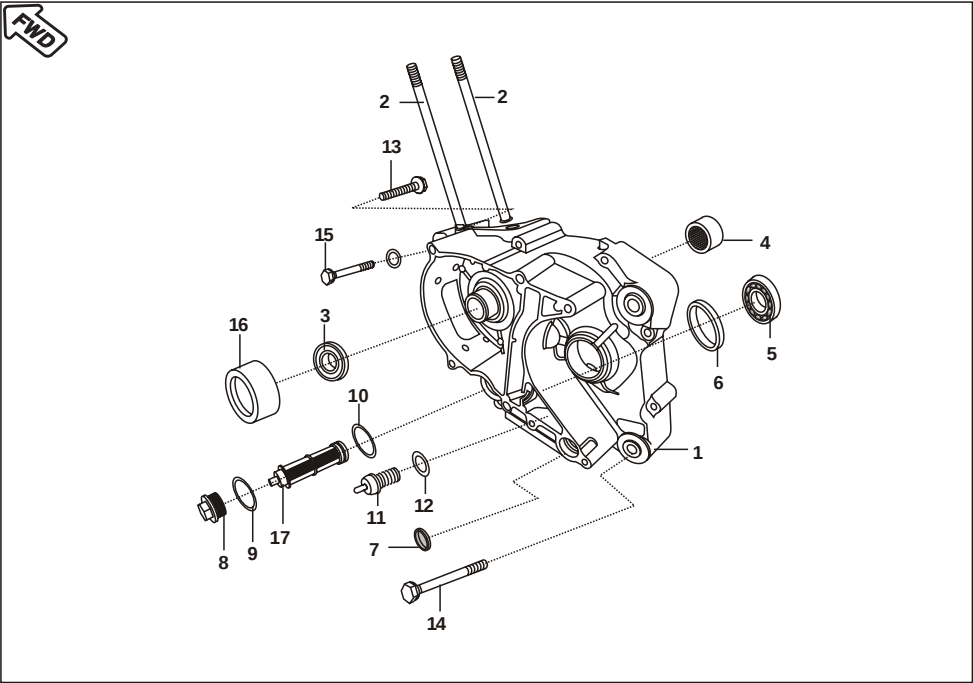


No.	Part No.	Description	11A	11B	Remarks
			Drum Br.	Disc Br.	
1	JN 5410 00	Crankcase LH	1	1	
2	39 2531 05	Stud	2	2	
3	39 1715 19	Oil Seal	1	1	
4	39 2562 20	Needle Bearing (For Input shaft)	1	1	
5	39 2583 20	Bearing Ball (For Output shaft)	1	1	
6	39 2189 19	Oil Seal (For Output shaft)	1	1	
7	39 2190 19	Oil Seal (For Shift lever)	1	1	
8	JN 5710 01	Cap Strainer	1	1	
9	39 1754 21	'O' ring	1	1	
10	39 1283 21	'O' ring	1	1	
11	31 2010 81	Switch comp.(Neutral)	1	1	
12	DH 1012 64	Gasket Neutral Switch	1	1	
13	39 1963 04	Flanged Bolt	1	1	
14	39 1677 04	Bolt	6	6	
15	39 1845 04	Bolt	1	1	
16	DH 1011 69	Bush starter gear inner	1	1	
17	DS 1210 04	Mesh Filter oil Comp.	1	1	

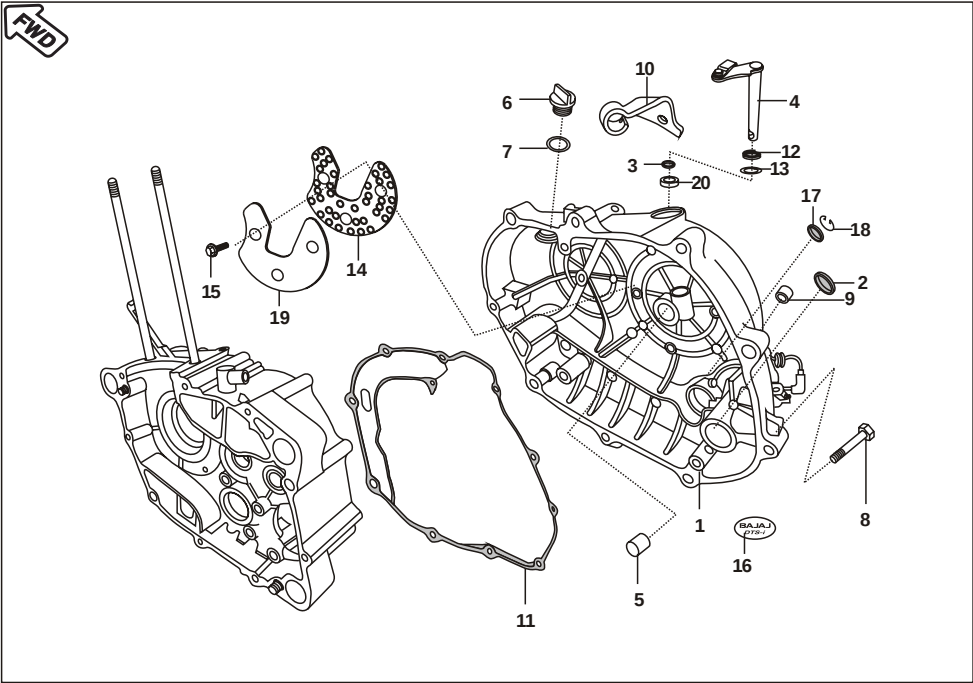


No.	Part No.	Description	12A	12B	Remarks
			Drum Br.	Disc Br.	
1	JN 5412 00	Cover comp. RH	1	1	
2	39 1917 19	Oil Seal	1	1	
3	39 1041 19	Seal Oil	1	1	
4	DS 1010 67	Lever Assly. Clutch	1	1	
5	DS 1010 50	Rod Push (For Clutch Lever)	1	1	
6	DS 1012 63	Dip Stick with O Ring	1	1	
7	DH 1011 52	'O' ring Oil level Gauge	1	1	
8	39 1075 04	Bolt	8	8	
9	39 0999 06	Pin Dowel	2	2	
10	DS 1010 73	Bracket Clutch Cable	1	1	
11	DS 1010 72	Gasket cover RH	1	1	
12	DS 1011 23	Spring clutch lever	1	1	
13	39 2443 11	Washer	1	1	
14	DS 1012 11	Damper Cover RH	1	1	
15	39 2544 04	Hex. HD Bolt / Flange	1	1	

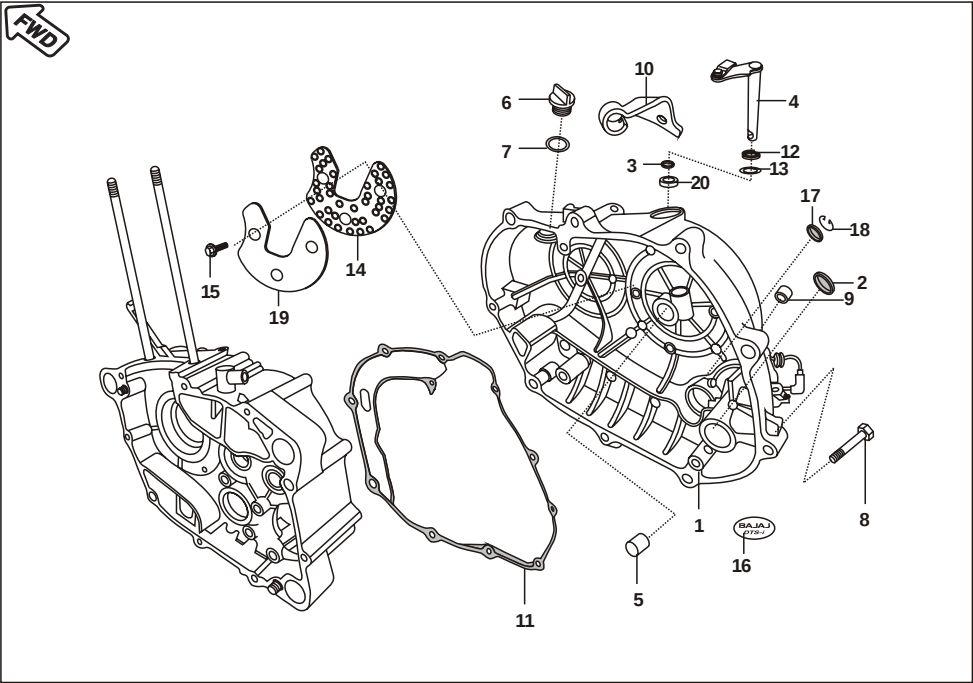


No.	Part No.	Description	12A	12B	Remarks
			Drum Br.	Disc Br.	
16	DS 1012 52	'bajaj' Decal	1	1	Fixed on cover comp. RH
17	DG 1014 18	Gauge	1	1	
18	DS 1012 15	Wire Circlip	1	1	
19	DS 1012 12	Plate Cover Damper RH	1	1	
20	DS 1012 01	Bushing	1	1	

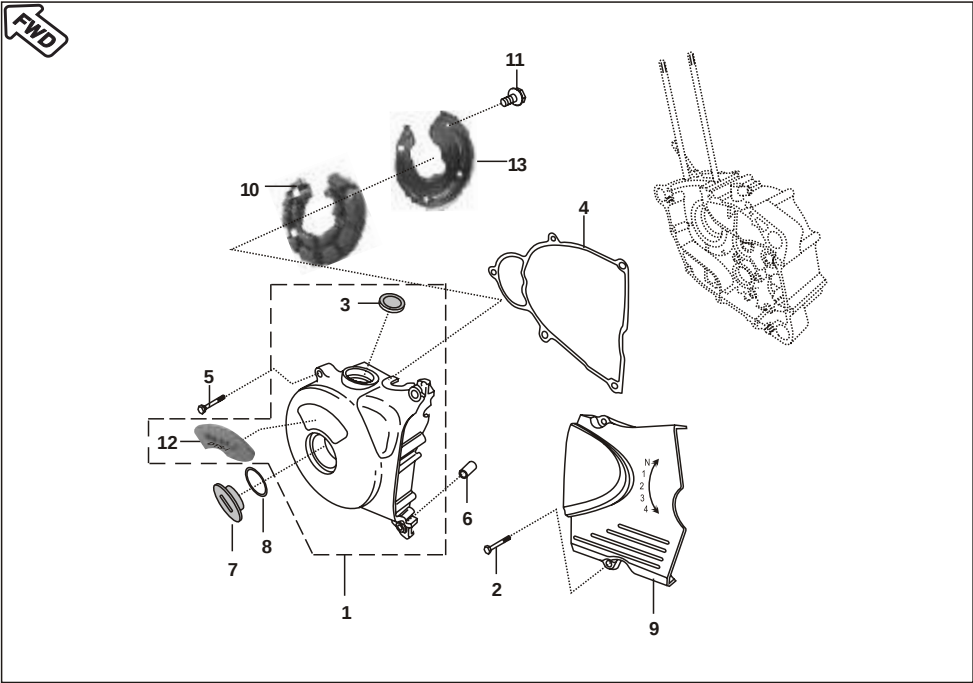


No.	Part No.	Description	13A	13B	Remarks
			Drum Br.	Disc Br.	
1	JN 5412 04	Cover Mag.with gauge & decal	1	1	JN 5412 03
2	39 1674 04	Bolt Hex.	3	3	
3	DG 1014 18	Gauge	1	1	
4	DS 1013 07	Gasket Magneto cover	1	1	
5	39 1075 04	Bolt	4	4	
6	39 0999 06	Pin Dowel	2	2	JN 5412 06
7	DH 1011 57	Cap Crank Center	1	1	
8	39 1283 21	'O' Ring	1	1	
9	52 JN00 08	Cover LH Rear with Decal	1	1	
10	DS 1012 10	Damper Cover LH	1	1	
11	39 2208 04	Flanged Bolt	4	4	Fixed on Cover magneto
12	DS 1012 53	'bajaj' Decal	1	1	
13	DH 1012 83	Plate Damper Cover LH	1	1	

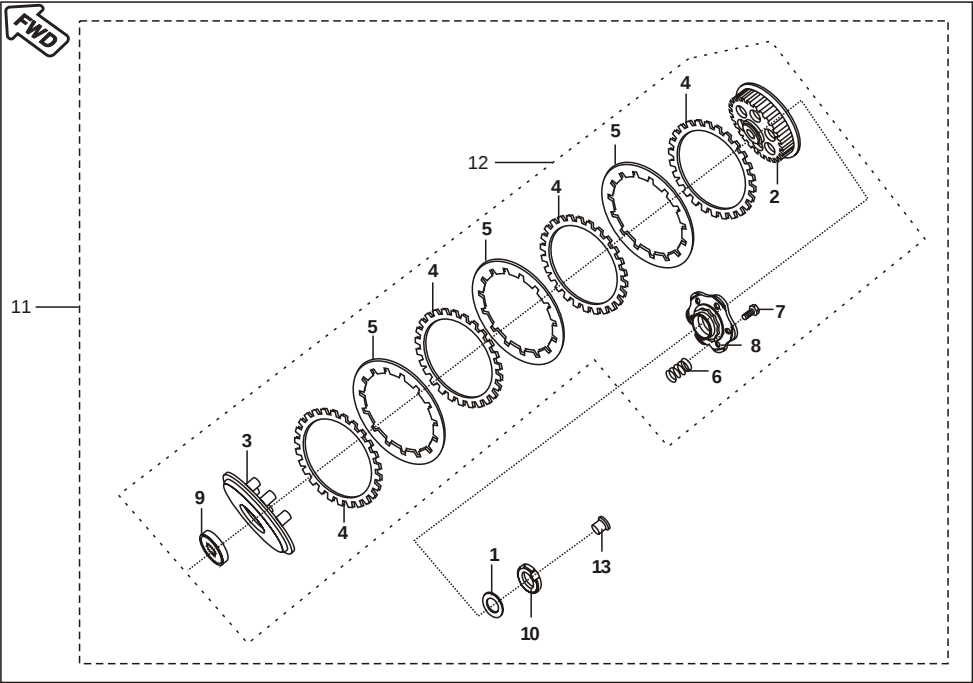


No.	Part No.	Description	14A	14B	Remarks
			Drum Br.	Disc Br.	
1	39 2200 11	Plain Washer	1	1	LH Thread
2	DS 1013 19	Clutch Center	1	1	
3	DH 1013 44	Plate Clutch pressure	1	1	
4	JN 5514 10	Disc Clutch friction Adler (E type)	4	4	
5	DH 1015 57	Plate Clutch	3	3	
6	JN 5514 00	Spring Clutch	6	6	
7	39 1553 04	Bolt	6	6	
8	DH 1014 84	Holder Clutch	1	1	
9	DS 1011 05	Guide Plate Clutch Pressure	1	1	
10	DH 1015 20	Nut Primary drive lock	1	1	
11	JN 5514 01	Assembly Clutch Complete	1	1	
12	JN 5514 02	Clutch Plate Assly	1	1	
13	DH 1014 85	Rod Clutch Lifter	1	1	

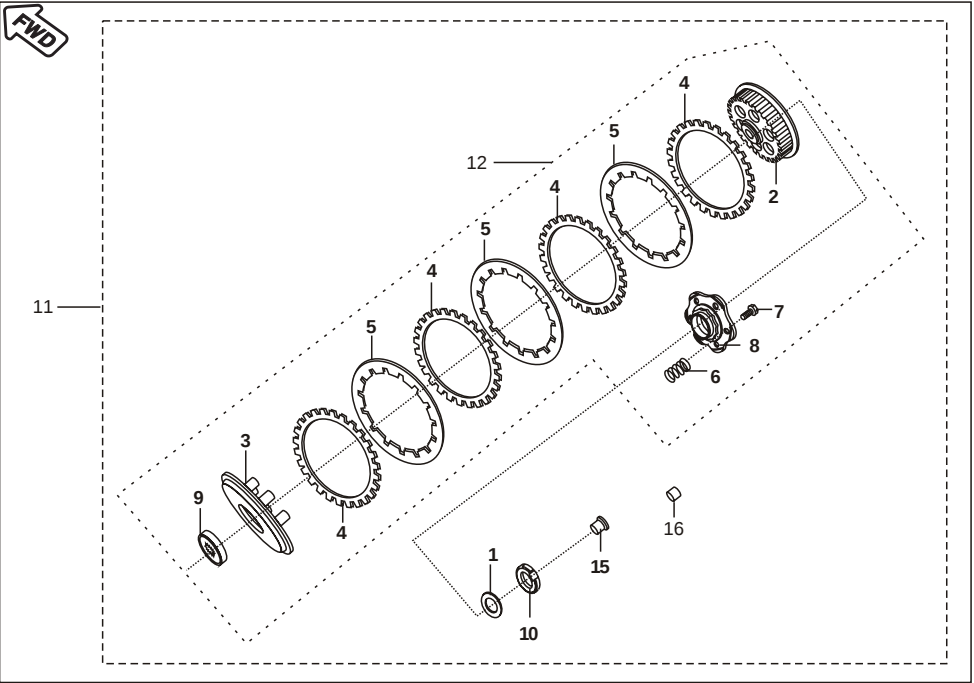


No.	Part No.	Description	14A	14B	Remarks
			Drum Br.	Disc Br.	
1	39 2200 11	Plain Washer	1	1	LH Thread
2	DS 1013 19	Clutch Center	1	1	
3	DH 1013 44	Plate Clutch pressure	1	1	
4	JN 5514 10	Disc Clutch friction Adler (E type)	4	4	
5	DH 1015 57	Plate Clutch	3	3	
6	JN 5514 00	Spring Clutch	6	6	
7	39 1553 04	Bolt	6	6	
8	DH 1014 84	Holder Clutch	1	1	
9	DS 1011 05	Guide Plate Clutch Pressure	1	1	
10	DH 1015 20	Nut Primary drive lock	1	1	
11	JN 5514 17	Assembly Clutch Complete	1	1	N.I.
12	JN 5514 16	Clutch Plate Assly	1	1	
13	JN 5514 08	Anti Judder Spring	1	1	
14	JN 5514 09	Anti Judder Washer	1	1	
15	JN 5514 15	Assembly Recess Cup	1	1	
16	JN 1514 14	Rod Push	1	1	

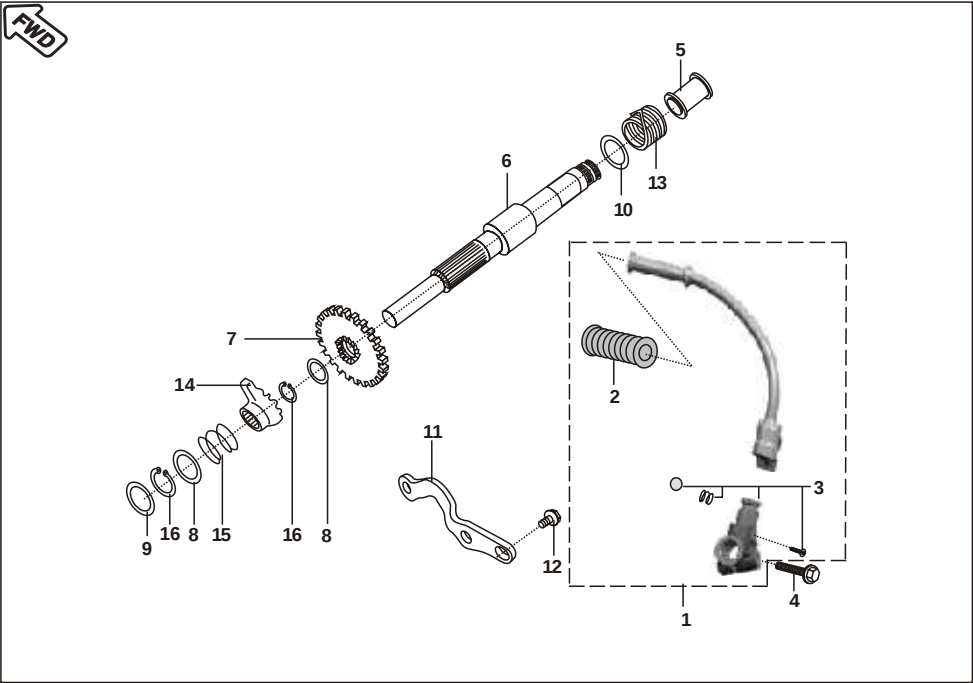


No.	Part No.	Description	15A	15B	Remarks
			Drum Br.	Disc Br.	
1	DS 1012 06	Lever Kick Starter complete	1	1	Ref. Page No. 67
2	DD 1010 97	Damper	1	1	
3	36 DS10 07	Boss Kick Set	1	1	
4	DS 1012 09	Bolt Special	1	1	
5	DS 1010 58	Collar Spring	1	1	
6	DS 1010 57	Spindle Kick Starter Assly	1	1	For KS qty is 4
7	DS 1010 60	Pinion Kick Starter	1	1	
8	39 2276 11	Washer	2	2	
9	39 0993 11	Washer Thrust	1	1	
10	39 2276 11	Plain Washer	1	1	
11	DS 1010 61	Guide Kick	1	1	
12	DH 1013 85	Bolt Flanged	3	3	
13	DS 1010 59	Spring Kick Starter	1	1	
14	DS 1011 90	Ratchet	1	1	
15	DH 1011 21	Spring	1	1	
16	39 0738 17	Circlip	2	2	For KS
17	39 1373 04	Bolt	1	-	

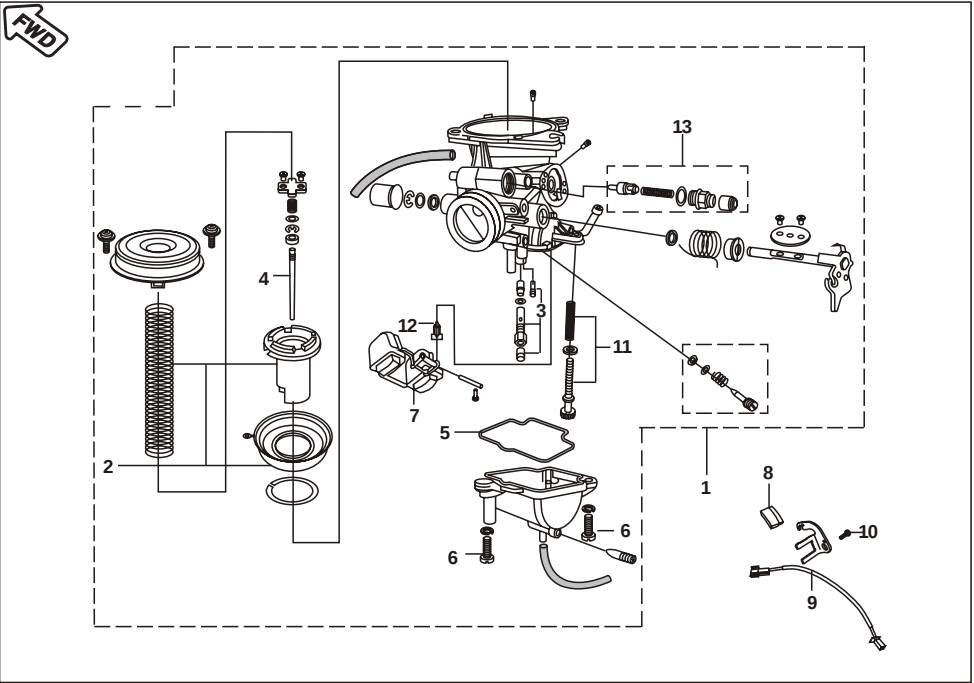


No.	Part No.	Description	16A	16B	Remarks
			Drum Br.	Disc Br.	
1	JN 5812 01	Carburetor Assly.	1	1	Ref. Page No. 67
2	36 DS12 01	Vacuum Piston Kit	1	1	
3	JN 5812 08	Jet Holder Kit	1	1	
4	JN 5812 15	Jet needle	1	1	
5	DS 1210 89	Packing	1	1	
6	DS 1210 90	Screw Pan	4	4	Ref. Page No. 67
7	DS 1210 80	Float Comp.	1	1	
8	DH 1211 01	Magnet Assly.	1	1	
9	DH 1211 02	Reed Switch Assly.	1	1	
10	39 0899 01	Pan Head Screw	2	2	
11	JN 5812 07	Idling Screw Kit	1	1	
12	DS 1210 76	Float Valve Comp.	1	1	
13	DS 1211 15	Set Plunger	1	1	
14	JN 5812 12	Choke Plunger Housing with Gasket	1	1	

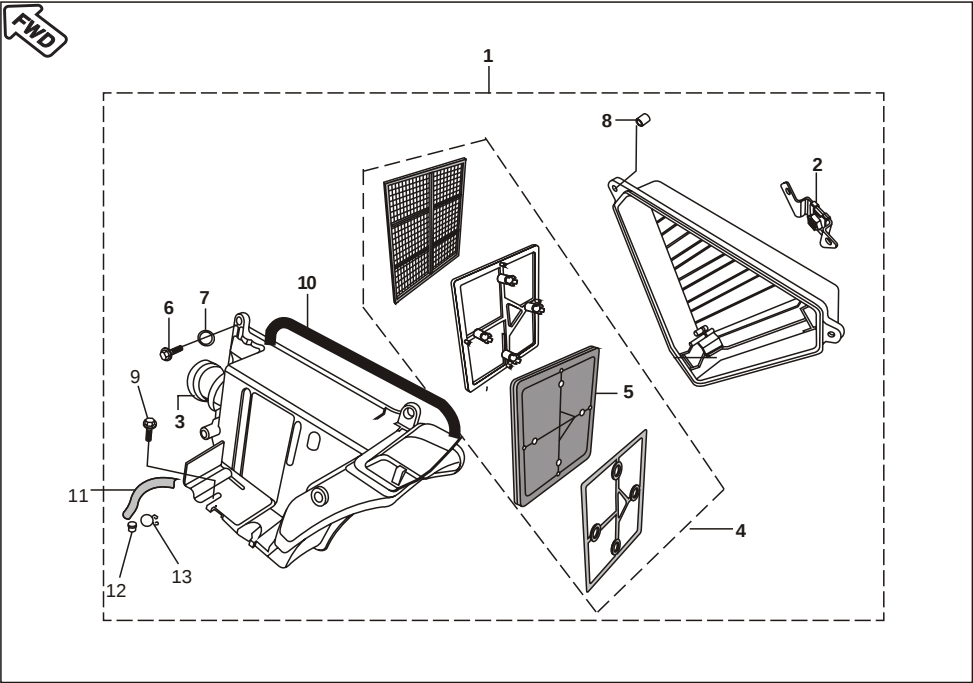


No.	Part No.	Description	17A	17B	Remarks
			Drum Br.	Disc Br.	
1	JN 5810 02	Air Cleaner comp.	--	1	
	DS 1211 29	Air Cleaner comp.	1	--	
2	DS 1610 69	Bracket Side Cover Mtg.	1	1	
3	JN 5810 01	Connecting Tube	--	1	
	DS 1211 31	Connecting Tube	1	--	
4	DX 1210 07	Cartridge Assy.	1	1	
5	DX 1210 10	Element Air Filter	1	1	
6	39 0071 04	Hex. Bolt	3	3	
7	39 1765 11	Plain Washer	3	3	
8	31 1210 43	Collar	2	2	
9	39 1940 04	Flanged Bolt	2	2	
10	DX 1210 06	O ring	1	1	
11	DS 1211 17	Drain Tube	1	1	
12	DS 1211 26	Plug	1	1	
13	DG 1210 02	Spring Clip	2	2	

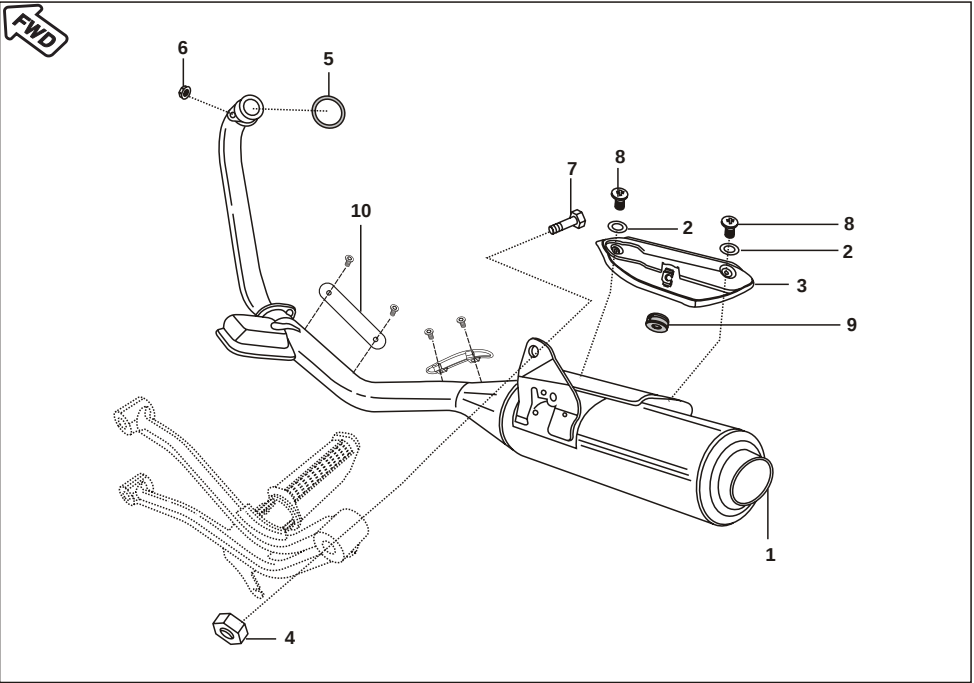


No.	Part No.	Description	18A	18B	Remarks
			Drum Br.	Disc Br.	
1	JN 5910 00	Silencer Assly.	--	1	
	DS 1013 89	Silencer Assly.	1	--	
2	DH 1013 01	Seal Shield Muffler	2	2	
3	DH 1014 68	Shield Muffler	1	1	
4	DD 1610 71	'U' Nut	1	1	
5	DJ 1010 64	Gasket Exhaust	1	1	
6	39 1970 15	Flanged Nut	2	2	
7	39 2730 04	Hexagonal Bolt	1	1	
8	DH 1013 02	Truss Screw	2	2	
9	DH 1014 81	Grommet Shield	1	1	
10	JN 5910 16	Wire Shield Assy.	1	1	

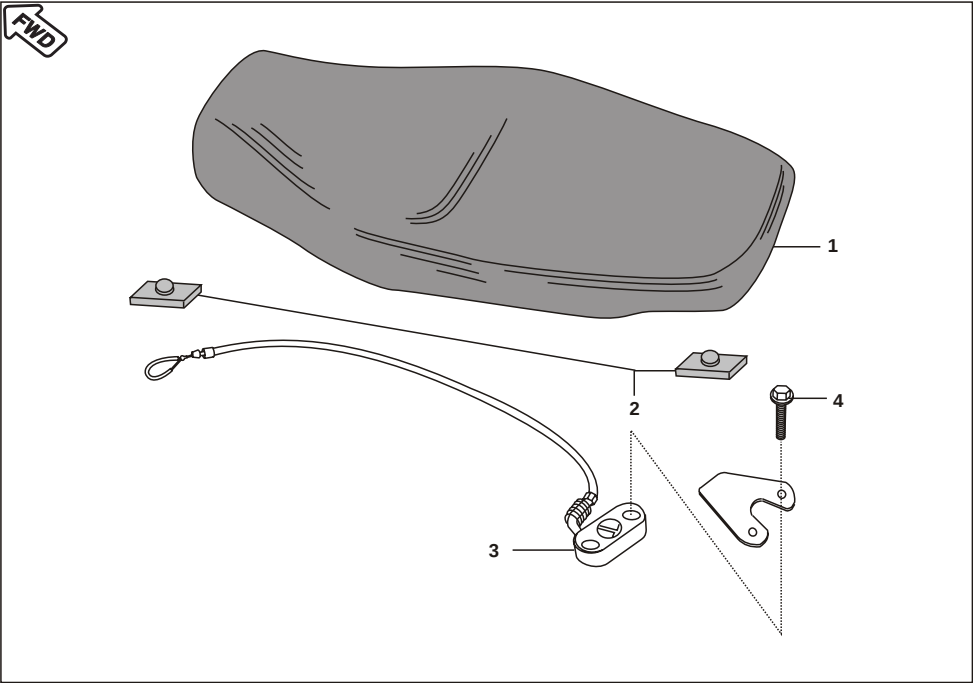


No.	Part No.	Description	19A	19B	Remarks
			Drum Br.	Disc Br.	
1	DS 2110 01	Seat Assly comp	1	1	
2	36 DS21 01	Seat Damper Kit	1	1	
3	DS 2110 06	Lock Assly seat	1	1	
4	39 1902 04	Flanged bolt	2	2	

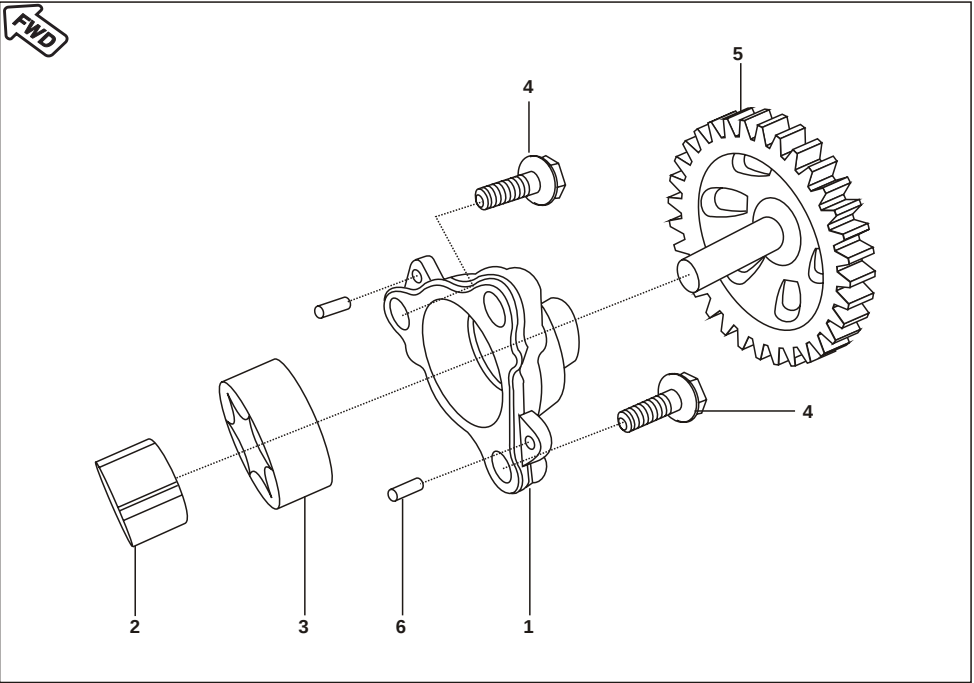


No.	Part No.	Description	20A	20B	Remarks
			Drum Br.	Disc Br.	
1	DS 1211 18	Oil Pump Body	1	1	
2	28 1210 07	Rotor Oil Pump inner	1	1	
3	28 1210 08	Rotor Oil Pump outer	1	1	
4	39 1674 04	Bolt	3	3	
5	DS 1013 65	Gear oil Pump Driven	1	1	
6	39 1686 06	Hollow Dowel Pin	3	3	

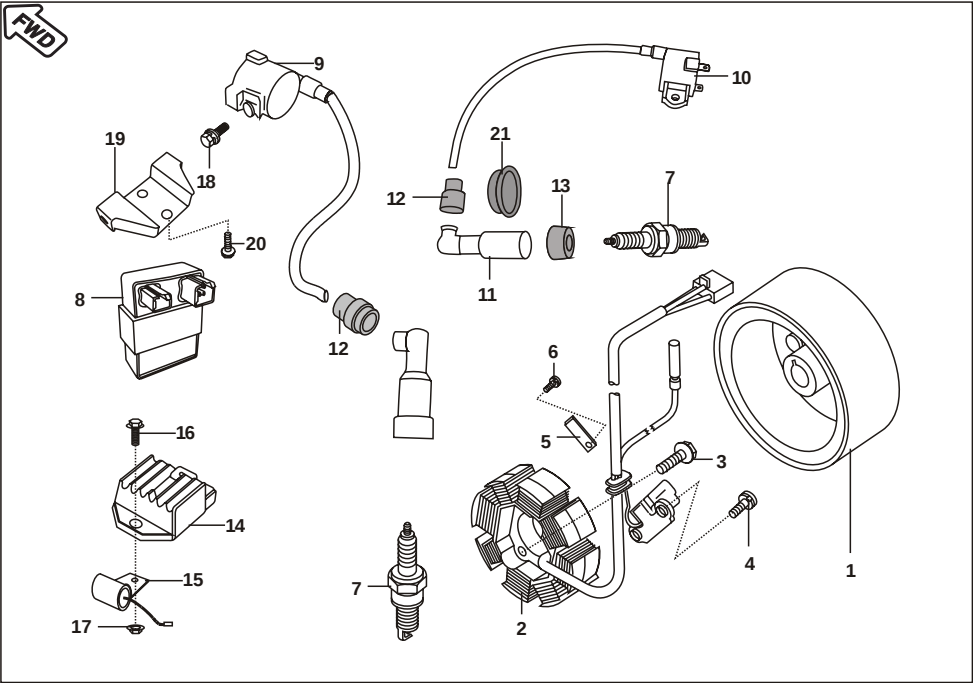


No.	Part No.	Description	21A	21B	Remarks
			Drum Br.	Disc Br.	
1	DS 1110 56	Rotor Assly.	1	1	For new vehicle
	DS 1110 18	Rotor Assly.	1	1	For old vehicle
2	DS 1110 49	Stator Assly. comp	1	1	For new vehicle
	DS 1110 16	Stator Assly. comp	1	1	For old vehicle
3	39 1674 04	Hex. Bolt with Flange	2	2	
4	39 0761 01	Pan Head Screw	2	2	
5	DH 1011 99	Stopper plate (wiring harness)	1	1	
6	39 0746 01	Screw Pan head	1	1	
7	DG 1110 08	Spark plug (Champion RG4HC)	2	2	
8	DS 1110 43	C.D.I Assly	1	1	
9	DS 1110 35	H.T. Coil LH with Grommet	1	1	
10	DS 1110 36	H.T. Coil RH with Grommet	1	1	
11	DH 1110 15	Cap Spark Plug	2	2	
12	DD 1110 12	Grommet H.T. Cable	2	2	
13	DH 1110 13	Grommet Spark Plug	1	1	
14	DS 2010 03	Regulator Voltage	1	1	
14	DH 2010 18	Regulator Voltage	1	--	For KS
15	31 2010 82	Capacitor	1	--	For KS

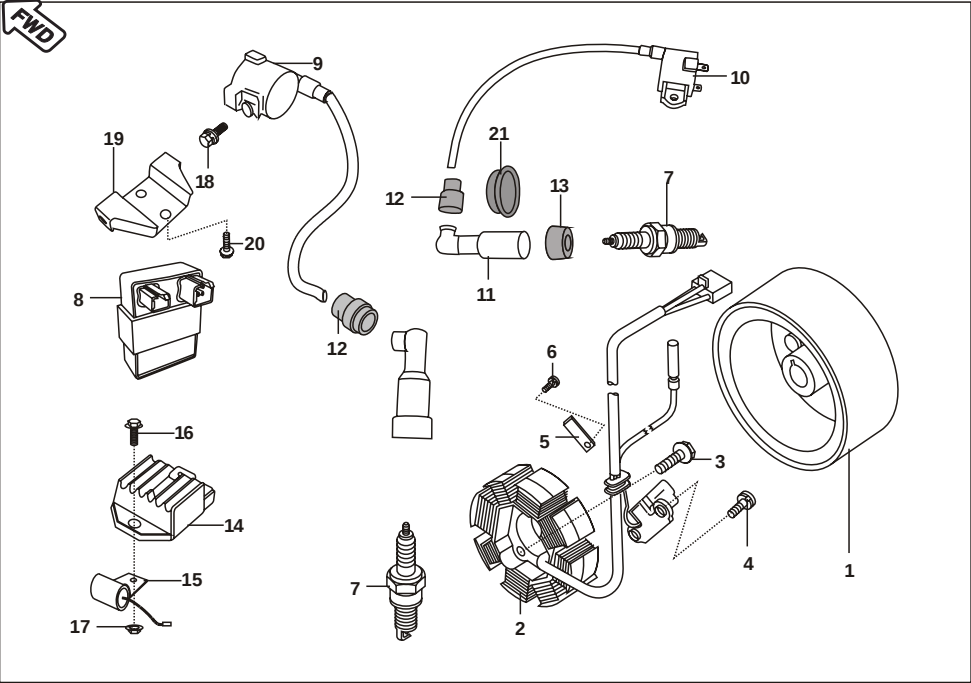


No.	Part No.	Description	21A	21B	Remarks
			Drum Br.	Disc Br.	
16	39 1943 04	Flange Bolt	1	1	
17	39 0798 15	Flange Nut	1	1	
18	39 1902 04	Flange Bolt	2	2	
19	DJ 1610 67	Bracket H.T.Coil	1	1	
20	39 1680 04	Flange Bolt	2	2	
21	DH 1110 16	Grommet Sleeve Spark Plug	1	1	

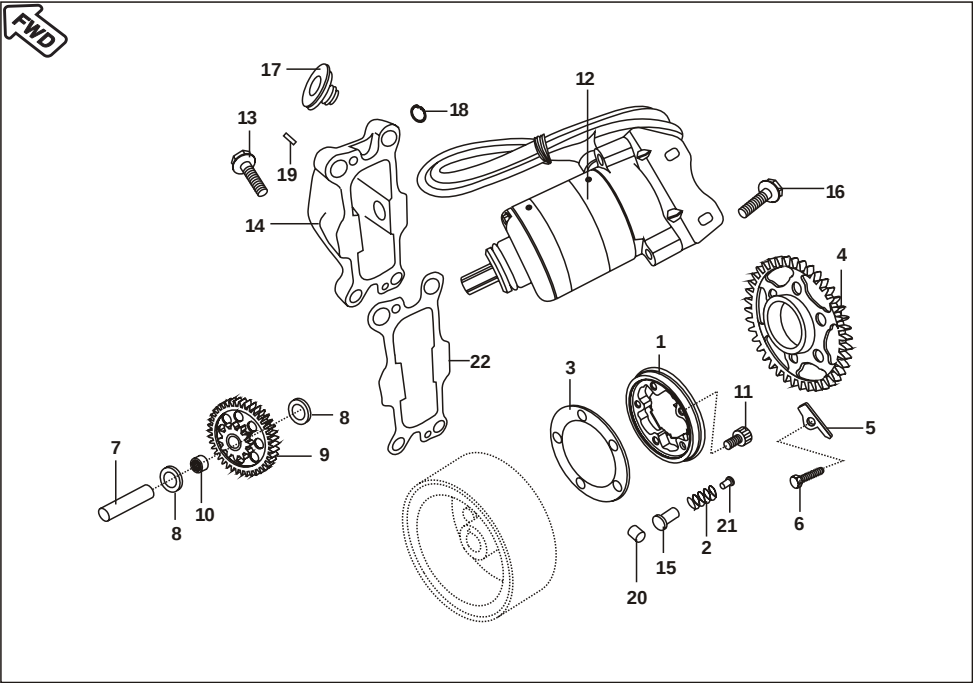


No.	Part No.	Description	22A	22B	Remarks
			Drum Br.	Disc Br.	
1	DH 1017 82	Body comp. starter clutch	1	1	For new vehicle
	DH 1015 34	Body comp. starter clutch	1	1	For old vehicle
2	DH 1011 64	Spring	5	5	
3	DH 1017 81	Plate roller clutch	1	1	For new vehicle
	DH 1011 86	Plate roller clutch	1	1	For old vehicle
4	DH 1014 01	Gear starter clutch	1	1	
5	DH 1015 81	Plate starter clutch gear return	1	1	Stopper plate
6	39 1672 04	Bolt	1	1	For stopper plate
7	DS 1011 01	Shaft starter counter	1	1	
8	DS 1011 79	Special Washer starter counter	2	2	
9	DH 1014 72	Gear starter counter	1	1	
10	39 2152 20	Needle roller bearing	1	1	
11	39 2437 04	Bolt socket	3	3	
12	JN 3516 00	Motor assly. starter	--	1	
	DS 1110 51	Motor assly. starter	1	--	
13	39 1074 04	Bolt	4	4	
14	JN 5514 07	Body Starter Counter	1	1	
15	DJ 1011 09	Bush for Spring Starter	5	5	

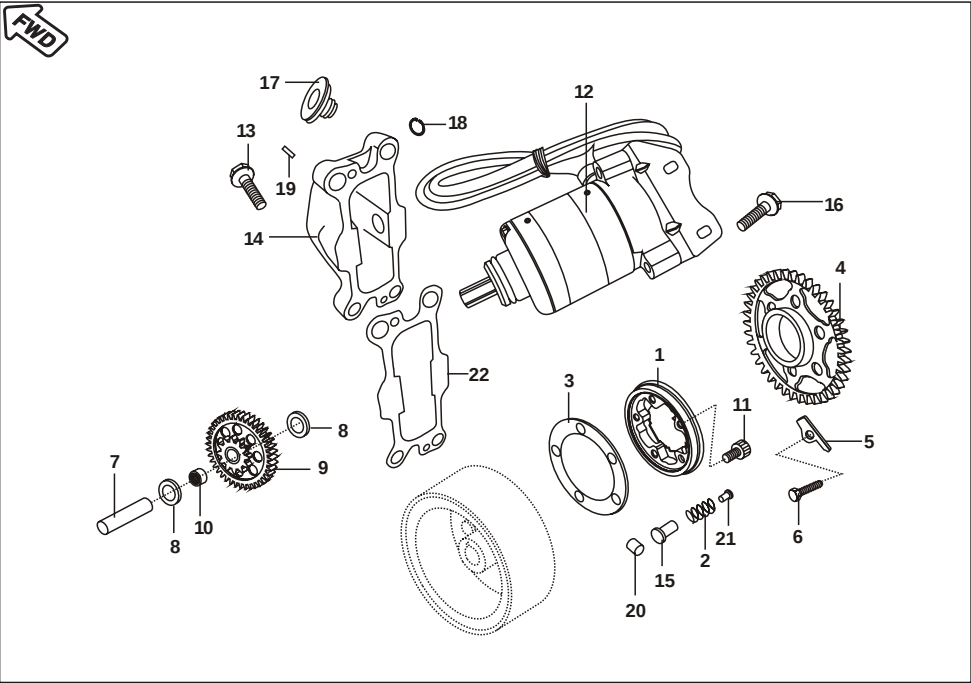


No.	Part No.	Description	22A	22B	Remarks
			Drum Br.	Disc Br.	
16	39 1062 04	Bolt	2	2	
17	DS 1011 44	Cap	1	1	
18	39 2547 17	Circlip	1	1	
19	39 0999 06	Dowel Pin	2	2	
20	DH 1011 63	Roller	5	5	
21	DH 1015 33	Bush Spring Starter Clutch	5	5	
22	DS 1012 94	Gasket	1	1	
23	59 1000 02	Spring dowel	1	1	N.I.

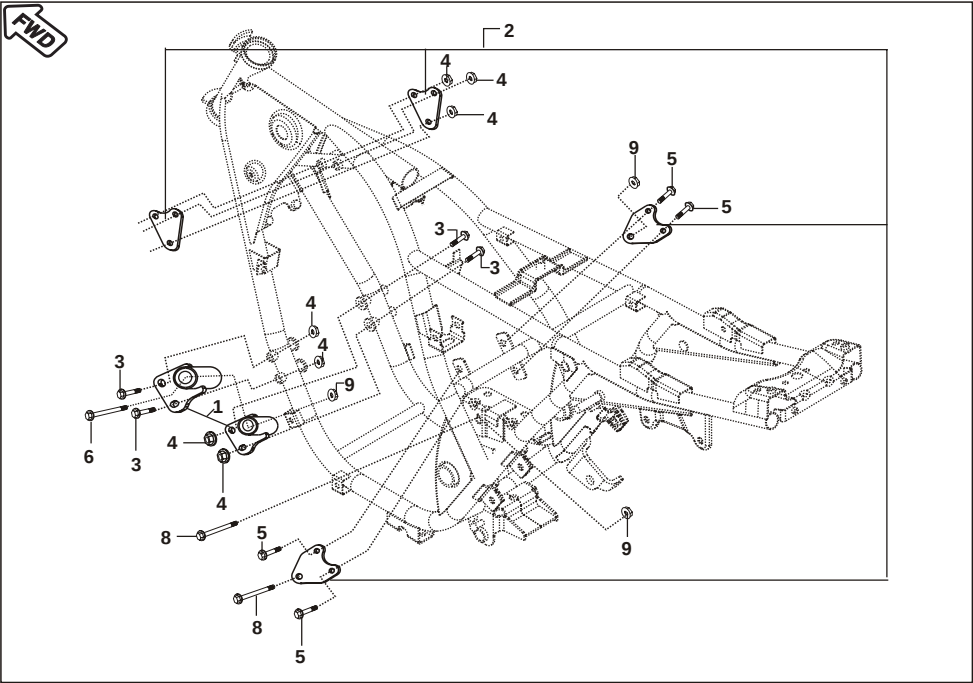


No.	Part No.	Description	23A	23B	Remarks
			Drum Br.	Disc Br.	
1	36 DS16 02	Engine Mounting Bracket Set	1	1	
2	36 DS16 01	Engine Mounting Plate Set	1	1	
3	39 2312 04	Bolt Flanged	4	4	
4	39 1970 15	Nut Flanged	7	7	
5	39 1556 04	Bolt flanged	4	4	
6	39 2718 04	Bolt Flanged	1	1	
7	39 1225 15	Hex. Nut /Flanged	3	3	
8	39 2702 04	Bolt Flanged	2	2	
9	39 2723 15	Flanged Nut	3	3	

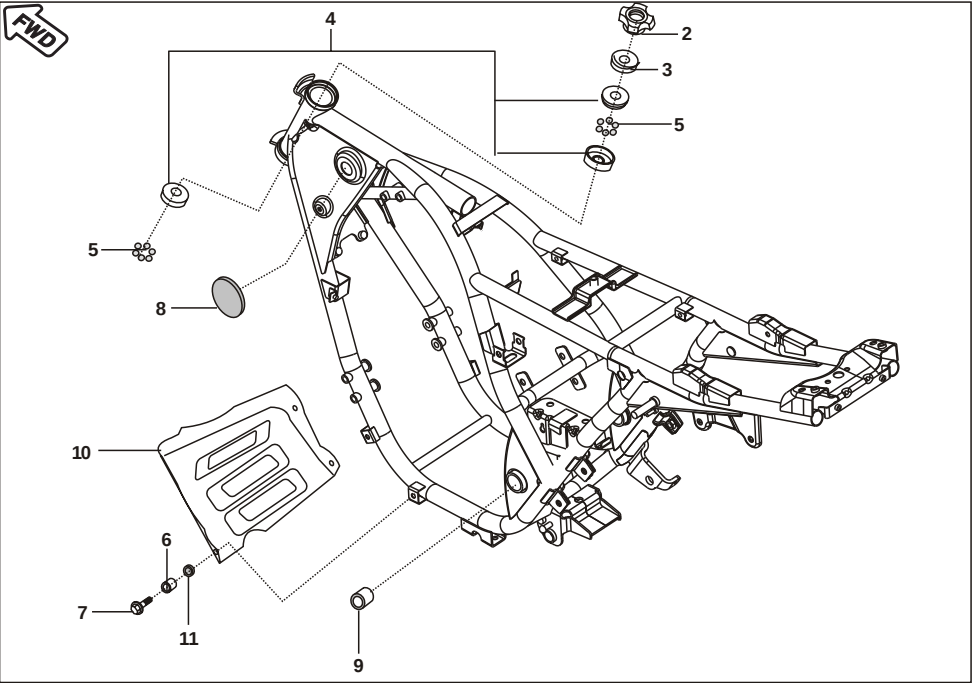


No.	Part No.	Description	24A	24B	Remarks
			Drum Br.	Disc Br.	
1	DS 1612 57	Frame Assly. comp.	--	1	Incl bush, races & Cup rear
2	DS 1611 19	Frame Assly. comp.	1	--	
2	DS 1810 18	Nut Fork	1	1	
3	DH 1810 14	Cup - Steering	1	1	
4	36 DS18 02	Bearing cone Kit	1	1	
5	30 1810 06	Ball steel	46	46	
6	DH 1611 00	Spacer Main Step	4	4	
7	DG 1611 21	Screw	4	4	
8	DS 2010 27	Side Reflector	2	2	
9	DP 1710 06	Silent Bush	2	2	
10	DS 1611 42	Bash Plate	1	1	
11	DS 1611 02	Grommet Bash Plate	4	4	

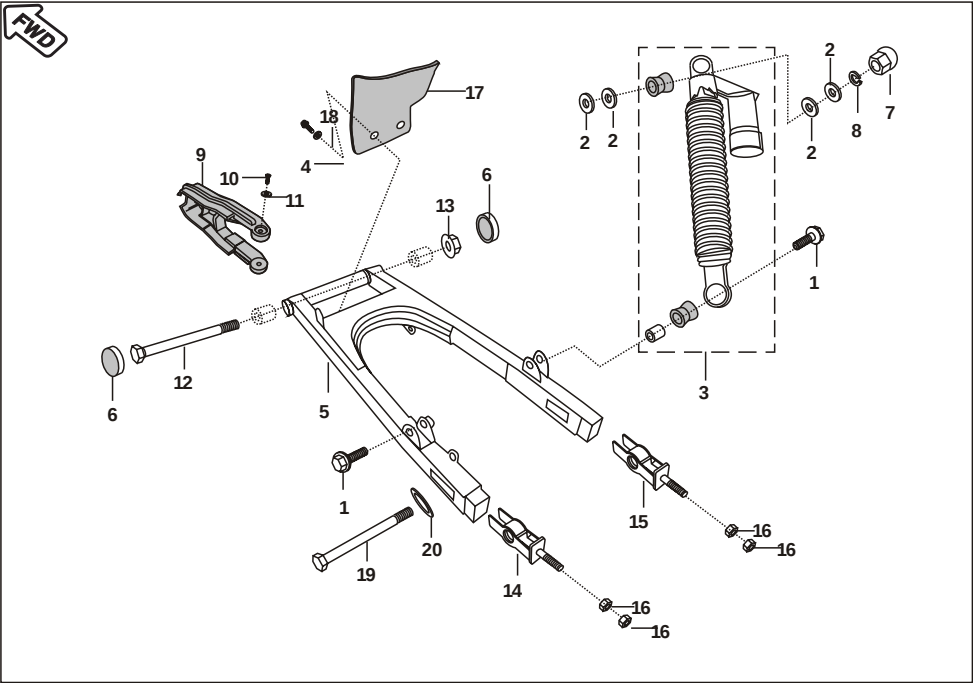


No.	Part No.	Description	25A	25B	Remarks
			Drum Br.	Disc Br.	
1	DG 1710 38	Hex. Bolt/ Flange	--	2	
2	39 0714 11	Plain washer	--	8	
3	JN 1220 00	Rear Shock Absorber	--	2	
4	39 0258 11	Plain Washer	--	2	
5	JN 1220 02	Swing arm assly.	--	1	
6	DS 1710 15	Cap Swing Arm	--	2	
7	39 0712 15	Domed Cap Nut	--	2	
8	39 0737 12	Spring Washer	--	2	
9	DS 1710 07	Chain slider	--	1	
10	39 0553 02	Screw	--	2	
11	39 0454 11	Plain washer	--	2	
12	DS 1710 13	Shaft swing arm	--	1	
13	39 1358 15	Flanged Nut	--	1	
14	DJ 1510 36	Adjuster chain LH	--	1	
15	DJ 1510 37	Adjuster chain RH	--	1	
16	39 0292 15	Hexagon nut	--	4	
17	DS 1710 14	Mud Flap	--	1	
18	39 1773 04	Flange Bolt	--	2	
19	39 1943 04	Bolt	--	1	
20	39 0711 11	Washer	--	1	

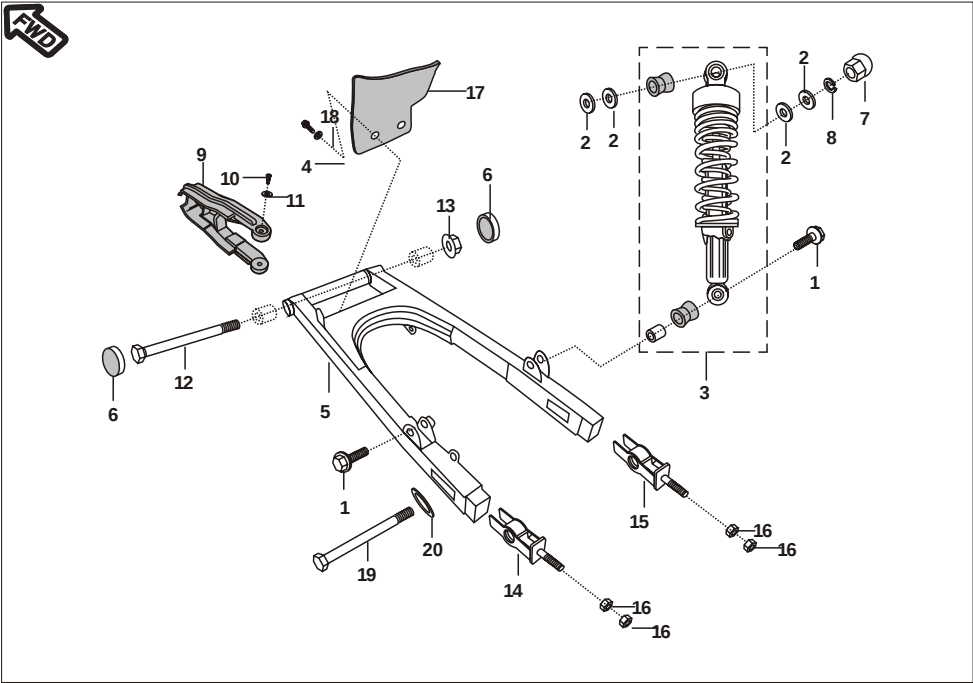


No.	Part No.	Description	25A	25B	Remarks
			Drum Br.	Disc Br.	
1	DG 1710 38	Hex. Bolt/ Flange	2	--	
2	39 0714 11	Plain washer	8	--	
3	DX 1710 03	Rear Shock Absorber	2	--	
4	39 0258 11	Plain Washer	2	--	
5	DS 1710 02	Swing arm assly.	1	--	
6	DS 1710 15	Cap Swing Arm	2	--	
7	39 0712 15	Domed Cap Nut	2	--	
8	39 0737 12	Spring Washer	2	--	
9	DS 1710 07	Chain slider	1	--	
10	39 0553 02	Screw	2	--	
11	39 0454 11	Plain washer	2	--	
12	DS 1710 13	Shaft swing arm	1	--	
13	39 1358 15	Flanged Nut	1	--	
14	DJ 1510 36	Adjuster chain LH	1	--	
15	DJ 1510 37	Adjuster chain RH	1	--	

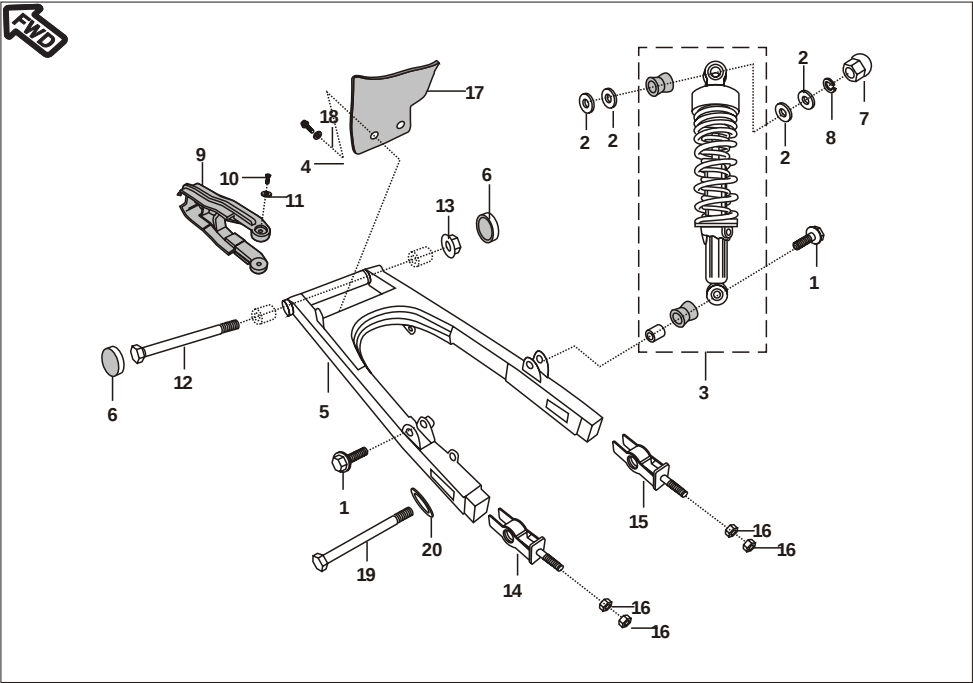


No.	Part No.	Description	25A	25B	Remarks
			Drum Br.	Disc Br.	
16	39 0292 15	Hexagon nut	4	--	
17	DS 1710 14	Mud Flap	1	--	
18	39 1773 04	Flange Bolt	2	--	
19	39 1943 04	Bolt	1	--	
20	39 0711 11	Washer	1	--	

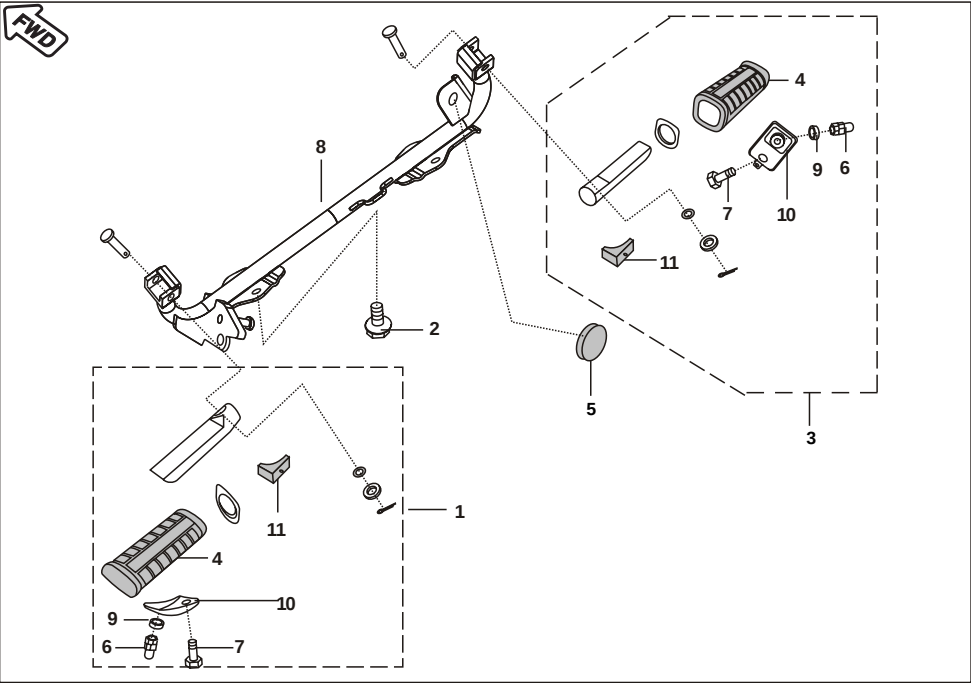


No.	Part No.	Description	26A	26B	Remarks
			Drum Br.	Disc Br.	
1	DJ 1611 26	Assly. Comp.Main step LH	1	1	
2	39 1940 04	Flange bolt	4	4	
3	DJ 1611 27	Main step RH assly. comp.	1	1	
4	DH 1610 53	Rubber Main Step	2	2	
5	DG 1612 24	Damper	1	1	For Kick stopper
6	39 1282 15	Domed Cap nut	2	2	
7	39 0897 04	Bolt	2	2	
8	DS 1611 17	Stay Main Step	1	1	
9	DH 1611 00	Spacer Main Step	2	2	
10	DH 1610 56	Plate Comp. Lower Mounting	2	2	
11	DJ 1610 90	Damper Footrest	2	2	

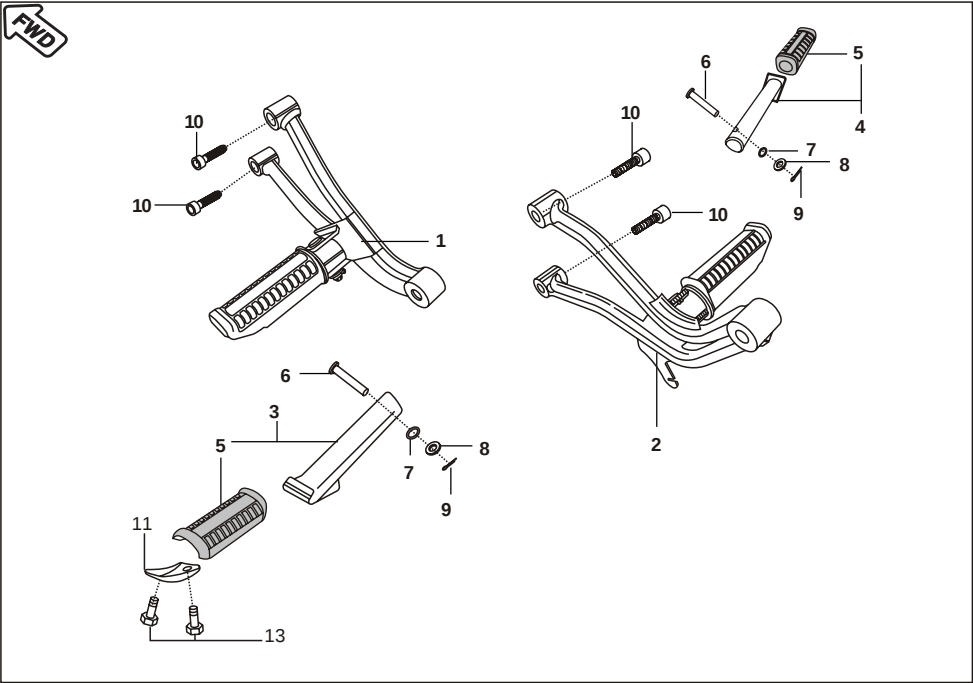


No.	Part No.	Description	27A	27B	Remarks
			Drum Br.	Disc Br.	
1	DS 1610 85	Holder LH step	1	1	
2	DS 1610 86	Holder RH step	1	1	
3	DH 1613 13	Pillion step assly. comp. LH	1	1	
4	DH 1613 15	Pillion step assly. comp. RH	1	1	
5	DH 1613 17	Rubber pillion step	2	2	
6	DD 1613 81	Pin pillion step	2	2	
7	30 1410 31	'O' ring	2	2	
8	39 1040 11	Plain washer	2	2	
9	39 0784 08	Split pin	2	2	
10	39 2722 04	Soc. Head Bolt	4	4	
11	DX 1610 67	Plate Lock Pillion Step	2	2	N. I.
12	DH 1611 00	Spacer Main Step	2	2	
13	22 1504 51	Bolts- Cylinder	2	2	

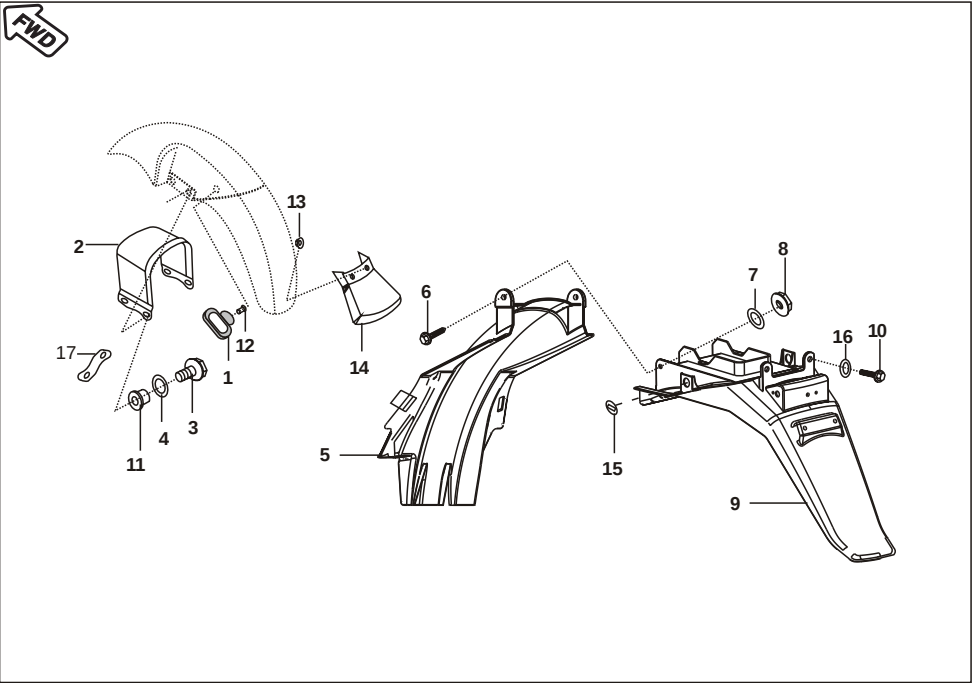


No.	Part No.	Description	28A	28B	Remarks
			Drum Br.	Disc Br.	
1	DS 1611 25	Cable Guide	1	1	Fender front mtg.
2	DX 1610 65	Brace fender	1	1	
3	39 2310 04	Flange bolt	4	4	
4	39 1507 11	Plain Washer	4	4	
5	DX 1610 34	Fender rear front	1	1	
6	39 2701 04	Flange bolt	2	2	
7	39 0211 11	Plain washer	2	2	
8	39 0798 15	Flange nut	2	2	
9	DS 1610 62	Fender rear	1	1	
10	39 1943 04	Flange bolt	2	2	
11	DS 1611 08	Sleeve Front Fender	4	4	
12	DJ 1610 69	Nail for Cable Guide	1	1	
13	39 0326 15	Nyloc Nut	3	3	
14	DS 1611 41	Flap Front fender	1	1	
15	DH 1611 58	Grommet Side Cover	2	2	
16	39 0211 11	Plain Washer	2	2	N.I.
17	JN 1814 03	Hose Clamp	1	1	
18	DX 1610 66	Damper	1	1	

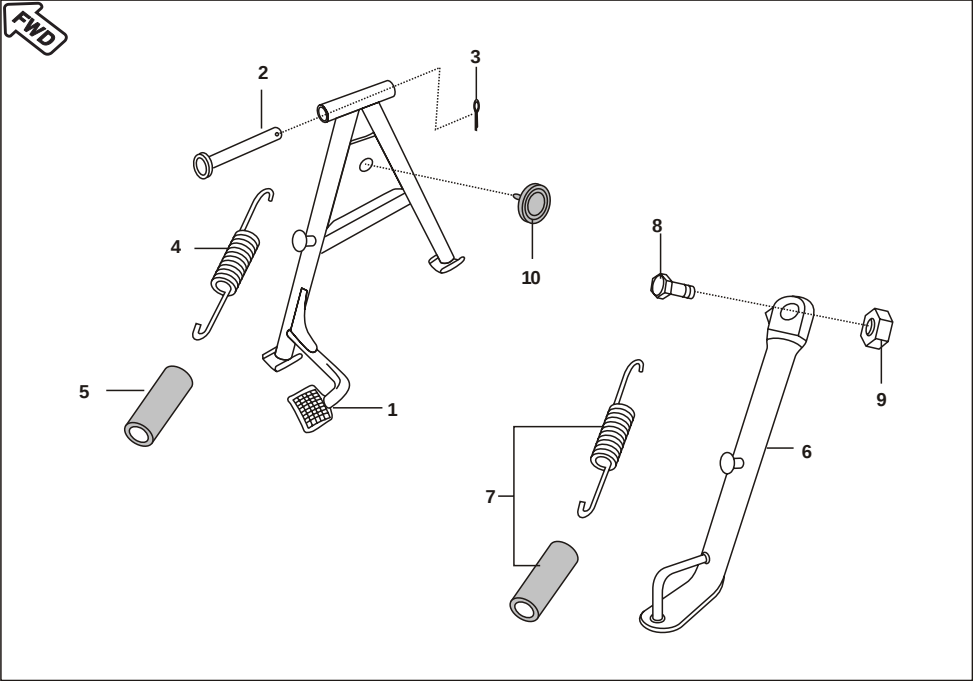


No.	Part No.	Description	29A	29B	Remarks
			Drum Br.	Disc Br.	
1	DS 1611 13	Center Stand	1	1	
2	DS 1611 12	Shaft stand	1	1	
3	39 0797 08	Pin cotter	1	1	
4	DH 1611 21	Spring main stand	1	1	
5	DH 1611 45	Cover spring main stand	1	1	
6	DS 1610 77	Stand side	1	1	
7	DH 1612 40	Spring side stand with cover	1	1	
8	DF 1611 02	Bolt	1	1	
9	39 0422 15	Nut	1	1	
10	DG 1611 24	Damper Main Stand	1	1	

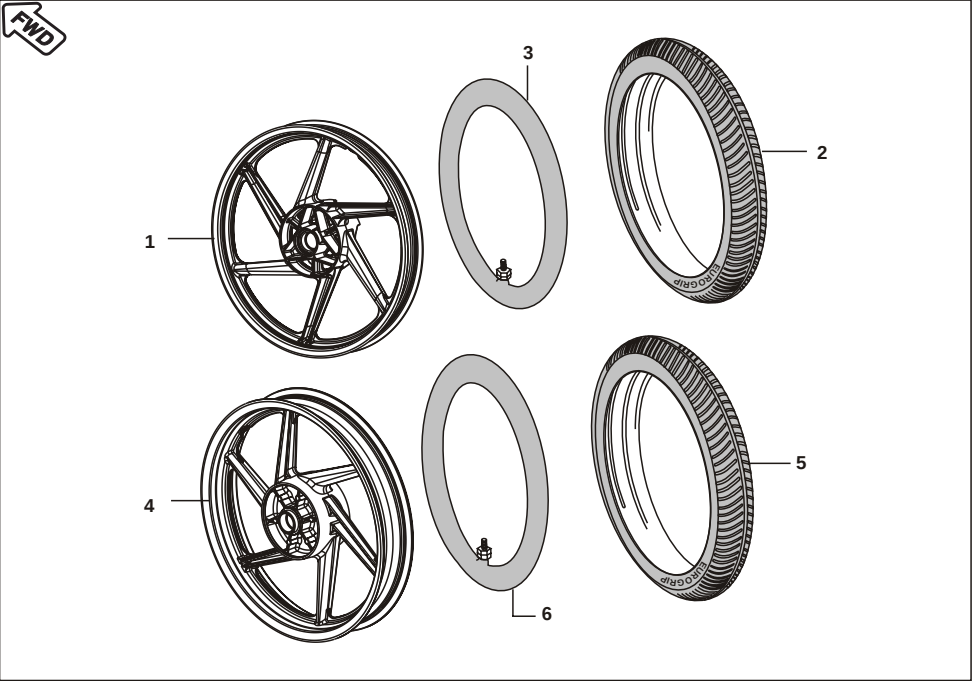


No.	Part No.	Description	30A	30B	Remarks
			Drum Br.	Disc Br.	
1	DJ 1510 77	Wheel rim front	--	1	
	DS 1510 86	Wheel rim front	1	--	
2	DS 1510 48	Tyre front	1	1	Proprietary items Not to service
3	DS 1510 49	Tube front	1	1	
4	DJ 1510 87	Wheel rim rear	--	1	
	DS 1510 84	Wheel rim rear	1	--	
5	DS 1510 31	Tyre rear	1	1	Proprietary items service
6	DS 1510 29	Tube rear	1	1	

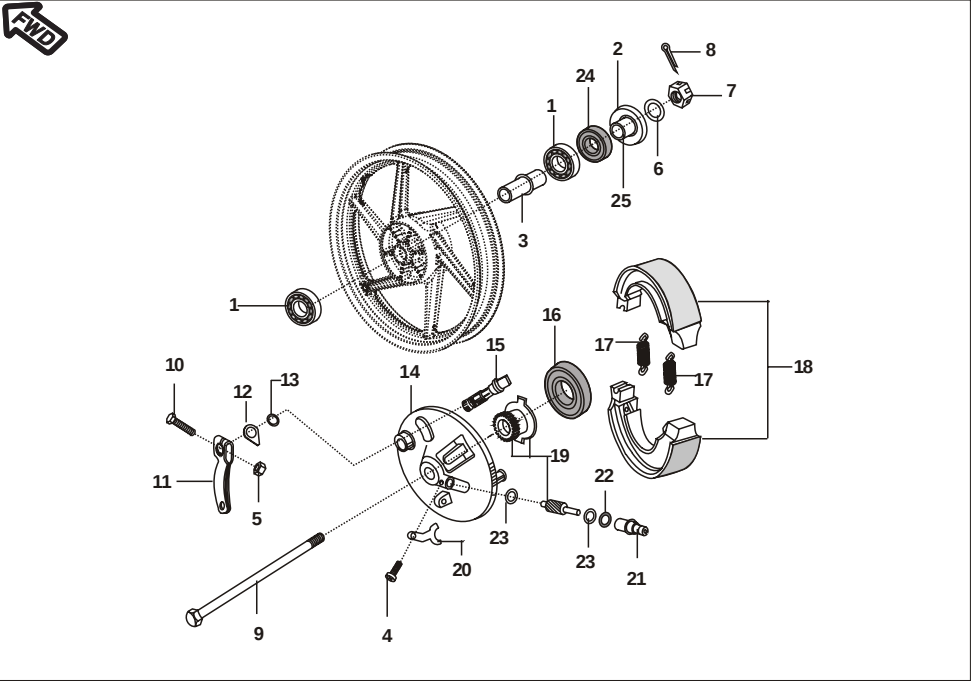


No.	Part No.	Description	30A	30B	Remarks
			Drum Br.	Disc Br.	
1	39 2688 20	Bearing Ball	2	--	
2	DS 1510 56	Dusct Seal	1	--	
3	30 1510 32	Collar Bearing	1	--	
4	39 0840 01	Screw pan cross	1	--	
5	39 0798 15	Nut	1	--	
6	39 0781 11	Plain washer	1	--	
7	39 0786 15	Nut castle	1	--	
8	39 0787 08	Pin cotter	1	--	
9	DJ 1510 41	Axle	1	--	
10	39 0775 04	Bolt	1	--	
11	JA 1316 07	Lever brake cam	1	--	
12	DD 1510 09	Indicator	1	--	
13	30 1510 38	Ring 'O'	1	--	
14	DS 1510 87	Panel front brake	1	--	
15	DD 1510 08	Cam brake	1	--	

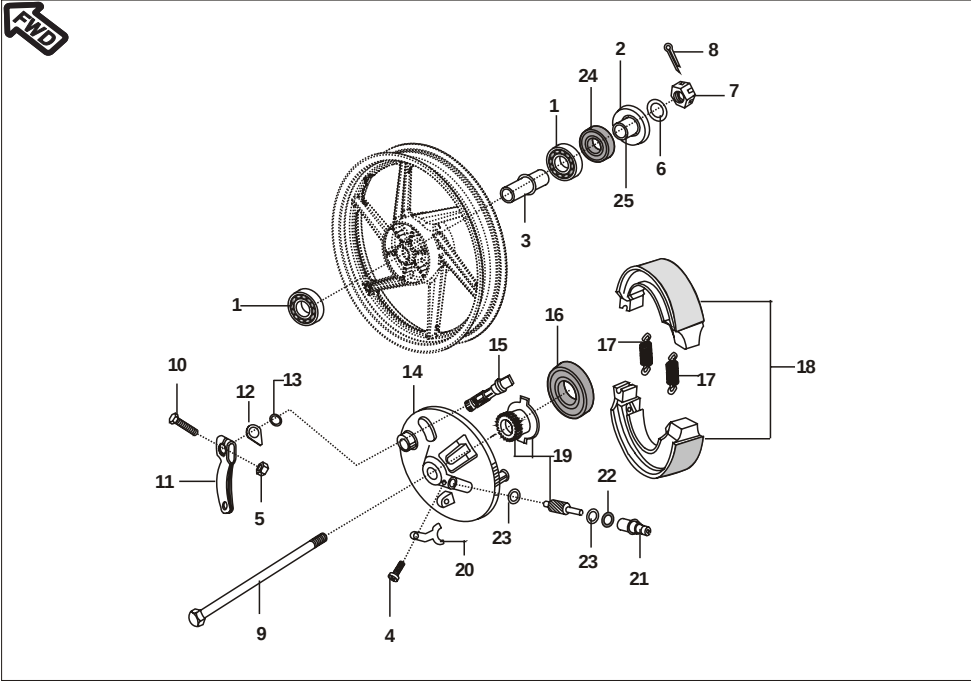


No.	Part No.	Description	31A	31B	Remarks
			Drum Br.	Disc Br.	
16	30 1510 35	Oil seal	1	--	
17	30 1510 69	Spring	2	--	
18	30 1511 05	Shoe brake	1	--	
19	36 DS15 02	Speedometer gear Kit	1	--	Ref. Page No. 67
20	30 1511 18	Stopper for bushing	1	--	
21	JA 1316 06	Bushing Speedo Cable	1	--	
22	39 1013 21	Ring 'O'	1	--	
23	30 1510 42	Washer 'A'	2	--	
24	30 1510 33	Oil Seal	1	--	
25	DS 1510 42	Spacer	1	--	

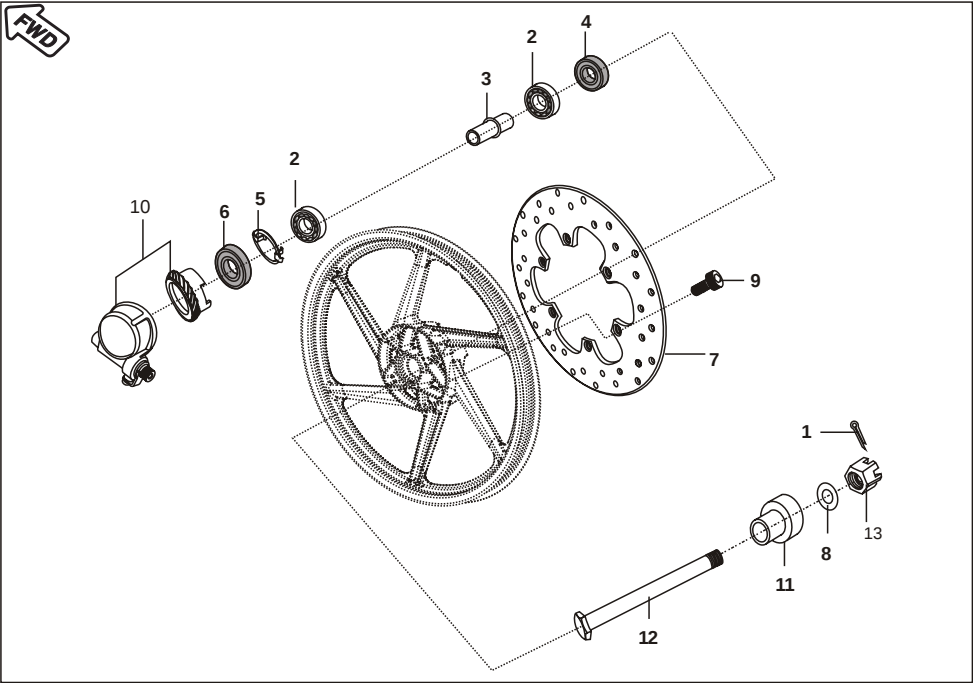


No.	Part No.	Description	31A	31B	Remarks
			Drum Br.	Disc Br.	
1	39 0787 08	Pin cotter	--	1	
2	39 2688 20	Bearing ball	--	2	
3	DE 1510 06	Spacer assly.	--	1	
4	30 1510 33	Seal oil	--	1	
5	DE 1510 12	Plate drive	--	1	
6	DE 1510 08	Seal oil	--	1	
7	DJ 1510 14	Disc	--	1	
8	39 0781 11	Plain washer	--	1	
9	39 2038 04	Hex. soc. hd. bolt	--	6	
10	DJ 1510 57	Case meter gear Assly	--	1	
11	DS 1510 58	Spacer	--	1	
12	DJ 1510 41	Axle	--	1	
13	39 0786 15	Hex. Slotted Nut	--	1	

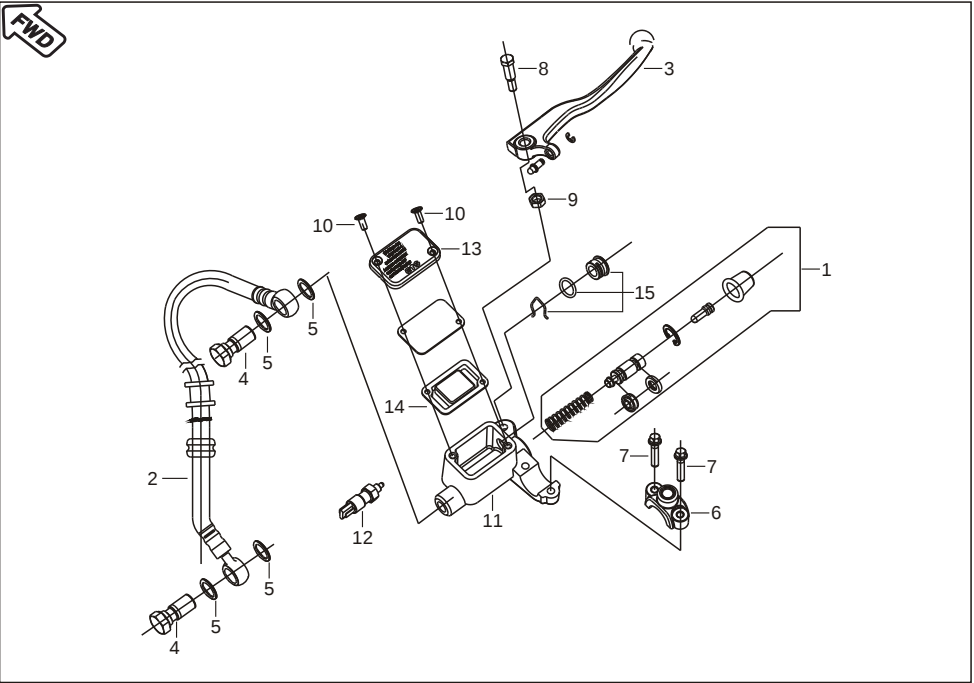


No.	Part No.	Description	32A	32B	Remarks
			Drum Br.	Disc Br.	
1	DJ 1910 23	Major Kit - Master Cylinder	--	1	
2	DJ 1510 76	Hose Brake Front	--	1	
3	DJ 1910 06	Lever Grip RH	--	1	
4	DE 1910 11	Banjo Bolt	--	2	
5	DJ 1910 26	Washer Copper	--	4	
6	DJ 1910 27	Clamp Holder RH	--	1	
7	DJ 1910 28	Bolt	--	1	
8	DJ 1910 29	Bolt Front Brake Lever	--	1	
9	DJ 1910 30	Nut Flanged	--	1	
10	DJ 1910 31	Screw	--	2	
11	DJ 1910 32	Cylinder Master	--	1	
12	DJ 2011 00	Front brake switch	--	1	
13	DJ 1910 34	Reservoir Cover	--	1	
14	DJ 1910 35	Diaphragm	--	1	
15	36 DH19 02	Oil Window Kit	--	1	Ref. Page No. 67

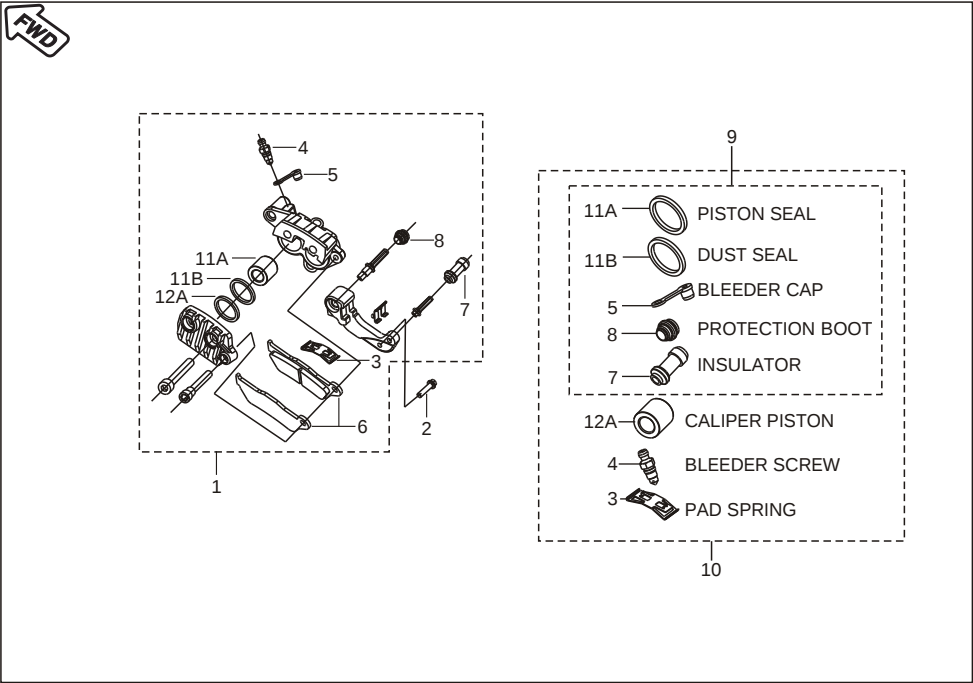


No.	Part No.	Description	33A	33B	Remarks
			Drum Br.	Disc Br.	
1	DG 1510 89	Caliper Assly. Front	--	1	
2	39 1769 04	Bolt Flanged	--	2	
3	DJ 1510 68	Spring Pad	--	1	
4	DJ 1510 69	Bleeder Screw	--	1	
5	DJ 1510 70	Bleeder Cap	--	1	
6	DJ 1510 71	Disc Pad Set	--	1	
7	DJ 1510 72	Insulator	--	1	
8	DJ 1510 73	Protection Boot	--	1	
9	DJ 1510 74	Minor Kit - Caliper	--	1	
10	DJ 1510 75	Major Kit - Caliper	--	1	

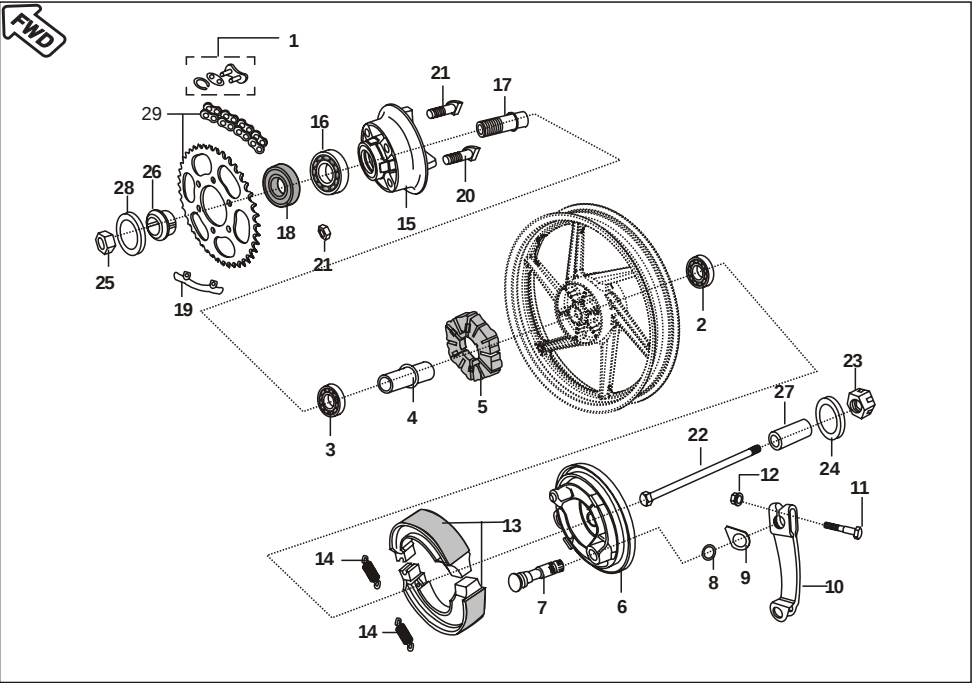


No.	Part No.	Description	34A	34B	Remarks
			Drum Br.	Disc Br.	
1	DJ 1510 53	Drive Chain Lock	1	--	
	JN 1410 02	Drive Chain Lock	--	1	
2	39 2686 20	Bearing ball	1	1	
3	39 2687 20	Bearing ball	1	1	
4	30 1510 75	Collar bearing	1	1	
5	DJ 1510 88	Damper	1	1	
6	DJ 1510 92	Panel rear brake	--	1	
	JN 1316 00	Panel rear brake	1	--	
7	DD 1510 08	Cam brake	1	1	
8	30 1510 38	Ring 'O'	1	1	
9	30 1510 05	Indicator	1	1	
10	DJ 1510 59	Lever brake	--	1	
	DS 1510 23	Lever brake	1	--	
11	39 2447 04	Bolt	1	1	
12	39 0798 15	Nut	1	1	
13	30 1510 68	Shoe brake assly.	1	1	
14	30 1510 69	Spring	2	2	
15	JN 1312 03	Coupling	--	1	
	DS 1510 68	Coupling	1	--	

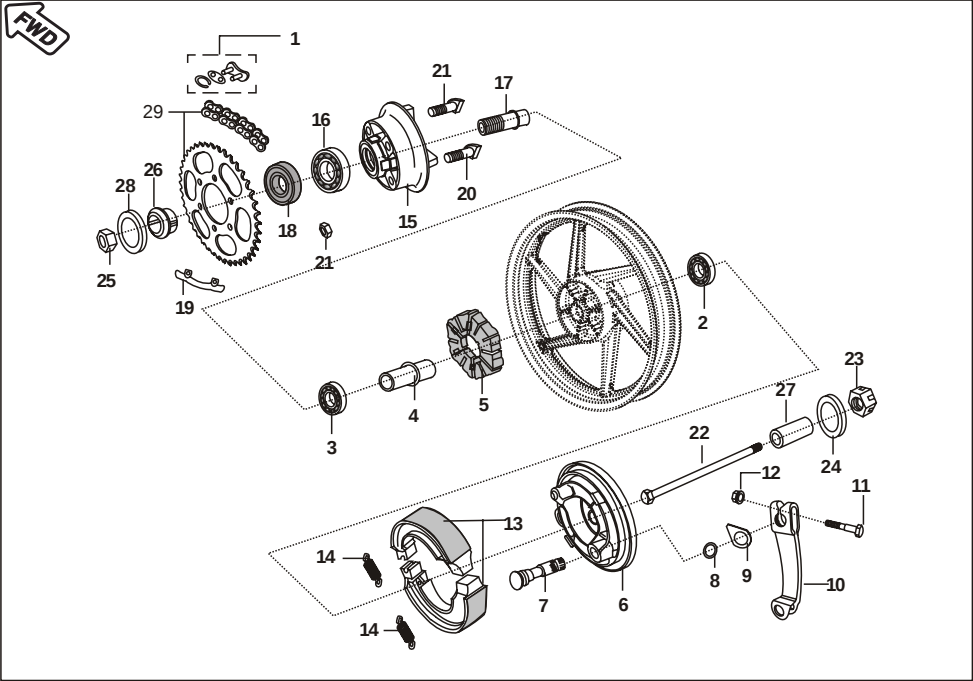


No.	Part No.	Description	34A	34B	Remarks
			Drum Br.	Disc Br.	
16	39 2240 20	Bearing ball	1	1	
17	DJ 1510 33	Sleeve	1	1	
18	30 1510 82	Seal oil	1	1	
19	30 1510 81	Lock washer	3	3	
20	DJ 1510 48	'D' Bolt	6	6	
21	39 0694 15	Hex. lock nut	6	6	
22	DJ 1510 32	Axle	1	1	
23	DH 1710 19	'U' nut	1	1	
24	39 2567 11	Plain washer	1	1	
25	39 0801 15	Nut	1	1	
26	DJ 1510 35	Collar	1	1	
27	DX 1510 22	Collar	1	1	
28	39 2566 11	Plain washer	1	1	
29	36 JN00 06	Chain sprocket kit	--	1	
	36 DS40 07	Chain sprocket kit	1	--	

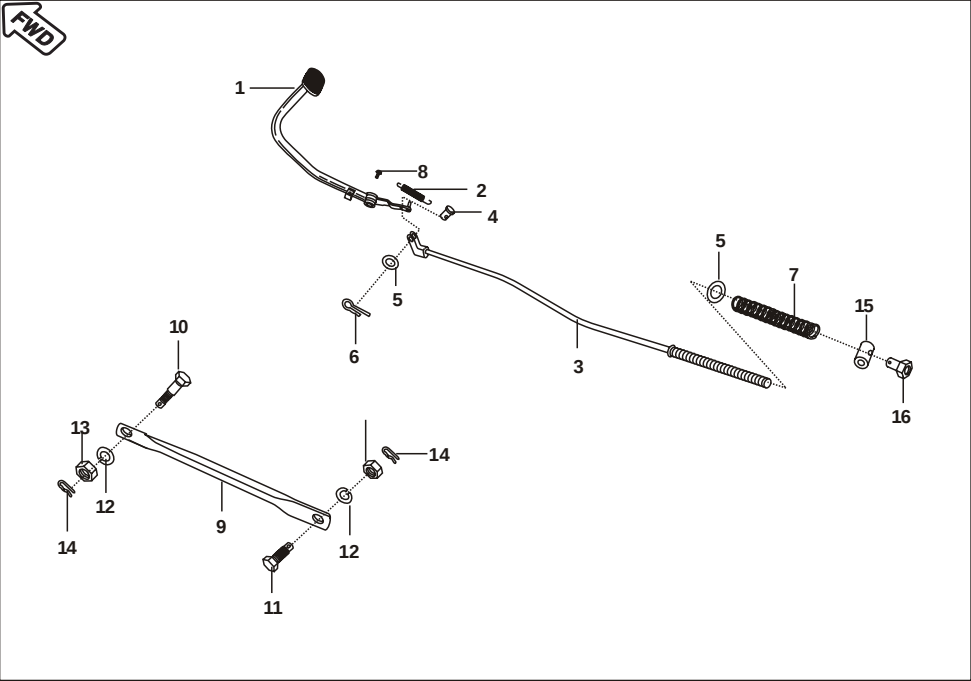


No.	Part No.	Description	35A	35B	Remarks
			Drum Br.	Disc Br.	
1	DS 1910 02	Brake Pedal	1	1	
2	DS 1910 11	Brake Pedal Spring	1	1	
3	DS 1910 03	Rod brake	1	1	
4	30 1910 38	Pin	1	1	
5	39 0219 11	Plain washer	2	2	
6	39 0808 08	Split pin	1	1	
7	30 1910 35	Spring	1	1	
8	39 1680 04	Hex. Bolt	1	1	
9	DS 1510 25	Rod torque	1	1	
10	DH 1510 29	Hex. bolt	1	1	
11	30 1510 95	Hex. bolt	1	1	
12	39 0789 12	Spring washer	2	2	
13	39 0694 15	Nut hex.	2	2	
14	39 0807 08	Pin snap	2	2	
15	15 1910 26	Pin	1	1	
16	30 1910 36	Brake Adjuster Nut	1	1	

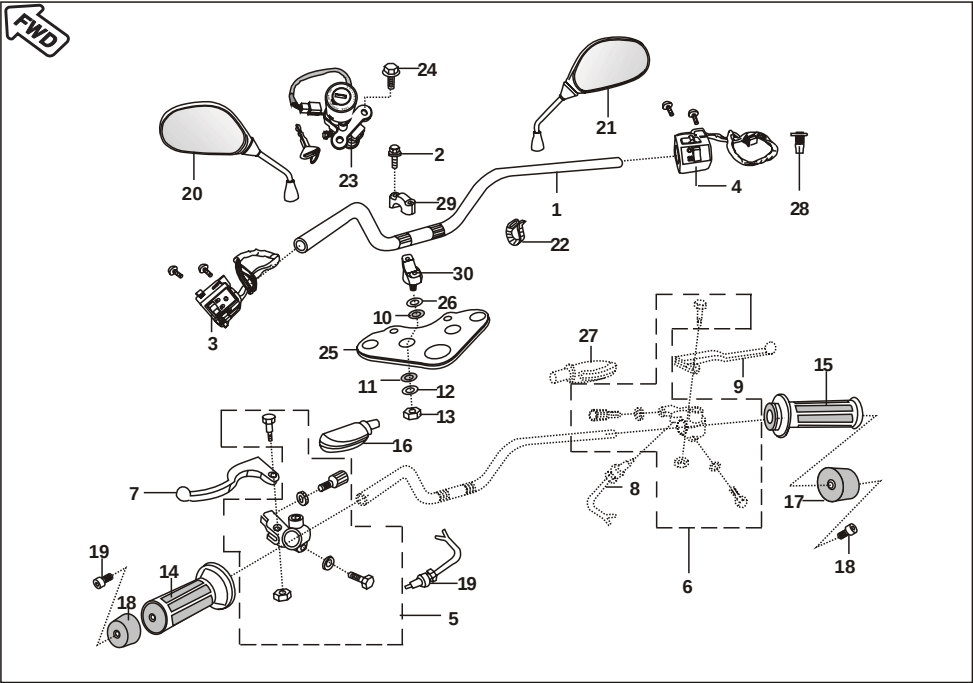


No.	Part No.	Description	36A	36B	Remarks
			Drum Br.	Disc Br.	
1	DS 1810 44	Handle	1	1	
2	39 1714 04	Flanged bolt	4	4	
3	DJ 2010 24	Control switch LH	1	1	
4	DS 2010 28	Control switch RH	1	1	
	DS 2010 33	Control switch RH	1	--	For KS
5	DJ 1910 53	Holder Assly. LH	1	1	
	DS 1910 36	Holder Assly. LH	1	--	For KS
6	DS 1910 38	Holder Assly. RH	1	1	
7	DJ 1910 55	Lever grip Left	1	1	
8	29 2011 17	Front Brake Switch	1	1	
9	DD 1911 42	Lever Brake RH	1	1	
10	DS 1810 08	Damper handle upper	2	2	
11	DS 1810 09	Damper handle lower	2	2	
12	DS 1810 10	Washer handle lower	2	2	
13	39 0422 15	Nylock Nut	2	2	
14	DS 1910 15	Grip LH	1	1	
15	DS 1910 16	Grip Assly. RH	1	1	

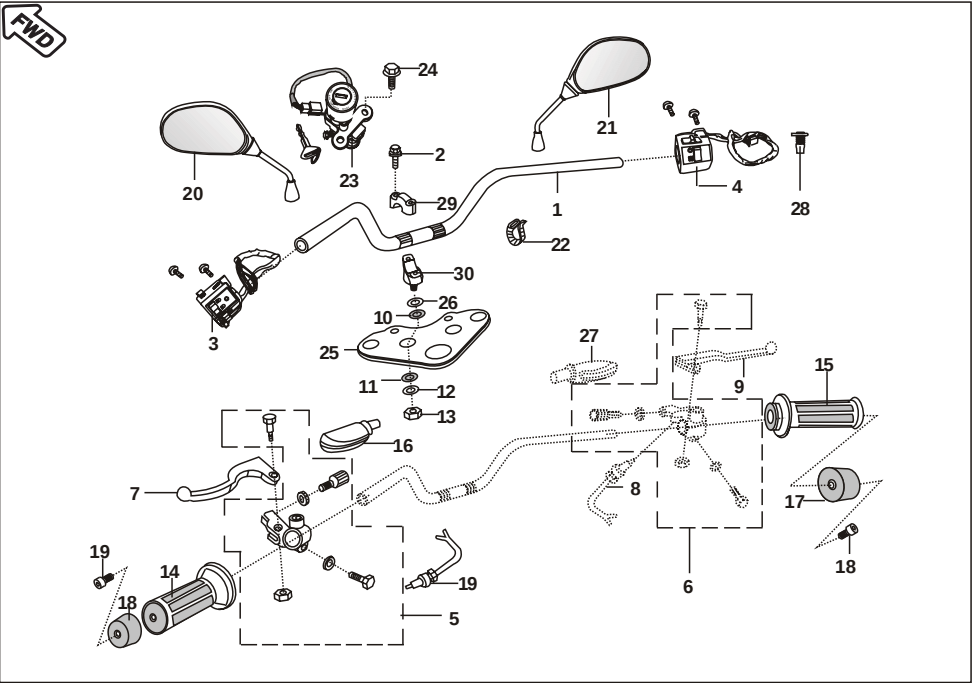


No.	Part No.	Description	36A	36B	Remarks
			Drum Br.	Disc Br.	
16	DS 1910 52	Boot for lever LH	1	1	
17	DH 1810 22	Handle bar weight	2	2	
18	39 2427 04	Hex. soc.hd. cap screw	2	2	
19	DJ 2010 35	Clutch Switch	1	1	
20	DJ 2210 03	Mirror assly. LH	1	1	
21	DJ 2210 04	Mirror assly. RH	1	1	
22	30 1910 48	Band	2	2	
23	DS 1810 22	Switch assly.ignition	1	1	
24	39 1943 04	Flange bolt	2	2	
25	DS 1810 05	Holder Fork Upper	1	1	
26	DS 1810 07	Washer handle Upper	2	2	
27	DS 1910 18	Boot For Lever RH	1	1	
28	DU 2010 46	Plunger with Spring	1	1	
29	DS 1810 06	Holder Up	1	1	Part of Ride Control Switch
30	DS 1810 19	Holder lower	1	1	

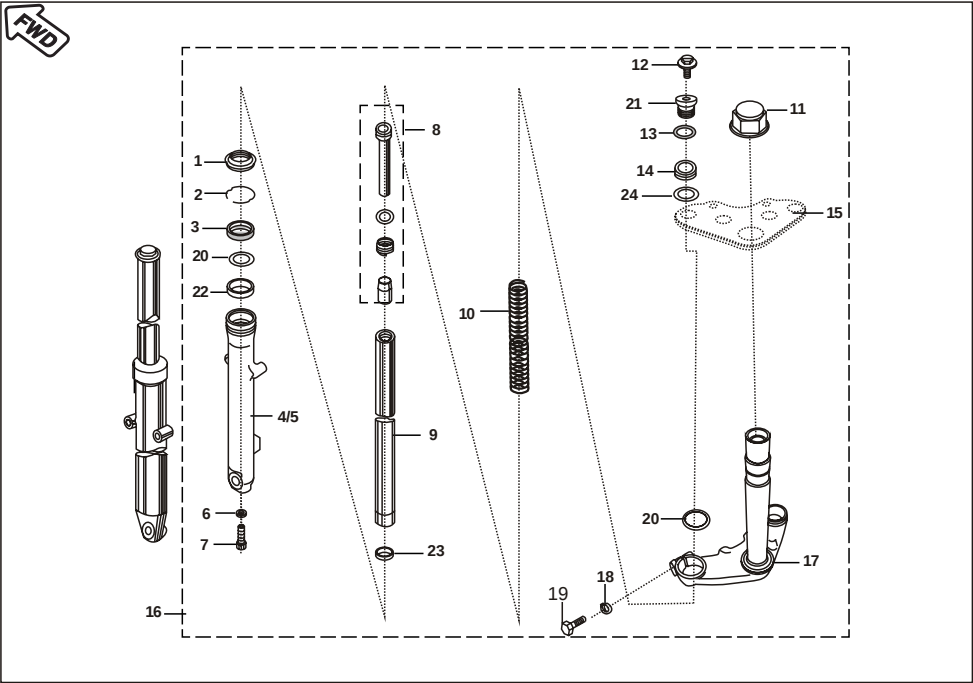


No.	Part No.	Description	37A	37B	Remarks
			Drum Br.	Disc Br.	
1	DJ 1810 89	Seal dust	2	2	
2	DJ 1810 88	Ring snap	2	2	
3	DJ 1810 87	Oil seal	2	2	
4	JN 1510 04	Outer Tube LH	--	1	
5	DS 1811 20	Outer Tube LH	1	--	
	JN 1510 06	Outer Tube RH	--	1	
	DS 1811 21	Outer Tube RH	1	--	
6	31 1811 05	Gasket	2	2	
7	31 1811 06	Bolt	2	2	
8	DS 1810 77	Cylinder comp. fork	2	2	
9	DS 1810 83	Pipe comp. suspension inner	2	2	
10	DS 1810 84	Spring front fork	2	2	
11	DS 1810 15	Cap Nut Fork	1	1	
12	DS 1810 75	Bolt fork	2	2	
13	31 1811 02	O ring	2	2	
14	DS 1810 85	Seat fork spring	2	2	
15	DS 1810 05	Holder fork upper	1	1	

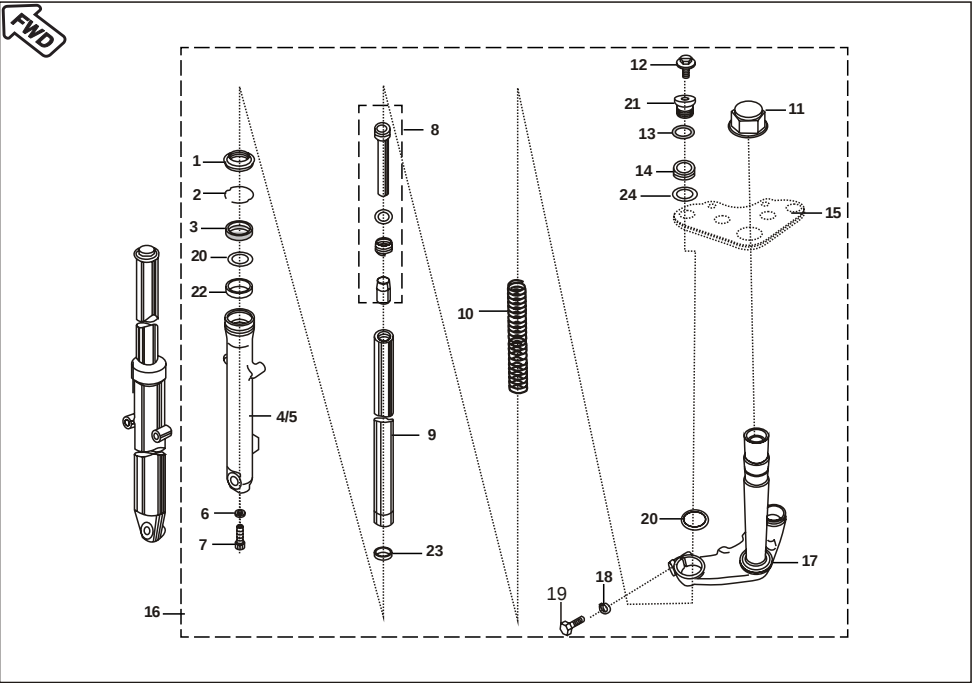


No.	Part No.	Description	37A	37B	Remarks
			Drum Br.	Disc Br.	
16	JN 1510 02	Fork front	--	1	
	DS 1811 17	Fork front	1	--	
17	DS 1810 20	Holder fork under Assly.	1	1	
18	39 0789 12	Spring washer	2	2	
19	39 1813 04	Bolt	2	2	
20	DS 1810 72	Guide Bush Washer	2	2	
21	DS 1810 12	Bolt Fork	2	2	
22	DS 1810 70	Guide Bush	2	2	
23	DS 1810 71	Slide Bush	2	2	
24	DS 1810 86	Plain Washer	2	2	

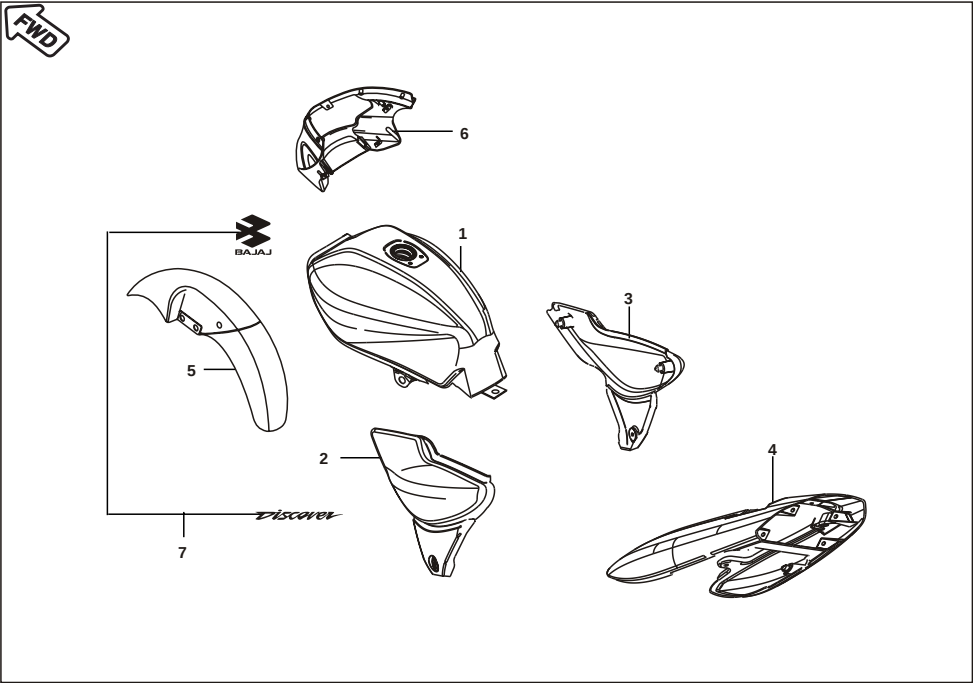


No.	Part No.	Description	38A	38B	Remarks
			Drum Br.	Disc Br.	
1	JN 7104 3B	Fuel Tank with Decal	1	1	Black with Blue
	JN 7104 3C	Fuel Tank with Decal	1	1	Black with Red
	DS 7134 3F	Fuel Tank with Decal	1	--	Red with Red
	DS 7134 3E	Fuel Tank with Decal	1	--	Blue with Blue
2	JN 7303 3B	Side cover LH	1	1	Black with Blue
	JN 7303 3C	Side cover LH	1	1	Black with Red
	DS 7413 3F	Side cover LH	1	--	Red with Red
	DS 7413 3E	Side cover LH	1	--	Blue with Blue
3	JN 7304 3B	Side cover RH	1	1	Black with Blue
	JN 7304 3C	Side cover RH	1	1	Black with Red
	DS 7414 3F	Side cover RH	1	--	Red with Red
	DS 7414 3E	Side cover RH	1	--	Blue with Blue
4	JN 7302 3B	Seat Cowl Assly.	1	1	Black with Blue
	JN 7302 3C	Seat Cowl Assly.	1	1	Black with Red
	DS 7422 3F	Seat Cowl Assly.	1	--	Red with Red
	DS 7422 3E	Seat Cowl Assly.	1	--	Blue with Blue

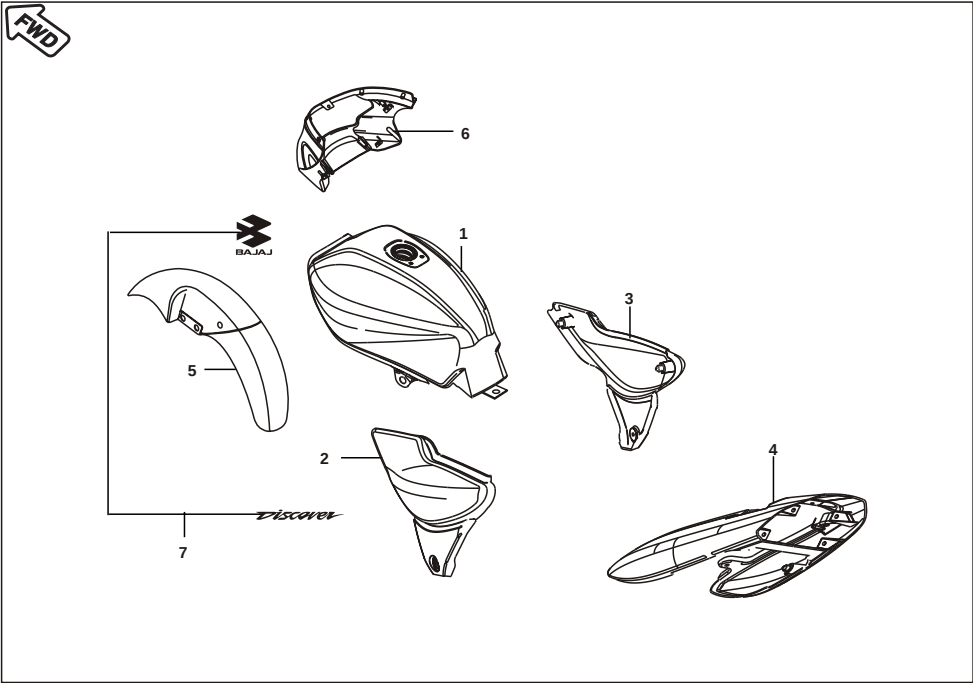


No.	Part No.	Description	38A	38B	Remarks
			Drum Br.	Disc Br.	
5	DS 7302 X3	Fender Front	1	1	Black with Blue
	DS 7302 X4	Fender Front	1	1	Black with Red
	DS 7307 X4	Fender Front	1	--	Red with Red
	DS 7307 X6	Fender Front	1	--	Blue with Blue
6	JN 7301 3B	Fairing	1	1	Black with Blue
	JN 7301 3C	Fairing	1	1	Black with Red
	DS 7411 3F	Fairing	1	--	Red with Red
	DS 7411 3E	Fairing	1	--	Blue with Blue
7	36 JN00 02	Decal Set	1	1	Black with Blue
	36 JN00 04	Decal Set	1	1	Black with Red

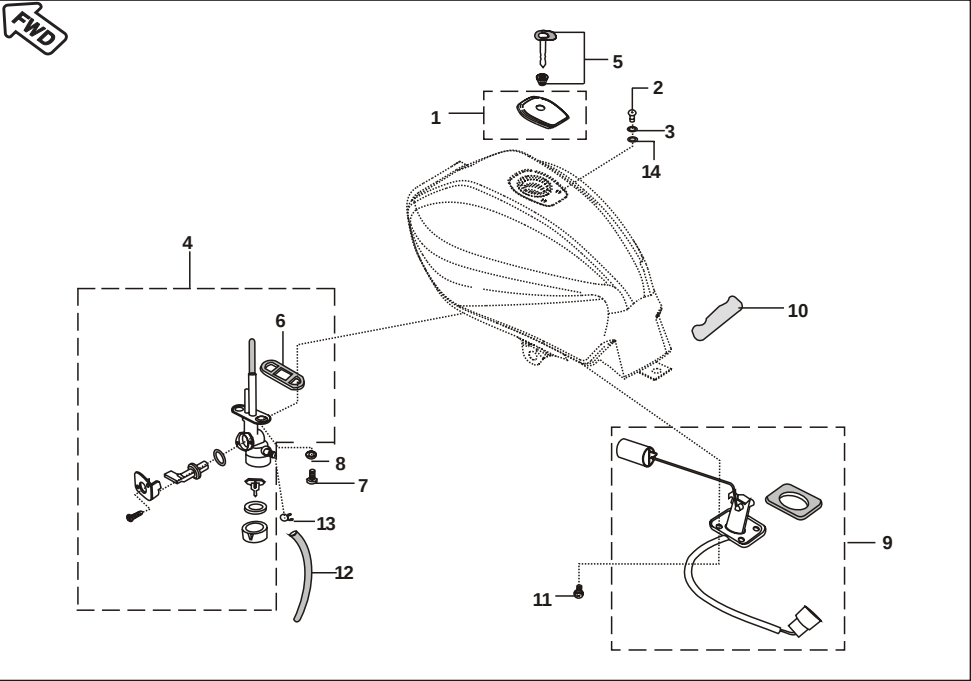


No.	Part No.	Description	39A	39B	Remarks
			Drum Br.	Disc Br.	
1	DS 1410 09	Cap Assly. Tank	1	1	
2	39 0761 01	Screw Pan Cross	2	2	
3	39 2179 24	Washer	2	2	
4	DS 1410 18	Fuel Tap Assly	1	1	
5	DS 1810 36	3 In 1 Lock set With Key	1	1	
6	30 1410 39	Packing	1	1	
7	DD 1410 22	Bolt flanged	2	2	
8	39 0740 11	Washer (Non-Metallic)	2	2	
9	DS 2010 55	Gauge Fuel	1	1	
10	DS 1410 13	Seat Tape	1	1	
11	39 1972 15	Bolt	4	4	
12	DS 1410 14	Tube fuel	1	1	
13	30 1410 15	Pipe clip	2	2	
14	39 2758 21	'O' Ring	2	2	

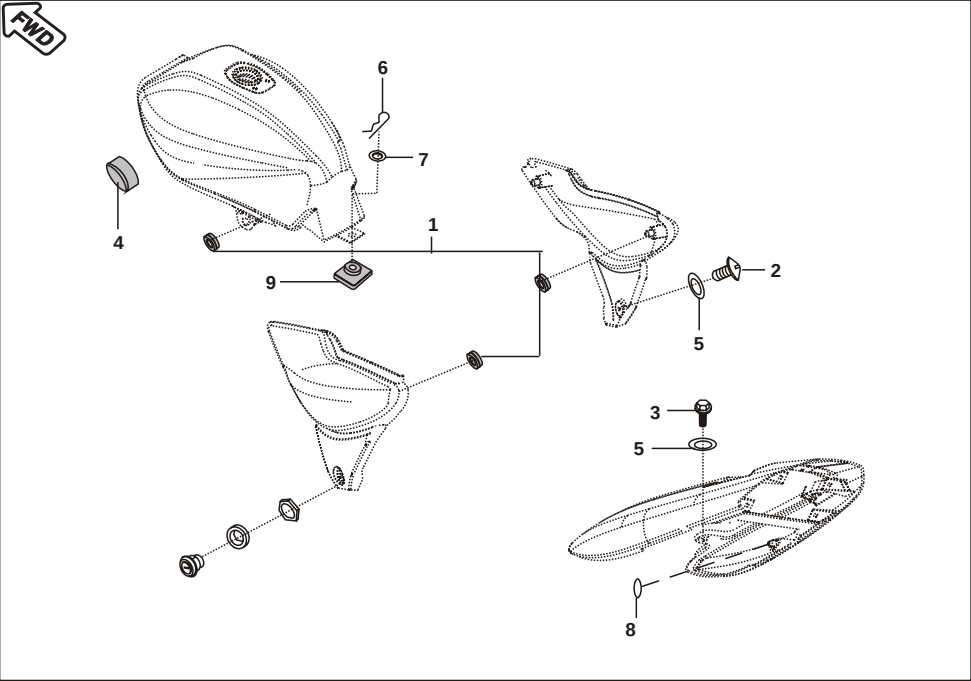


No.	Part No.	Description	40A	40B	Remarks
			Drum Br.	Disc Br.	
1	36 DS14 01	Grommet Kit for Side Cover	1	1	Ref. Page No. 67
2	DG 1611 21	Screw	1	1	
3	39 1943 04	Flanged Bolt	2	2	
4	DS 1810 36	Lock Set (3 in 1) with Key	1	1	N.I.
5	JN 1710 00	Damper Front	1	1	
6	39 1789 24	Washer Nylon	3	3	
7	39 0983 08	Pin Snap	1	1	
8	39 1054 11	Plain Washer	1	1	
9	DS 1610 82	Grommet Side Cover	2	2	
10	DJ 1410 08	Damper	1	1	

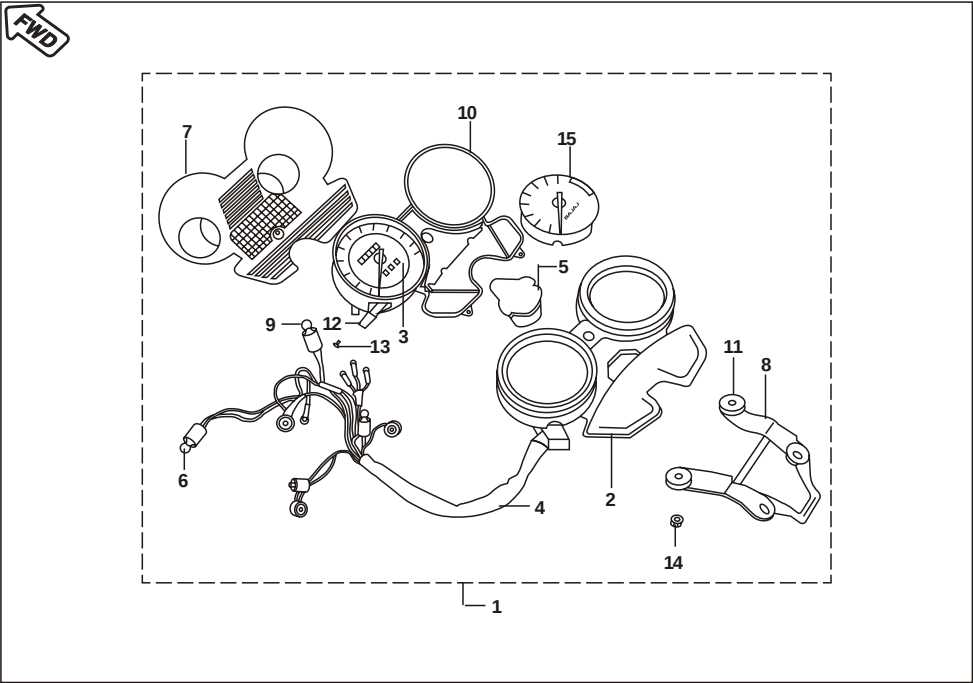


No.	Part No.	Description	41A	41B	Remarks
			Drum Br.	Disc Br.	
1	DS 1910 39	Meter Assly	1	--	For Pricol
	DS 1910 14	Meter Assly	1	--	For VDO
	DS 1910 49	Meter Assly	--	1	For Pricol
	DS 1910 05	Meter Assly	--	1	For VDO
	DS 1910 22	Cover Meter case Upper	1	1	For Pricol
2	DS 1910 40	Cover Meter case upper	1	1	For Pricol
	DS 1910 22	Cover Meter case Upper	1	1	For VDO
3	DS 1910 41	Speedometer	1	1	For Pricol
	DS 1910 23	Speedometer	1	1	For VDO
4	DS 2010 34	Harness Speedo Console	1	1	
5	DS 1910 42	Meter Fuel	1	--	For Pricol
	DS 1910 26	Meter Fuel	1	--	For VDO
	DS 1910 50	Meter Fuel	--	1	For Pricol
	DS 1910 24	Meter Fuel	--	1	For VDO
6	GH 2010 12	Lamp 12 V-1.7W	4	4	
7	DS 1910 43	Cover meter lower	1	1	For Pricol
	DS 1910 27	Cover meter lower	1	1	For VDO
8	DS 1910 44	Bracket meter	1	1	For Pricol
	DS 1910 28	Bracket meter	1	1	For VDO

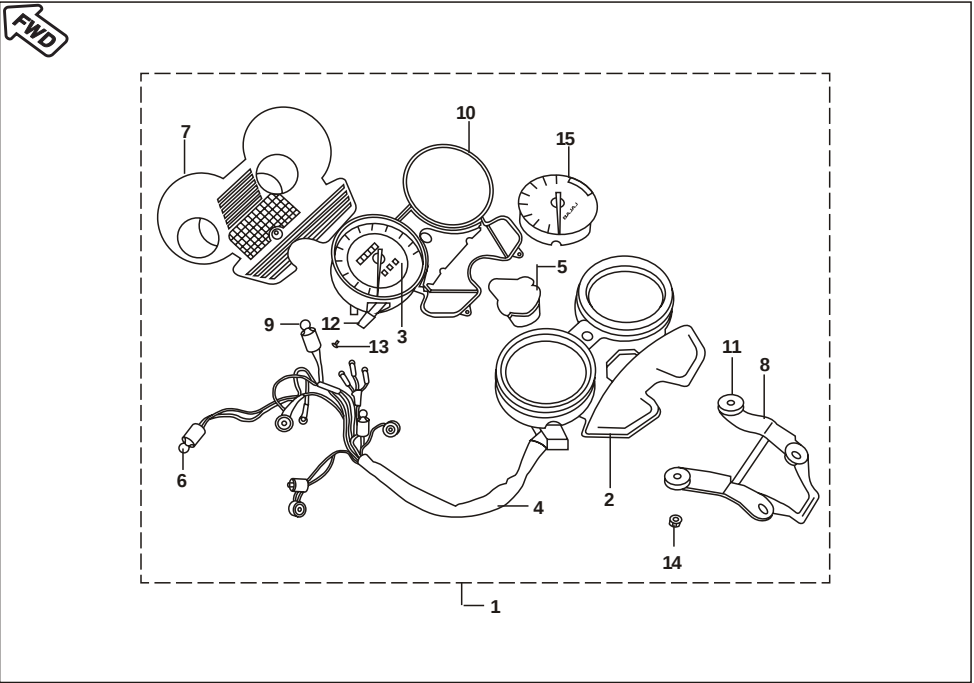


No.	Part No.	Description	41A	41B	Remarks
			Drum Br.	Disc Br.	
9	DG 2010 40	Lamp 12V - 3.4W	2	2	For Speedometer
10	DS 1910 45	Cover (white)	1	1	For Pricol
	DS 1910 29	Cover (White)	1	1	For VDO
11	DS 1910 30	Grommet special	2	2	
12	DS 1910 31	Knob for Tripmeter	1	1	
13	DS 1910 32	Screw for 'Tripmeter Knob'	1	1	
14	39 0798 15	Nut	2	2	
15	DS 1910 50	Tachometer	1	1	For Pricol
	DS 1910 24	Tachometer	1	1	For VDO

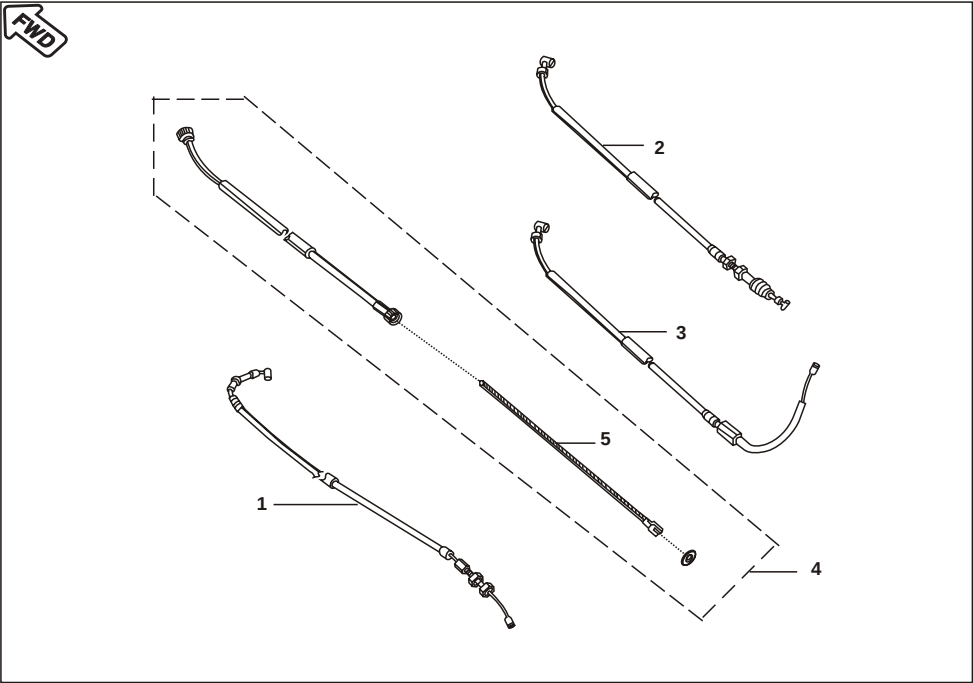


No.	Part No.	Description	42A	42B	Remarks
			Drum Br.	Disc Br.	
1	DS 1910 12	Cable Accelerator	1	1	
2	DS 1910 01	Cable Clutch	1	1	
3	DS 1910 13	Cable Starter (Choke)	1	1	
4	DS 1910 53	Cable Speedometer	1	1	
5	DS 1910 56	Inner cable Speedometer	1	1	

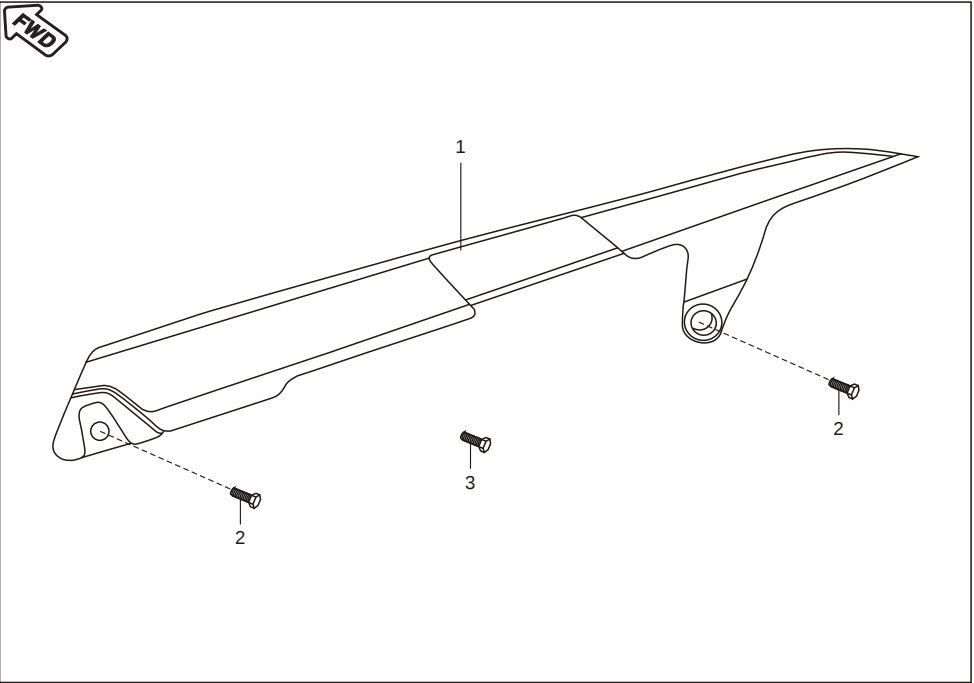


No.	Part No.	Description	43A	43B	Remarks
			Drum Br.	Disc Br.	
1	JN 1812 00	Chain Cover	--	1	
	JN 1812 04	Chain Cover	--	1	For 3 point mtg.
2	JN 1812 02	Stepped bolt	--	2	
3	39 1942 04	Bolt	--	1	For 3 point mtg.

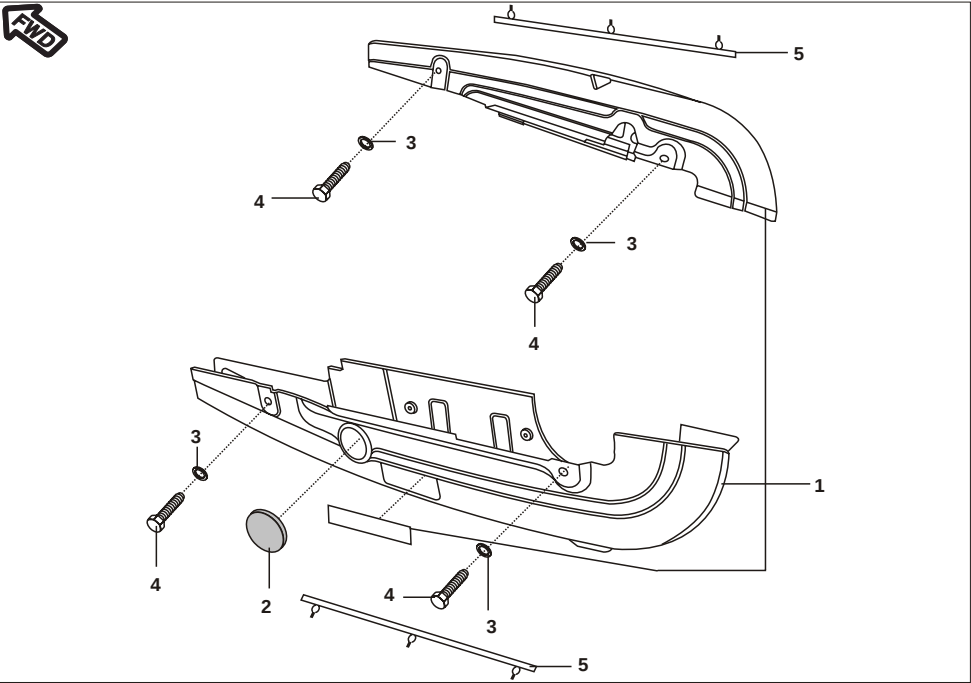


No.	Part No.	Description	43A	43B	Remarks
			Drum Br.	Disc Br.	
1	36 DS40 20	Case Chain Assly Kit	1	--	Front & Rear side Mtg.
2	15 1610 69	Rubber Cap	1	--	
3	39 0711 11	Plain Washer	4	--	
4	39 0897 04	Bolt	4	--	
5	DS 1611 64	Rubber Strip	2	--	

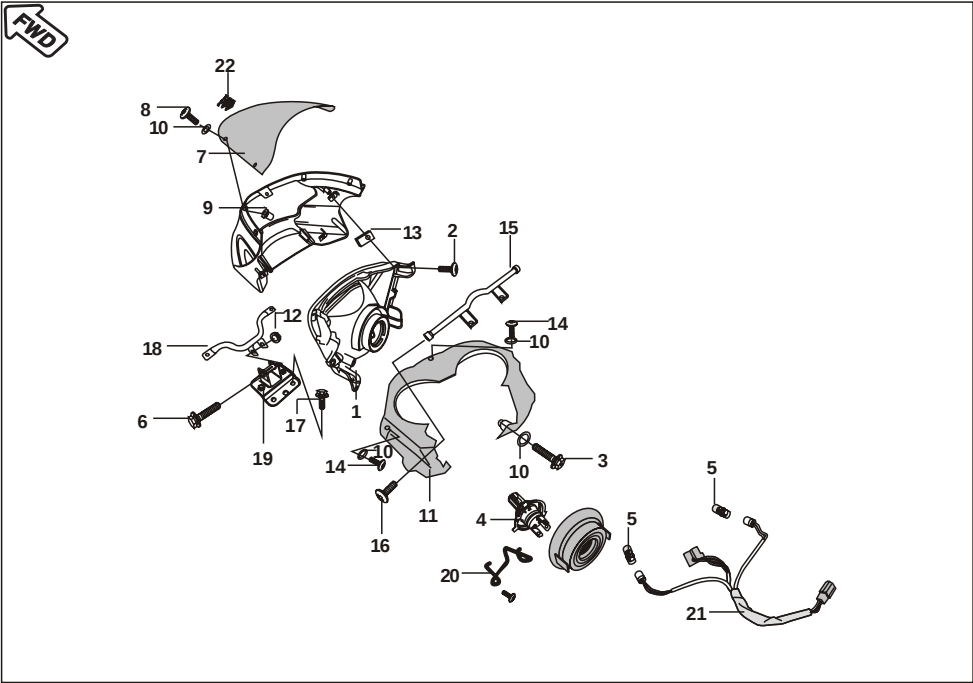


No.	Part No.	Description	44A	44B	Remarks
			Drum Br.	Disc Br.	
1	DS 2010 35	Head Lamp Housing with Lens	1	1	
2	39 1778 02	Self Tapping Screw	4	4	
3	39 0716 01	Pan Head Screw	2	2	
4	CL 2010 23	Lamp 12V 35/35W-HS1	1	1	
5	DJ 2010 72	Lamp 12V 5W	2	2	
6	39 1961 04	Hex. Flange Bolt	1	1	
7	DS 1810 66	Wind Shield	1	1	
8	DF 1810 98	Screw SS	4	4	
9	DL 1810 10	Well Nut	4	4	
10	39 2141 24	Non Metallic Washer	9	9	
11	DS 1810 31	Flap Cowling	1	1	
12	39 0817 15	Hex. Flange Nut	1	1	
13	35 1610 60	Clip Nut	5	5	
14	39 1907 01	Screw	3	3	
15	DS 1810 45	Fairing mounting upper bracket	1	1	

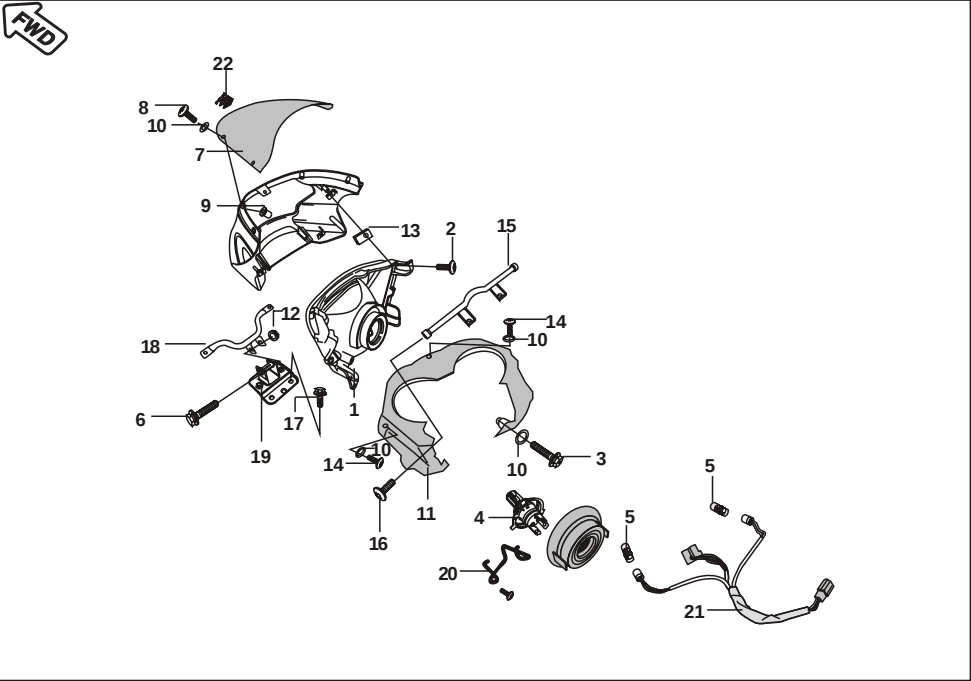


No.	Part No.	Description	44A	44B	Remarks
			Drum Br.	Disc Br.	
16	DG 1611 21	Screw	2	2	On Wind shield
17	39 1943 04	Flange Bolt	2	2	
18	DS 1810 29	Bracket Cowling	1	1	
19	DS 1810 27	Number Plate Bracket	1	1	
20	DS 2010 36	Head Lamp Bulb Clip	1	1	
21	DS 2010 39	Head lamp Harness Branch	1	1	
22	DS 1810 69	'B' Monogram	1	1	

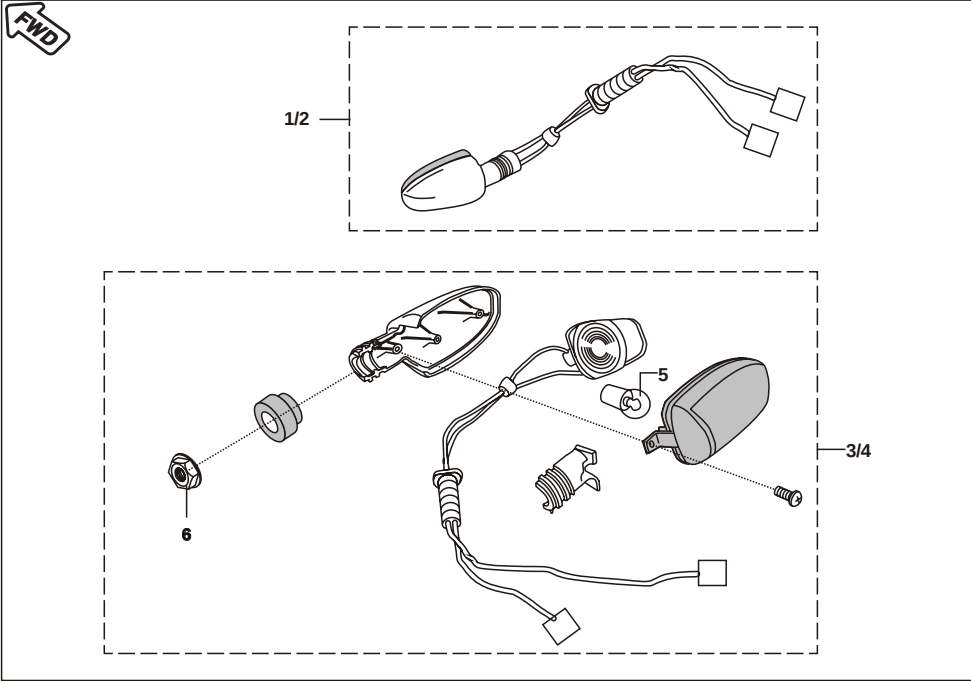


No.	Part No.	Description	45A	45B	Remarks
			Drum Br.	Disc Br.	
1	DJ 2011 48	Indicator Assly FR. LH	1	1	
2	DJ 2011 49	Indicator Assly FR. RH	1	1	
3	DJ 2011 46	Indicator Assly RR. LH	1	1	
4	DJ 2011 47	Indicator Assly RR. RH	1	1	
5	GH 2010 12	Lamp 12 V - 10W	4	4	
6	39 1970 15	Hex. nut with flange	4	4	

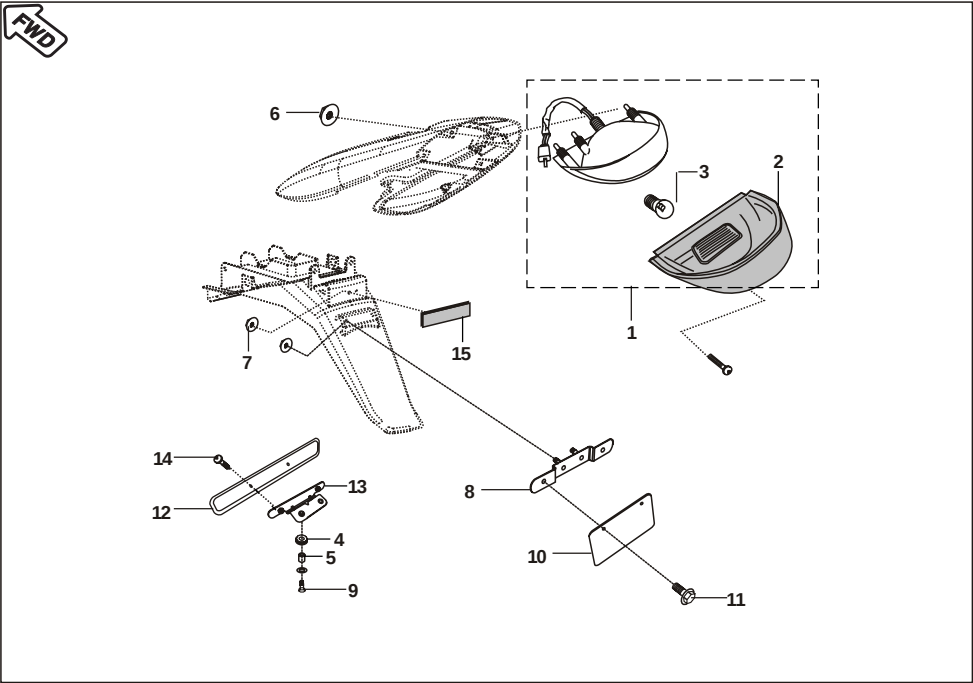


No.	Part No.	Description	46A	46B	Remarks
			Drum Br.	Disc Br.	
1	DS 2010 08	Tail light with Lamp	1	1	
2	DS 2010 09	Lens tail light	1	1	
3	30 2010 06	Lamp 12 V 21/5 W	1	1	
4	DD 2010 11	Damper	2	2	
5	DJ 1810 83	Collar	2	2	
6	39 0817 15	Nut/Flange	4	4	
7	39 1972 15	Flange Nut	1	1	
8	DJ 1610 72	Bracket Rear No. Plate	1	1	
9	39 1062 04	Bolt flange	2	2	
10	DP 1611 45	Number plate Rear	1	1	
11	39 1943 04	Hex Flanged Bolt	2	2	
12	DP 1611 44	Number plate front	1	1	
13	DS 1810 26	Front No. Plate Mounting Bkt.	1	1	
14	39 1783 01	Truss Screw (For Front No. Plate)	2	2	
15	DS 2010 15	Reflector Reflex	1	1	
16	39 1972 15	Flanged Nut	2	2	
17	JN 1510 09	Hose Clamp	--	1	

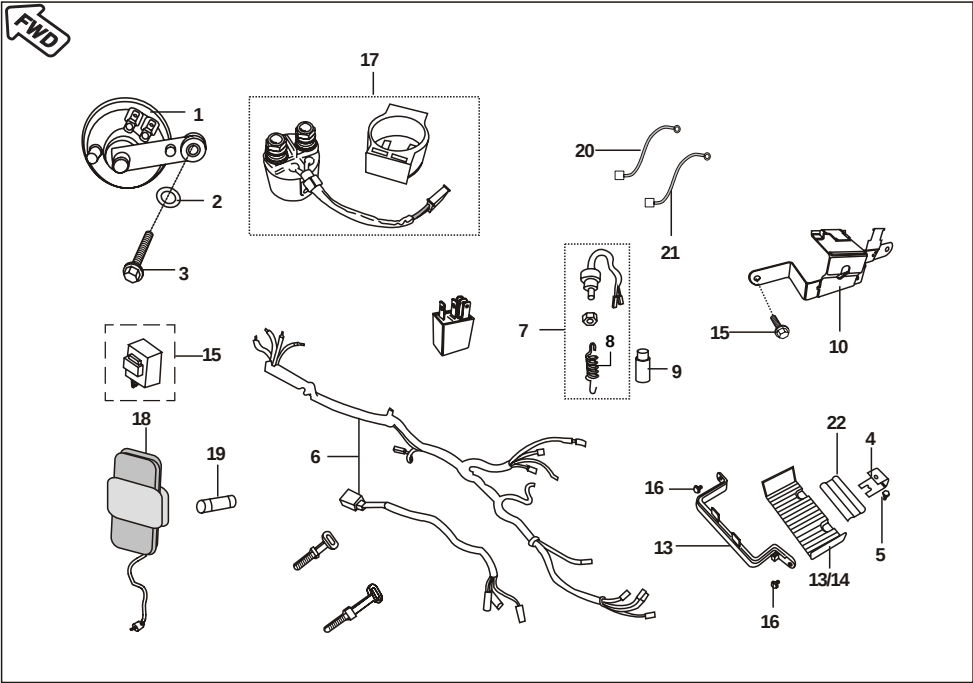


No.	Part No.	Description	47A	47B	Remarks
			Drum Br.	Disc Br.	
1	DS 2010 16	Horn LH with Stay	1	1	
2	39 1507 11	Plain Washer	1	1	
3	39 1956 04	Flange Bolt	1	1	
4	DS 1611 23	Bracket Battery Arrestor	1	1	
5	39 1942 04	Flanged Bolt	1	1	
6	JN 4022 00	Wiring Harness	1	1	
7	DS 2010 57	Wiring Harness	1	--	For KS
8	DS 2010 29	Rear Brake Switch	1	1	
9	DS 1910 07	Spring Brake Switch	1	1	
10	DH 2010 19	Grommet Rear Brake Switch	1	1	
11	DS 1611 06	Band Battery II	1	1	
12	DS 2010 82	Battery 5AH	1	1	N.I. & N.S.
13	DS 1611 18	Base Battery II	1	1	N.I.
14	DS 1611 05	Band Battery I	1	1	
15	DS 1611 16	Base Battery I	1	1	
16	DS 2010 25	Assly DC flasher / damper	1	1	

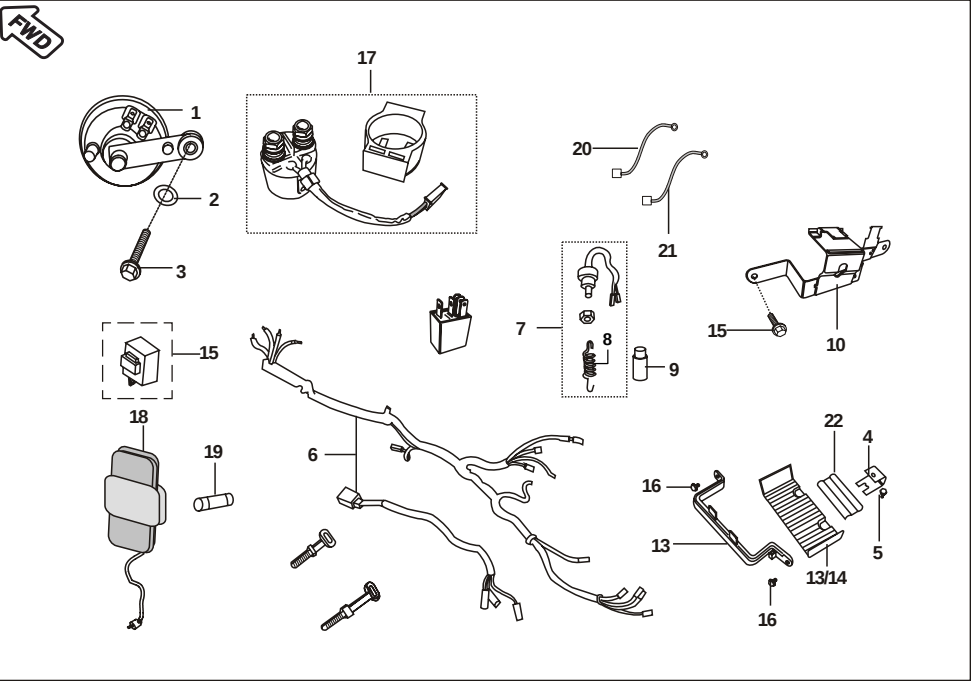

No.	Part No.	Description	47A	47B	Remarks
			Drum Br.	Disc Br.	
16	39 2208 04	Mushroom head Screw	2	2	
17	AP 2010 29	Starter Relay /	1	1	
18	30 2011 04	Fuse box Assly.	1	1	
19	30 2010 85	Fuse	1	1	
20	DS 2010 22	Cable assly. (Battery to St.Relay)	1	1	
21	DS 2010 23	Cable assly. (Battery to Earth)	1	1	
22	DS 1611 04	Battery Arrestor	1	1	

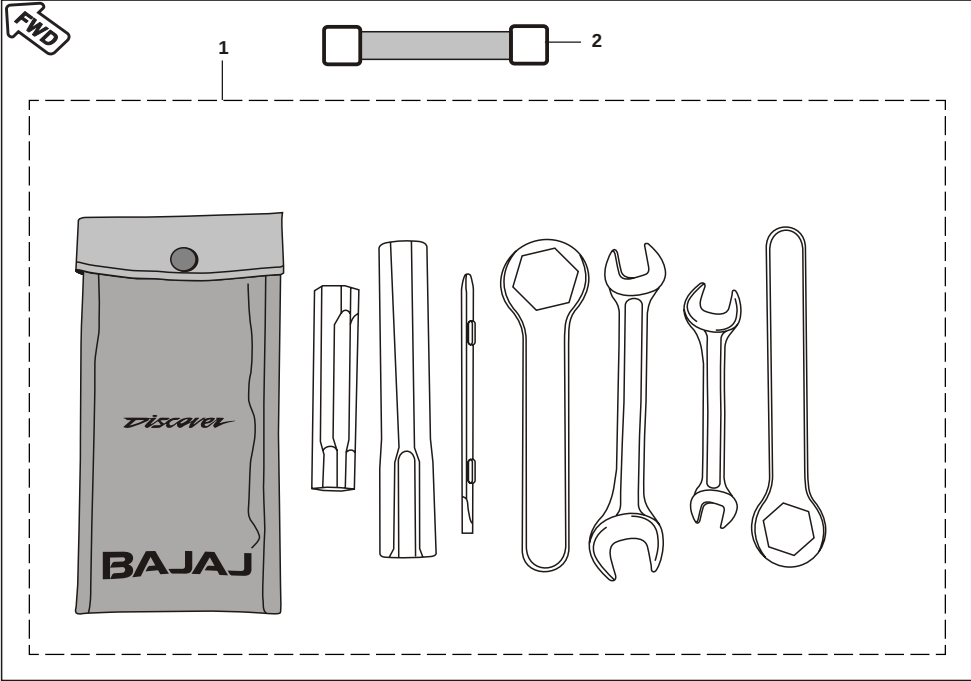

No.	Part No.	Description	48A	48B	Remarks
			Drum Br.	Disc Br.	
1	DS 2210 02	Tool Kit	1	1	
*		Tool Driver	1	1	
*		Tool Wrench (Box 16 mm)	1	1	
*		Tool Wrench (10 X 13)	1	1	
*		Tool Wrench (14 X 17)	1	1	
*		Tool wrench (27 A/F)	1	1	
*		Tool wrench (22 A/F)	1	1	
*		Extension Rod	1	1	
*		Tool Bag	1	1	
2	DP 2210 24	Band Tool Kit	1	1	

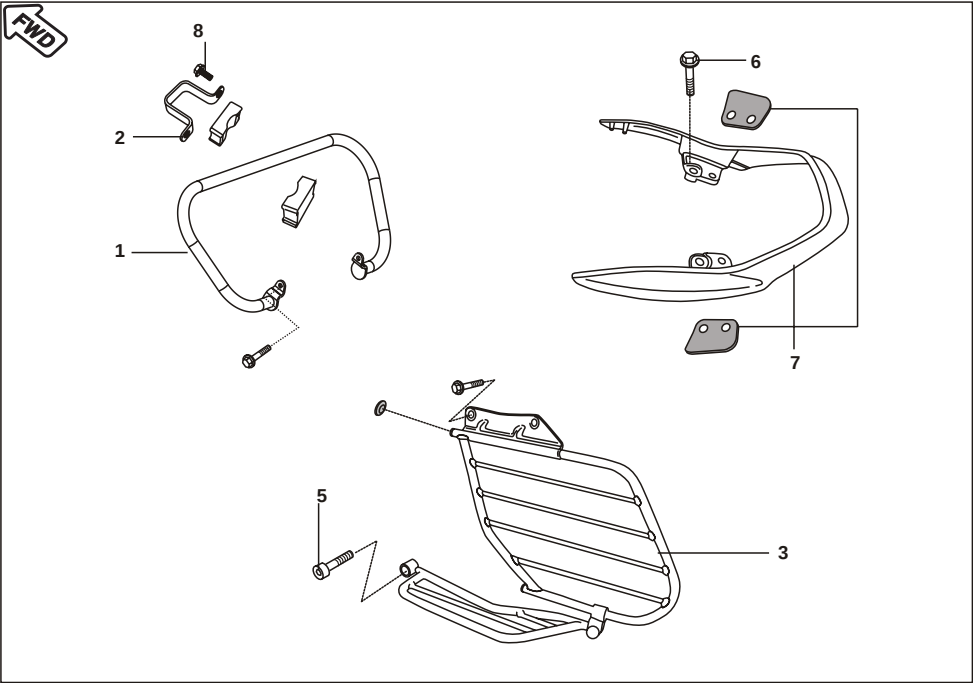

No.	Part No.	Description	49A	49B	Remarks
			Drum Br.	Disc Br.	
1	JN 2312 02	Leg Guard kit	1	1	with cover
2	DS 1610 89	Leg guard Bracket	2	2	
3	JN 2312 11	Sari Guard	--	1	
	JN 2312 00	Sari Guard	1	--	
4	39 1714 04	Flange Bolt	2	2	
5	39 2495 04	Soc. Head Bolt	1	1	For Mounting Leg Guard
6	39 1681 04	Flange Bolt	4	4	
7	DS 1611 88	Grab Handle with foam	1	1	
8	39 2214 04	Bolt	4	4	

Sr. No.	Kit Part No.	Kit Description	Consisting of Following Parts		
			Part No.	Description	Qty./Kit
1	36DS1001	Cyl.Head O Ring Kit	39239121 39128321	O Ring (Cover tappet) O ring	2 2
2	36DS1002	Valve Kit	DS101023 DS101024	Valve Intake Valve Exhaust	1 1
3	36DS1003	Valve Repair Kit	DS101083 DS101110 DS101111 DH101026	Retainer valve spring Spring valve inner Spring valve outer Seat valve spring	2 2 2 2
4	36DS1004	Guide Chain Kit	DS101012 DS101011	Guide chain (Tight) Guide Chain (slack)	1 1
5	36DJ4008	Ring Set Piston	DH101666 DH101667 DH101669	Ring piston top Ring piston second Ring piston oil	1 1 1
6	36DS1007	Boss Kick Set	DH101185 DH101068 DS101208 DH101320 39204501	Spring Kick Starter Arm Ball steel Base kick lever Hex. bolt with flange(N.I.) C'sunk Head Screw	1 1 1 1 1
7	36DS1201	Carb. Vaccum Piston Kit	DS121055 DS121057 DS121058	Vaccum Piston Comp. Diaphragm Diaphragm Plate	1 1 1
8	JN581208	Jet Holder Kit	DS121071 DS121069 DS121067	Jet Jet Comp. Needle Jet Holder	1 1 1
9	JN581207	Idling Screw Set	DS121097 DS121094 DS121095 DS121096	Coil Spring (CO) Adjust Screw Adjust Holder Plain Washer	1 1 1 1
10	36DS2101	Seat Damper Kit	DS211004 DS211005	Damper Seat - I Damper Seat - II	7 2
11	36DS1601	Eng. Mtg.Plate Set	DS161031 DS161128 DS161056	Bkt. Engine Hanger LH Bkt. Engine Hanger RH Bkt. RH eng.rear Mounting II	1 1 2
12	36DS1602	Eng. Mtg.Bkt. Set With Silent Bush	DS161130 DS161131	Bkt. LH eng.mtg.front Assly. Bkt. RH eng.mtg.front Assly.	1 1
13	36DS1802	Bearing cone kit	DH181025 DH181026 DH181024	Bearing cone Bearing race Upper bearing race	1 1 1
14	36DS1801	Holder Handle Set	DS181019 DS181006	Holder handle Holder handle	2 2
15	36DS1401	Grommet Kit-Side Cover	DS141012 DS161082	Grommet side cover Front Grommet side cover Rear	2 2

[illegible][illegible]

Part No.	Figure No.	Page No.

Part No.	Figure No.	Page No.

Part No.	Figure No.	Page No.

Part No.	Figure No.	Page No.

Part No.	Figure No.	Page No.

Part No.	Figure No.	Page No.

Part No.	Figure No.	Page No.

Part No.	Figure No.	Page No.

Part No.	Figure No.	Page No.

Part No.	Figure No.	Page No.

Part No.	Figure No.	Page No.

Part No.	Figure No.	Page No.

Part No.	Figure No.	Page No.

Part No.	Figure No.	Page No.

Part No.	Figure No.	Page No.

Part No.	Figure No.	Page No.

Part No.	Figure No.	Page No.

Part No.	Figure No.	Page No.